

# Nokia N95 with Tpad

*Follow these simply settings to get your Nokia N95 to connect to the Tpad.*

**This Guide covers:**

- 1. Setting up your Nokia N95 with Tpad**
- 2. Using Tpad via your Wireless LAN with the Nokia N95**

## 1. Setting up your Nokia N95 with Tpad

Select [Menu](#) > [Tools](#) > [Settings](#) > [Connection](#) > [SIP settings](#) > [Options](#) > [Add new](#)



Set up your configuration as follows:



- Profile name — Enter our network name: **Tpad**
- Service profile — Select **IETF**
- Default access point — Select the Wireless access point to use for the Internet connection. E.g. **MyWLAN**
- Public user name — Enter your Tpad Number which you received from Tpad. For example if the user name is 1123444, then type the following: **1123444@sip.tpad.com**. (no need to enter sip: it added automatically)
- Use compression — Select **No**
- Registration — Select **Always**.

Select **Proxy server**, to enter the proxy server Settings for this SIP profile

- Proxy server address - Enter the following address: **sip.tpad.com**
- Realm - Enter the following address: **sip.tpad.com**
- User name - Enter your user name for example: **1123444**
- Password - Enter your Tpad password.
- Allow loose routing - Select: **Yes**
- Transport type - Select: **UDP**
- Port - Enter port number: **5060**

Select **Back** and Select **Registrar server** to enter the registrar Settings for this SIP profile



- Registrar serv. Addr.- Enter the following address: [sip.tpad.com](http://sip.tpad.com)
- Realm - Enter the following address: [sip.tpad.com](http://sip.tpad.com)
- User name - Enter your user name For example: 1123444
- Password - Enter you Tpad password.
- Transport type - Select:UDP
- Port - Enter port number: 5060

Select [Back](#) three times, Or Select [Menu](#) > [Tools](#) > [Settings](#) > [Connection](#)

Select [Internet Telephone settings](#) to set up your Tpad profile.



Name - Enter [Tpad](#) and Press OK

SIP profiles - Select [Tpad](#) and Press OK

## **2. Using Tpad via your Wireless LAN with the Nokia N95**

The following instruction will guide you how to register to Tpad network and initiate calls.

Select [Menu](#) > [Connect.](#) > [internet tel.](#)



The phone will register with Tpad using the default access point defined in the SIP profile or alternatively it will give you a list of available WLANs to choose from.



To make outgoing Tpad internet calls choose a name from your address book or just dial a number then

Press [option](#) > [call](#) > [internet call](#)



### Defining the your Wireless LAN access point

To search for wireless LANs available within range press:

Menu > Tools > WLAN Wiz

To create an internet access point in [Wireless LAN](#) select [Options](#) > [Define access point](#).

Define the following settings:

- [Connection name](#) — Type a descriptive name for the Internet access point, such as My WLAN Internet.
- [Data bearer](#) — Select [Wireless LAN](#).
- [WLAN network name](#) — To enter the service set identifier (SSID), that is, the name that identifies the specific wireless LAN, select [Enter manually](#). The name must be exactly the same as in your Wi-Fi router. If you do not enter the SSID here, you are not able to connect to networks that use a hidden SSID. To select the network from the wireless LANs in range, select [Search for network](#).
- [Network status](#) — Select [Hidden](#) if the network you are connecting to is hidden, or [Public](#) if it is not hidden.
- [WLAN network mode](#) — Select [Infrastructure](#). In this mode, devices can communicate with each other and with wired LAN devices through a wireless LAN access point.
- [WLAN security mode](#) — You must select the same security mode that is used in the wireless LAN access point. If you select [WEP](#) (wired equivalent privacy), [802.1x](#), or [WPA/WPA2](#) (Wi-Fi protected access), you must also configure the relevant additional settings.

If you selected [WEP](#) as the [WLAN security mode](#), define the following in [WLAN security settings](#):

- [WEP key in use](#) — Select which WEP key is used (#1-#4).
- [Authentication type](#) — Select [Open](#) or [Shared](#).
- [WEP key settings](#) — The remaining settings are defined here:
  - > [WEP encryption](#) — Choose 64bit or 128bit depending on what your Wireless router uses
  - > [WEP key format](#) — Choose Hexadecimal or Ascii depending on what your Wireless router uses
  - > [WEP key](#) — Enter the WEP key configured on your Wireless Router