

How To Use Your New EEZ-READ™

“Always take two readings”

1st Reading

Place your **EEZ-READ™** half-way between your ball and the pin to get the overall break.



2nd Reading

Place your **EEZ-READ™** six inches from the pin to see if the break carries all the way to the pin.



When the bubble in the EEZ-READ™ is at 6 o'clock the putt is downhill; 12 o'clock it's uphill; 3 o'clock breaks right to left; and 9 o'clock breaks left to right. Obviously, the in between readings show more options; see visual to the right.

