

# MAGIC MESH™


## Hands-Free Screen Door Installation Instructions

### Getting Started:

- Before hanging, ensure that the surface is clean of dirt and debris.
- Determine the proper direction to install screen:
  - If your door opens IN, install on the OUTSIDE of the door frame.
  - If your door opens OUT, install on the INSIDE of the door frame.
  - For sliding doors, attach the screen to the outside of the door frame and the stationary door.
- Find and mark the center of the top of your door frame.

### Hanging Instructions:

1. Lay your Magic Mesh™ Hands-Free Screen Door flat on the floor with magnets aligned in the center. Note that the top panel will have a larger gap between the magnets and the trim versus the bottom panel.
2. Check each magnet to ensure they attract to each other symmetrically.
3. Peel the adhesive backing off of the hook and loop strips and apply to the Magic Mesh™ Hands-Free Screen Door according to the diagram.
4. Take Panel A and peel off hook and loop strip #1 and apply to center of door frame with pressure. Be sure to hang the screen high enough so that it does not drag on the ground. Repeat for hook and loop strips #2 through #3.
5. Take Panel B and peel off hook and loop strip #7 and apply to opposite center of door frame with pressure. Be sure to hang the screen high enough so that it does not drag on the ground. Repeat for hook and loop strips #8 through #9.
6. Ensure the magnets are properly aligned and connected in the center.
7. Attach strips #4-6 and #10-12.

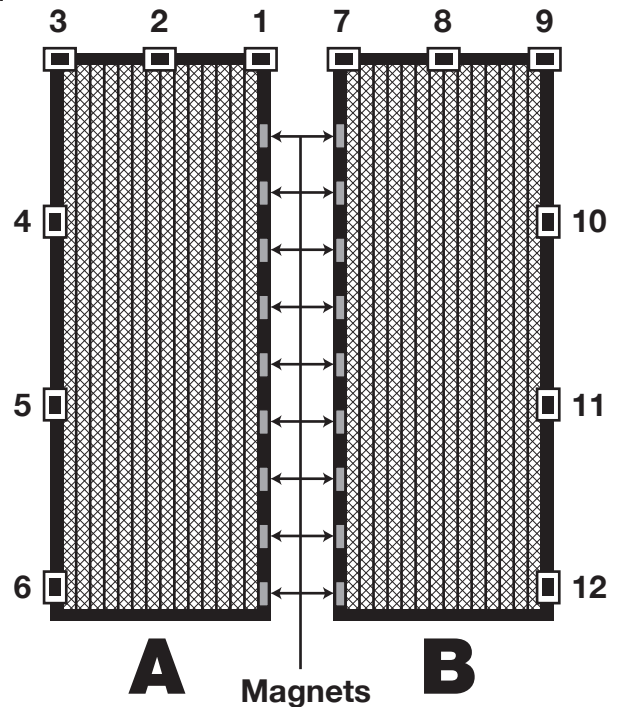

### Helpful Tips:

- For plastic frames, only use the hook and loop strips.
- For wooden frames, you can also use the wood tacks provided.
- Please note- the wood tacks leave puncture holes.
- If magnets do not snap shut together, adjust the width positioning of the mesh.

### Cleaning and Storage:

- Do not use any harsh or abrasive cleaners on this product.
- Wipe off the mesh with a damp, lukewarm cloth. For stubborn dirt, you can spot clean with a small amount of soap and a cloth. Allow the mesh to air-dry.
- Do not put in dryer. Do not dry clean.

### Safety Information:

- Keep children away from the packaging material and the storage bag. There is danger of suffocation.
- Maintain adequate distance from heat sources such as stovetops or ovens.
- Because of possible electromagnetic interference, people with implanted medical devices (e.g. pace makers) should consult their doctor before using.
- Take extra caution when using wood tacks. Keep away from children.
- Product may not function properly if not installed correctly.

### ⚠ Warning:

- Magic Mesh™ Hands-Free Screen Door is not a barrier for children and pets.
- Do not use Magic Mesh™ Hands-Free Screen Door if you do not want small children or pets to get out.