

### HD2600 Includes

- 1 - 6' Video/Audio Cable (1)
- 1 - UL/CE Listed Power Supply (2)
- 1 - HD2600 IR Remote (3)
- 1 - HD2600 Industrial DVD Player (4)



UL Approved Annex Q 60065 For Healthcare Facilities And Hospitals

## IMPORTANT SAFETY INSTRUCTIONS - HD2600 SERIES INDUSTRIAL DVD PLAYER

Please thoroughly read these operating instructions listed below. After you have finished reading, store these instructions in a safe place for future reference.


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth. A cloth dampened with water may be used if needed.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. "WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture." "This apparatus shall not be exposed to dripping or splashing and or objects filled with liquids, such as vases shall not be placed on the apparatus"
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Player is not intended to be in direct contact with patient.

When grounding of the accessible metal parts is required, a separate grounding lead is to be used.

To ground the HD2600 use a crimp type ring terminal and secure it to the grounding lug located on the back left side of the player. Secure the terminal with the included washer, lock washer and nut.

ADDITIONAL INFORMATION - Additional information is provided on the bottom of the unit

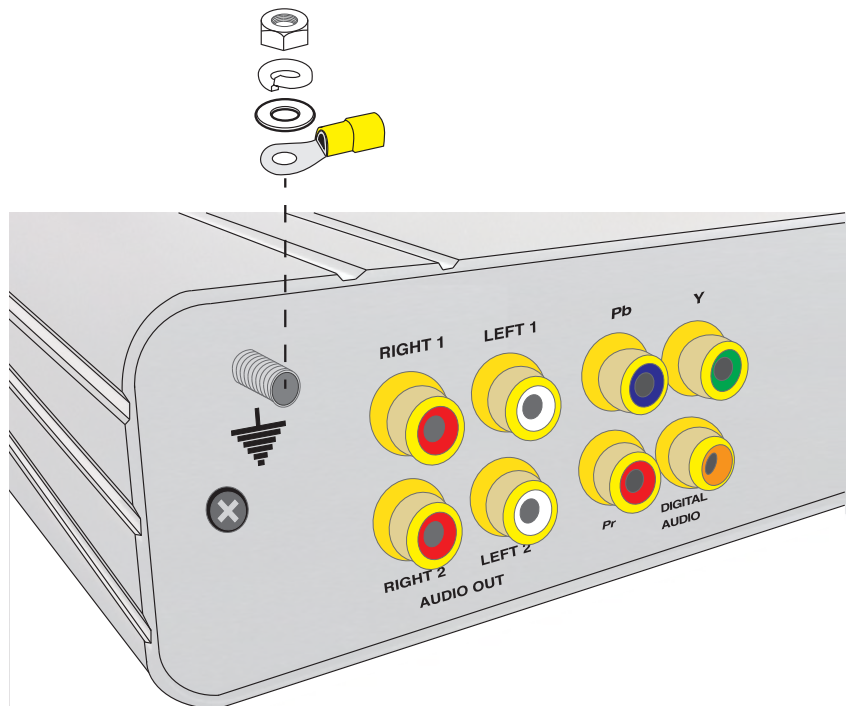

## Quick Guide: Plug & Play Operation

The **HD2600** connects to any screen/TV monitor and is pre-programmed to operate for rugged continuous play. Mode one (6) provides the functionality to auto start, auto play, and auto repeat the DVD's largest title. Simply load DVD/disc in front drive slot (7). Once the DVD/Disc is loaded in the slot drive, allow just 15 seconds to load, play and display DVD/content. The HD2600 is immediately operable for continuous 24/7/365 play and auto repeat. The HD2600 offers 5 individual modes. Select mode by pressing the Mode button on either the front side of player (8) or from the HD2600 IR remote buttons labeled as mode 1-2-3-4-5. (14). If mode button is pressed from the front of the player it will simply reboot within 5 seconds to the selected mode.

- **Mode 1** - Auto start, Auto Play, Auto repeats largest title of the DVD/disc
- **Mode 2** - Auto play, Auto repeat all titles in numerical order
- **Mode 3** - Standard (Manual DVD off the shelf operation)
- **Mode 4 & 5** - Plays DVD/Discs which may not be supported in either modes 1 or 2



## IR Remote

The HD2600 IR Remote is rarely required. It is utilized for initial set up and basic operation.

The HD2600 is ideal for environments that require multiple HD2600 units installed within a related space or close proximity and that may require global on/off and global ejection of the DVD/disc. Simply use any HD2600 IR remote and press "Stand By" (9), "Power On" (11) or "Eject" (12) repeatedly until ultimately all units have responded accordingly.


## Power and DVD/disc indicator lights

By pressing "Stand by" (9) on the HD2600 IR remote, the HD2600 will power off and illuminate a solid red light (10). Pressing "Power On" (11) on the HD2600 IR Remote will power up the HD2600 and illuminate a solid green light (10).

Using the power button (13) on the front of the HD2600 will toggle the status from "ON" (green light) (10) to "OFF" (no lights) (10).

## IR Remote Optimization & Control

- (22) **Display** - Rotate 5 modes of current run time of title and chapter (title elapsed/ title remaining/chapter elapsed/chapter remain/Off)
- (23) **Arrows / Enter** - Control HD2600 setup menu options and DVD/disc menu options
- (24) **Menu** - Launch root menu. Note: In "Mode 1" or "Mode 2" the player auto selects the "enter" function on a regular basis. It is recommended to utilize "Mode 3" if menu navigation is required.
- (25) **Rewind** - Each button press increases the rewind speed as follows 2x / 4x / 8x / 16x / 32x / then back to play.
- (26) **Play** - Plays DVD/disc if stopped or paused.
- (27) **Chapter Back** - Advance backwards through chapters (current title only) at last chapter, play will stop or start again at chapter 1, (depending on disc format)
- (28) **Stop** - Stops DVD/disc and launches default splash screen
- (29) **Subtitle** - Press to scroll through available subtitle languages (if applicable)
- (30) **Volume Up/Down** - Adjusts output volume of the player. Note: Ejecting DVD/disc sets player back into stand by mode. Volume defaults to maximum.
- (31) **Setup** - Access HD2600 menu options and operation. To customize the splash screen, modify screen output, audio out and others- SEE PAGE 2

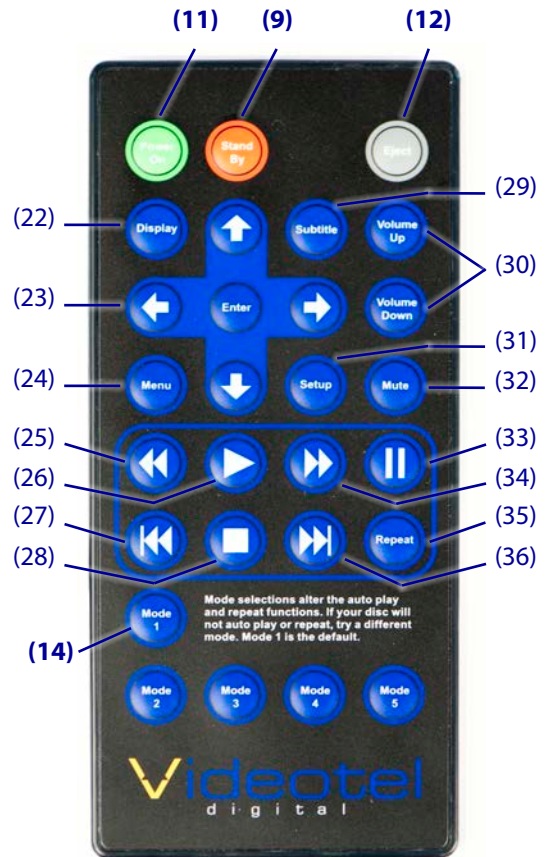


- (32) **Mute** - Mutes all the audio from the HD2600
- (33) **Pause** - Pause current playing DVD/disc. Press again to play or press "Play" button (26).
- (34) **Fast Forward** - Each button press increases fast forward speed as follows 2x / 4x / 8x / 16x / 32x / and then back to play.
- (35) **Repeat** - Allows for various types of repeat options. Each button press scrolls through either Chapter repeat / Title repeat / All (entire disc repeat) / Off
- (36) **Chapter Forward** - Advances forward through chapters (current DVD/disc title only). At last chapter play will stop or start at 1 again (dependent on DVD/disc format)



## Connections:

The **HD2600** external power supply significantly reduces any heat inside the player. Simply connect the enclosed power supply to the 12V jack (17) on the back of the player.

Connect the DVD player to your TV or monitor. The **HD2600** includes 4 available video output options. Composite video (18) - single yellow RCA jack, S-Video (19) - single 4 pin jack below yellow RCA and Component Video (20) - 3 RCA jacks (red/green/blue) located in the middle rear of the player. HDMI jack (21) is a thin, wide connector on the right side of the player. All 4 connections can be utilized at the same time for installations that require connection to 4 TV's concurrently without an external splitter.

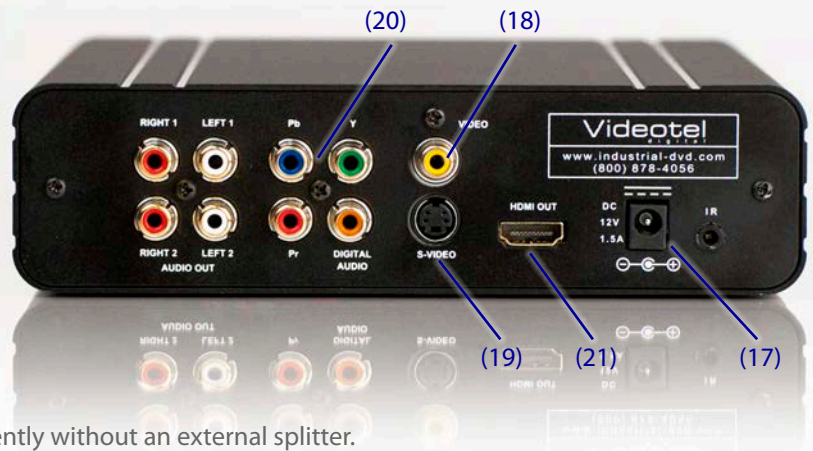

The **HD2600** includes 4 audio outputs. Right/Left 1 and Right/Left 2 both of which function the same. Choose either set (right/left 1 or right/left 2) for audio. For mono output, use the right or left output of either set and change your audio out settings in the "Setup/Audio" (44) section under "Downmix".

## Menu Setup

The set up menu allows for changes to the video and audio outputs and preferences such as language, subtitles, logo, etc. Access various menu options via the IR remote arrow and enter buttons. To go "back" press the left arrow button. Press the "Setup" (31) button to exit the menu.

### Display Optimization (37)

TV Display (38) - Switch between Normal Pan Scan (PS) / Normal Letterbox (LB) / Wide / Wide Squeeze. Select preferences and display the specific preference selection in real time and as shown live on screen. Note: DVD/disc must be removed from slot drive to access this menu option.

OSD Language (39) - On screen display. English (default setting) and Chinese language options.

Captions (40) - Control Closed Captions On/Off. Select alternative languages within Preferences (see page 4) (63).

Screen Saver (41) - Screen saver set to display 5 minutes if DVD/disc is not in use. Option control to turn On/Off.

Customize Screen Saver (42) - Customize/Set Splash Screen display (when DVD/disc is not in use) Choose you own custom designed splash screen by selecting "Capture" option. HD2600 reads custom splash via DVD/disc (see Video Options) or simply use either the default screen setting (Videotel) or "Blue BSR" (solid blue screen).

### Audio Optimization (43)

Speaker Setup (44) - Select stereo, mono, surround sound or off. Change surround sound, stereo out and sub woofer options.

Dolby Digital Set Up (45) - Optimize Dolby settings to various sound options.




Equalizer (46) - Select audio output preset options set to Normal, Rock, Pop, etc. Options Bass Boost, Super Bass and Treble Boost On/Off. (default set to off)

### Video Optimization (47)

Component (48) Select between YUV (component video standard), RGB, VGA (VGA out requires 3-RCA to VGA connector adaptor) or set to "Off". If options 1-3 are not shown, HDMI is currently set to "on." For component video options, set HDMI to "Off" (56). Once selections are made, set HDMI back to "On" and all video outputs become active.

TV Mode (49) Select either P-Scan (Progressive) or Interlaced. Most TV/screens convert video signals to progressive by default.

HD Mode (50) - Changing the HD Mode setting is not recommended.

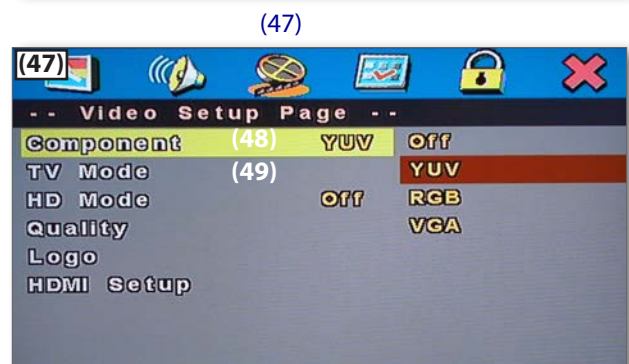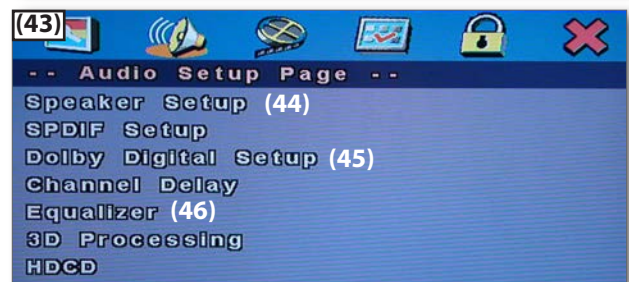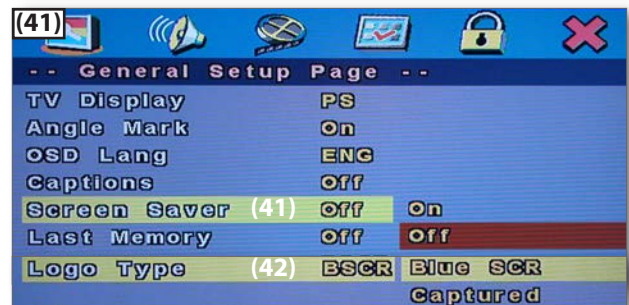



**Quality (52)** - Select options for Sharpness, Brightness, Contrast ,Gamma, Hue, Saturation and Luma Delay.

**Logo (53)** -“Capture” and display your custom splash screen. Insert DVD/disc that contains the image you wish to display. For best results, we recommend a 1-5 minute DVD with a still image. Once the image is displayed on TV/screen, select the “Capture” (54) option and press “Enter” via the IR remote. Note: Screen may pause with text shown as “Wait..Capturing”. The custom image is now saved (captured) and Menu disappears. Press the “Setup” IR Remote button again and select “General Set Up Page”. Scroll downward to “Logo Type” and select “Captured”. Press the “Setup” button again, eject DVD/disc and new image is displayed on TV/screen.

**HDMI Setup (55)** Select HDMI output “On” or “Off” (56). Note: Should the HD2600 be connected to TV/screen via HDMI cable and HDMI is set to “Off”, the screen will appear blank.

**HDMI Resolution (57)** Upon power up of HD2600 and/or connected TV/screen, both devices are pre-programmed to communicate to one another and auto select the highest quality resolution option for combined devices. Use HDMI Resolution menu section to select alternative settings if required.

**Preference Menu (58)** Note: All options listed may only be modified when DVD/disc slot is empty.

**TV Type (59)** Select between NTSC (US Standard), PAL or Multisync (60).

**PBC (61)** - N/A and to remain in “On” mode

**Audio (62)** - Select desired audio language from list. DVD/disc must be “authored” and include multiple audio tracks to activate this feature/function.

**Subtitle (63)** - Select all subtitle languages made available on the DVD/disc. DVD/disc must be “authored” with multiple subtitle languages to activate this feature/function.

**Disc Menu (64)** - Select all menu languages made available on the DVD/disc. DVD/disc must be “authored” with multiple menu languages to activate feature/function.

**Parental (65)** - Select which level of content is able to be played on the HD2600

**Country Region (66)** Select appropriate region if other than United States.

**Password (67)** - Pending Development

**Exit (68)** - Exit setup menu by selecting “Exit” or press “Setup” on the IR remote.

### **Premium 2 Year Warranty**

Videotel warrants our DVD players known as Series HD2600 to be free from defect in material and workmanship. Warranty shall be limited to a period of 2 years from invoice date. Warranty shall not cover products that are found to be defective due to customers improper operation, accident, misuse, mishandling or damage occurring during transportation. All Series HD2600 players that are sent in for repair or exchanged, must be properly packaged and insured for current list price shown as indicated on line at [www.industrial-dvd.com](http://www.industrial-dvd.com).

Should the HD2600 series player be found to be defective within 90 days of the original invoice date, customer is responsible for contacting Videotel or the approved Authorized Re-seller of which original purchase was made. Videotel has the right to determine if the HD2600 Series player is defective. If defective, Videotel will provide a replacement unit or replace the internal loader.

If the HD2600 Series player is found to be defective after 90 days of original purchase and before 2 years from the original invoice date and Videotel has confirmed that all appropriate troubleshooting efforts have been exhausted, Videotel will repair the unit at no charge and ship back to customer at customer’s expense. Customer is responsible for any shipment fees for the return of the defective unit for repair.

If the HD2600 Series player is found to be defective after 2 years from the original invoice date, customer has the option to purchase and “self” install a replacement loader. Customer is responsible for shipping costs.

