



## CUSTOM ILLUMINATION SOLUTIONS

### Compatible Ballasts with LLI-T8BC tube

Manufacturer	Model	Type
Philips-Advance	ICN-IP32-N	Instant Start Ballast
Philips-Advance	ICN-2P32-N	Instant Start Ballast
Philips-Advance	ICN-3P32-N	Instant Start Ballast
Philips-Advance	ICN-4P32-N	Instant Start Ballast
Philips-Advance	ICN-IP32-SC	Instant Start Ballast
Philips-Advance	ICN-2P32-SC	Instant Start Ballast
Philips-Advance	ICN-3P32-SC	Instant Start Ballast
Philips-Advance	ICN-4P32-SC	Instant Start Ballast
Philips-Advance	IOP-1P32-LW-SC	Instant Start Ballast
Philips-Advance	IOP-2P32-LW-SC	Instant Start Ballast
Philips-Advance	IOP-3P32-LW-SC	Instant Start Ballast
Philips-Advance	IOP-4P32-LW-SC	Instant Start Ballast
Philips-Advance	IOPA-1P32-LW-N	Instant Start Ballast
Philips-Advance	IOPA-2P32-LW-N	Instant Start Ballast
Philips-Advance	IOPA-3P32-LW-N	Instant Start Ballast
Philips-Advance	IOPA-4P32-LW-N	Instant Start Ballast
Philips-Advance	IOPA-1P32-N	Instant Start Ballast
Philips-Advance	IOPA-2P32-N	Instant Start Ballast
Philips-Advance	IOPA-3P32-N	Instant Start Ballast
Philips-Advance	IOPA-4P32-N	Instant Start Ballast
Philips-Advance	IOP-1P32-SC	Instant Start Ballast
Philips-Advance	IOP-2P32-SC	Instant Start Ballast
Philips-Advance	IOP-3P32-SC	Instant Start Ballast
Philips-Advance	IOP-4P32-SC	Instant Start Ballast
Philips-Advance	IOPA-1P32-HL-SC	Instant Start Ballast
Philips-Advance	IOPA-2P32-HL-SC	Instant Start Ballast
Philips-Advance	IOPA-3P32-HL-SC	Instant Start Ballast

Philips-Advance	IOPA-4P32-HL-SC	Instant Start Ballast
Philips-Advance	GOPA-1P32-SC	Instant Start Ballast
Philips-Advance	GOPA-2P32-SC	Instant Start Ballast
Philips-Advance	GOPA-3P32-SC	Instant Start Ballast
Philips-Advance	GOPA-4P32-SC	Instant Start Ballast
Philips-Advance	GOP-IPSP32-SC	Instant Start Ballast
Philips-Advance	GOP-2PSP32-SC	Instant Start Ballast
Philips-Advance	GOP-3PSP32-SC	Instant Start Ballast
Philips-Advance	GOP-4PSP32-SC	Instant Start Ballast
Philips-Advance	GOPA-1P32-LW-SC	Instant Start Ballast
Philips-Advance	GOPA-2P32-LW-SC	Instant Start Ballast
Philips-Advance	GOPA-3P32-LW-SC	Instant Start Ballast
Philips-Advance	GOPA-4P32-LW-SC	Instant Start Ballast
SYLVANIA	QHE 1X32T8/UNV ISL-SC	Instant Start Ballast
SYLVANIA	QHE 2X32T8/UNV ISL-SC	Instant Start Ballast
SYLVANIA	QHE 3X32T8/UNV ISL-SC	Instant Start Ballast
SYLVANIA	QHE 4X32T8/UNV ISL-SC	Instant Start Ballast
SYLVANIA	QHE 1X32T8/UNV ISN-SC	Instant Start Ballast
SYLVANIA	QHE 2X32T8/UNV ISN-SC	Instant Start Ballast
SYLVANIA	QHE 3X32T8/UNV ISN-SC	Instant Start Ballast
SYLVANIA	QHE 4X32T8/UNV ISN-SC	Instant Start Ballast
SYLVANIA	QHE 1X32T8/UNV ISH-SC	Instant Start Ballast
SYLVANIA	QHE 2X32T8/UNV ISH-SC	Instant Start Ballast
SYLVANIA	QHE 3X32T8/UNV ISH-SC	Instant Start Ballast
SYLVANIA	QHE 4X32T8/UNV ISH-SC	Instant Start Ballast
SYLVANIA	QTP 1X32T8/UNV ISL-SC	Instant Start Ballast
SYLVANIA	QTP 2X32T8/UNV ISL-SC	Instant Start Ballast
SYLVANIA	QTP 3X32T8/UNV ISL-SC	Instant Start Ballast
SYLVANIA	QTP 4X32T8/UNV ISL-SC	Instant Start Ballast
SYLVANIA	QTP 1X32T8/UNV ISN-SC	Instant Start Ballast
SYLVANIA	QTP 2X32T8/UNV ISN-SC	Instant Start Ballast
SYLVANIA	QTP 3X32T8/UNV ISN-SC	Instant Start Ballast
SYLVANIA	QTP 4X32T8/UNV ISN-SC	Instant Start Ballast
SYLVANIA	QTP 1X32T8/UNV ISH-SC	Instant Start Ballast
SYLVANIA	QTP 2X32T8/UNV ISH-SC	Instant Start Ballast
SYLVANIA	QTP 3X32T8/UNV ISH-SC	Instant Start Ballast

SYLVANIA	QTP 4X32T8/UNV ISH-SC	Instant Start Ballast
SYLVANIA	QHE 1X32T8/347 ISL-SC	Instant Start Ballast
SYLVANIA	QHE 2X32T8/347 ISL-SC	Instant Start Ballast
SYLVANIA	QHE 3X32T8/347 ISL-SC	Instant Start Ballast
SYLVANIA	QHE 4X32T8/347 ISL-SC	Instant Start Ballast
SYLVANIA	QHE 1X32T8/347 ISN-SC	Instant Start Ballast
SYLVANIA	QHE 2X32T8/347 ISN-SC	Instant Start Ballast
SYLVANIA	QHE 3X32T8/347 ISN-SC	Instant Start Ballast
SYLVANIA	QHE 4X32T8/347 ISN-SC	Instant Start Ballast
SYLVANIA	QTP1X32T8/347 ISN-SC	Instant Start Ballast
SYLVANIA	QTP2X32T8/347 ISN-SC	Instant Start Ballast
SYLVANIA	QT3X32T8/347 ISN-SC	Instant Start Ballast
SYLVANIA	QT4X32T8/347 ISN-SC	Instant Start Ballast
GE	GE-132-MV-N	Instant Start Ballast
GE	GE-232-MV-N	Instant Start Ballast
GE	GE-332-MV-N	Instant Start Ballast
GE	GE-432-MV-N	Instant Start Ballast
GE	GE-132-MV-N-DIY	Instant Start Ballast
GE	GE-232-MV-N-DIY	Instant Start Ballast
GE	GE-332-MV-N-DIY	Instant Start Ballast
GE	GE-432-MV-N-DIY	Instant Start Ballast
GE	GE232MAX347-N	Instant Start Ballast
GE	GE432MAX347-N	Instant Start Ballast
GE	GE-132-MAX-N/Ultra	Instant Start Ballast
GE	GE-232-MAX-N/Ultra	Instant Start Ballast
GE	GE-332-MAX-N/Ultra	Instant Start Ballast
GE	GE-432-MAX-N/Ultra	Instant Start Ballast
GE	GE-132-MAX-L/Ultra	Instant Start Ballast
GE	GE-232-MAX-L/Ultra	Instant Start Ballast
GE	GE-332-MAX-L/Ultra	Instant Start Ballast
GE	GE-432-MAX-L/Ultra	Instant Start Ballast
GE	GE-132-MAX-H/Ultra	Instant Start Ballast
GE	GE-232-MAX-H/Ultra	Instant Start Ballast

GE	GE-332-MAX-H/Ultra	Instant Start Ballast
GE	GE-332-MAX-L/Ultra	Instant Start Ballast
GE	GE-432-MAX-L/Ultra	Instant Start Ballast
GE	GE-132-MAX-H/Ultra	Instant Start Ballast
GE	GE-232-MAX-H/Ultra	Instant Start Ballast
GE	GE-332-MAX-H/Ultra	Instant Start Ballast
GE	GE-332-MAX-H/Ultra	Instant Start Ballast
SUNPARK	U-1/32ISE-HBF	Instant Start Ballast
SUNPARK	U-2/32ISE-HBF	Instant Start Ballast
SUNPARK	U-3/32ISE-HBF	Instant Start Ballast
SUNPARK	U-4/32ISE-HBF	Instant Start Ballast
SUNPARK	U-1/32ISE-LBF	Instant Start Ballast
SUNPARK	U-2/32ISE-LBF	Instant Start Ballast
SUNPARK	U-3/32ISE-LBF	Instant Start Ballast
SUNPARK	U-4/32ISE-LBF	Instant Start Ballast
SUNPARK	U-1/32ISE	Instant Start Ballast
SUNPARK	U-2/32ISE	Instant Start Ballast
SUNPARK	U-3/32ISE	Instant Start Ballast
HOWARD	EP3/32IS/MV/MC/HE	Instant Start Ballast
KEYSTONE	KTEB-432-UV-IS-N-P	Instant Start Ballast
KEYSTONE	KTEB-432-UV-IS-N-P	Instant Start Ballast
PROLUME	EP232IS/L/MV/SL	Instant Start Ballast
PROLUME	EP232IS/L/MV/HE	Instant Start Ballast
RADIONIC	E232H12	Instant Start Ballast

Note: LED Lighting Inc. ballast compatible tube may not work with the ballasts in the above list because if they are older or have special technical data.

Note: LED Lighting Inc. ballast compatible tube may be able to work with other ballasts not covered by the above list.

Note: Testing the ballast is recommended before completeing a large installation