

INSTALL SUPERIOR MARK™ FLOOR MARKING BOX IN LESS THAN 5 MINUTES

Featuring Easy To Install Pre-Cut Strips of Superior Mark™ Floor Marking Material


Before installing, clean the floor with alcohol based cleaner. Let dry completely, then mark a guide to ensure proper alignment.

Step 1: Peel and stick down middle section of box.

Step 2: Align puzzle cut edges and stick down one side of the box.

Step 3: Align strip to complete the box.

Step 4: (Optional) Peel and stick down a floor sign.

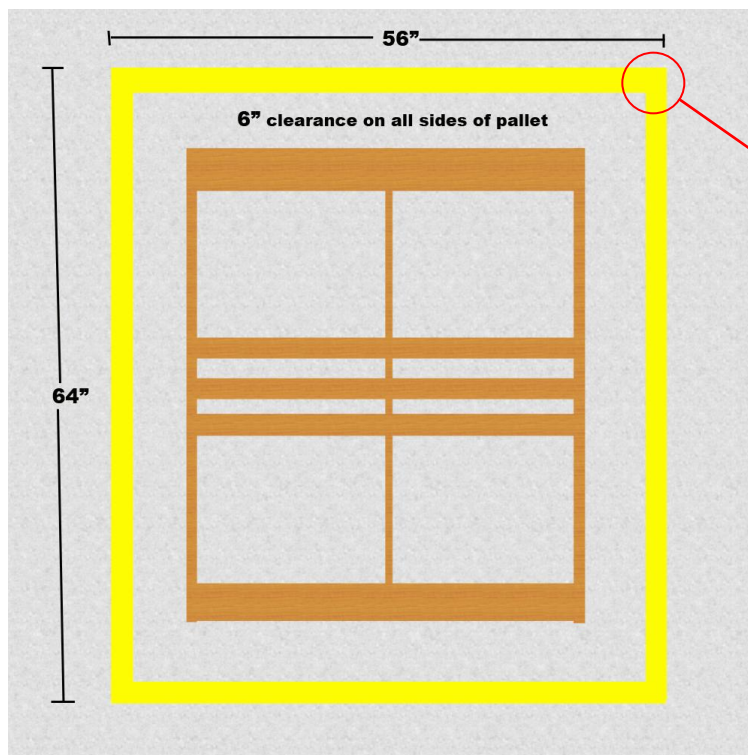

"Close up of puzzle cut miter."

Pre-cut boxes are made with Superior Mark™ brand floor marking tape, which features beveled edges and recessed adhesive for maximum durability. Pre-cut floor marking boxes are available in any size, and floor signs can be custom printed any size, shape, or design.

Note: This floor marking kit is designed to mark a border around a standard pallet. Standard pallets measure 40" x 48", and this kit leaves a 6" clearance on all sides of the pallet. Available in 2" and 4" widths, can be custom made to create any size box.

