
The Maxwell Pro Network Emulator



Maxwell Pro

The Maxwell Pro Network Emulator helps network managers, software developers, and testers learn how their products will perform in realworld production networks, including satellites and the Internet. By intercepting and changing network flows, Maxwell can induce conditions that cause network congestion, slow links, time outs, and many other adverse network conditions. Network managers can then see the effects on the device or application in order to find and fix bugs, solve network problems, or learn the limits of device and application performance

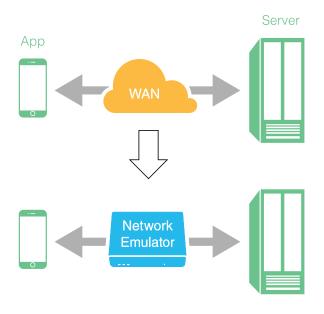

Create a Real-World Network in Your Test Lab

Emulate the Real World in Your Lab

The Maxwell Pro network emulator helps network engineers test and measure performance in order to identify and remove defects. Network emulators turn well behaved development and test networks into the kind of slow, congested, and less-than-reliable services encountered on the internet.

In addition, unlike the real internet, network emulators allow the operator to control these conditions so that products and apps can be subjected to controlled and repeatable tests, by routing selected packets through a series of impairment nodes.

The Result:

- ▶ Deliver robust, high quality products and applications
- Accelerate time to market
- ▶ Eliminate guesswork and surprises
- ▶ Completely characterize your app's network performance

Maxwell Pro Test Suites

(optionally available)

- ARP
- ► DHCP
- ► ICMP
- IPv4 and IPv6
- ▶ SIP
- SNMP
- ▶ TLS
- ▶ UDP


Scenarios


Select a pre-defined, network emulation scenario from our library. Some examples can be seen in the table below:

Cross-Atlantic T1 ATM link	Cellular radio handoff
Low earth orbit satellite	VoIP: To remote office via WAN
Geosynchronous satellite	VoIP: multi-way conference over WiFi
Streaming media over satellite	Connection impairments
Periodic network downtime	Failover to backup servers




Pre-built library scenarios feature intuitive controls that appear on top of an end-to-end diagram of the whole network, to provide a bird's eye view. You can also add your own custom background diagram. Here are three examples from the library:

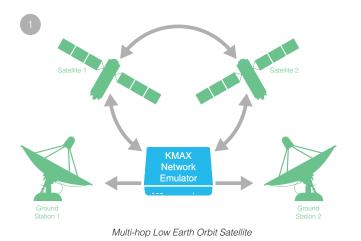

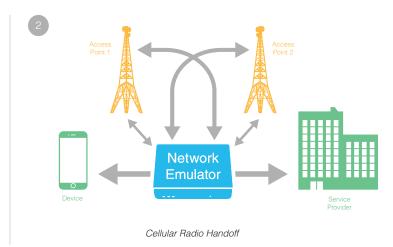



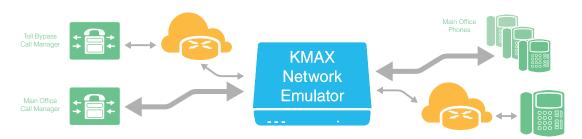



VoiP to Remote Office via WAN


Create Your Own Scenario


Emulate the real world in your test network by setting basic and advanced parameters for these impairments:

- Packet Drop/Loss: Add "burst mode" for a realistic emulation.
- Packet Delay/Latency: From zero to 10 seconds, with microsecond precision.
- Packet Jitter, with or without reordering. Specify a custom jitter distribution: Uniform, Gaussian, Pareto, or Pareto-Normal:
- ▶ Packet Duplication, with rapid back-to-back transmission.
- Packet Corruption: Specify packet-centric or bit-centric probabilities of corruption.
- Rate limiting: Choose From several queue management algorithms.

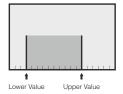

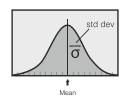

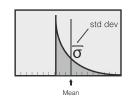

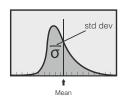



Model Worst-Case Situations:

- Turn on burst mode for any impairment, to simulate back-to-back real-world stochastic bursts.
- Add time-varying expressions to any parameter

Regardless of the production environment – anything from the routine to the extreme to legacy – Maxwell Pro permits customization to precisely emulate that world.

Incorporate Real or Simulated Traffic

Maxwell Pro accommodates all forms of real or simulated network traffic:

- Use real devices to generate packets, then impair only selected packets and protocols under consideration, while filtering out the rest.
- Or, use a packet generator to create simulated network traffic for the device under test, then apply impairments only to those packets, leaving the rest of the network unaffected.

Classify Network Traffic

Create filters for the packet classifier using the Classifier Filter Library, or create your own filter, then apply different impairments to different filter outputs.

Low-level protocols arp arp PCAP destination-mac dhcp_client_req dhcp_server_rep icmp

Examples of filter criteria include:


- IEEE 802 header fields: MAC source/ destination addresses, Ethernet type/ length, MPLS criteria, VLAN tags.
- IPv4 or IPv6 header fields, including chained headers, fragment status, and QoS.
- Higher level protocols: UDP or TCP port numbers.
- Data within the payload, for any layer.

The Maxwell Pro Smart Classifier Filter System puts you in charge to use intelligent criteria for packet classification:

 Specify flexible value/mask comparisons: useful for matching addresses, QoS criterion, and payload bytes:




Specify lists of values and ranges for comparison: useful for port numbers, VLAN IDs, and payload sizes:

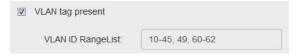

Add Time-Varying Impairments

Real world networks change their behavior over time: excessive jitter, dropouts, or reductions in bandwidth can vary smoothly, or jump from one value to another, over the course of minutes, or days. Create a network emulation that varies the impairment parameters over any time period:

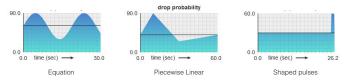

Specify a time-varying expression for any metric, using equations, piecewise curves, or shaped pulses:

Examples

- Test your streaming clients: The device under test should handle time-varying impairments, and perform flawlessly, for days.
- Run your protocols continuously, while the time-varying impairments cover all corner cases – perfect for overnight stress testing.

Maxwell Pro Charts and Tables

Monitor your Maxwell Pro network emulation from a Chrome web browser on your tablet or desktop computer, with the MPtable and MPchart applications

- MPtable provides a bird's eye view of everything that is happening on the Maxwell Pro Network Emulator: Create tables, then expand the advanced tab to see metrics / statistics for all nodes in all flows. If a packet gets impaired anywhere in the network, you'll see a change in the statistics, in real time.
- MPchart lets you drill down to see real-time graphs for a few selected statistics. Using linear or logarithmic axes, you can get a better sense of how metrics / impairments change over time. You can also display two metrics on the same graph to directly compare them.

Documentation

- Maxwell Pro Installation and Quickstart Guide
- Maxwell Automated TCP/IP Test Guide
- Maxwell Automated TCP/IP Tests
- Maxwell Application Programming Interface Guide
- Maxwell G.1050 Tests
- Maxwell Plugin Programmer's Guide
- Maxwell SIP Tests
- Maxwell Pro System Guide
- ► Maxwell TCP/IP Plugin Programmer's Guide
- Maxwell TCP Test Output Analyzer



Programmability

Customize Maxwell in one of five ways:

- 1. Use one of our existing scenarios as a base and make small modifications to tailor the impairments, as required.
- 2. Use the Maxwell graphical interface, select a set of desired impairments, save them, then define addresses and protocol filters.
- 3. Control Maxwell Pro from a Python, Perl, Tcl, Java, shell script or another application using the Maxwell Control API Guide.
- 4. Create a plugin in C or C++. Plugins are the mechanism for creating programs in the Maxwell environment.
- 5. Custom tests can be added to the TCP/IP protocol test suites using the Python language

See Pages 5-6 for Maxwell Pro Specifications



Hardware Enclosure:

▶ Lunchbox sized: 12.9" x 8.7" x 3.8"

Rackmount option: 15.7" x 11.8" x 1.7"

Virtual Machine (VM) software only

Interfaces:

▶ 10/100 Mbits/sec

▶ 10/100 Mbits/sec and higher

▶ 10/100/1000 Mbits/sec

▶ 10 Gbits/sec for two ports

Operating System: FreeBSD

Impairment Engine: Kernel-driven impairment

engine

Transparency / Configuration: Layer 2

transparent bridge

User Interface:

▶ Web-based graphical user interface

► Command Line Interface

Script control with Python or Java

Script control with RESTful interface

Script control with JSON interface

Script control with YAML interface

Standard Impairments:

Packet Delay/Latency:

Specify packet delay / latency

Vary packet delay / latency over time *

Add jitter to the delay

Add jitter to the delay with packet reordering

Packet Jitter

▶ Jitter Distribution:

Normal / Gaussian / Bell curve

Pareto

Pareto-Normal

Uniform (equal)

Piecewise distribution function / user defined

Packet Duplication:

Specify duplication probability

Vary duplication probability over time *

Enable bursts:

Specify burst probability

Specify burst window duration

Vary burst probability over time: *

Enable burst skew

Packet Drop / Loss:

Specify drop probability

Vary drop probability over time * :

► Enable bursts:

Specify burst probability

Specify burst window duration

Vary burst probability over time: *

Enable burst skew

Rate Limitation:

Specify:

target rate

queue length

overhead bits

minimum packet size

maximum packet size

Vary any of the above over time: *

Support bit clocking rate control

Support token bucket rate controll

Mark for drop or random early detection

Specify transition action on queued packets

Flush queue

Packet Corruption:

Specify corruption probability

Limit corruption to Ethernet payload

Specify burst probability

Vary burst probability over time *

Emulated Links / Multiple Flows:

Unidirectional and bidirectional packet flow

At least 5 flows in each direction; 10 total

Larger models support 64 flows in each direciton; 128 total

Classify packets based on:

► IPv4 header fields

▶ IPv6 header fiels

MAC source or destination addresses

► Ethernet type or length field

▶ IEEE 802 header fields (includes VLAN tags)

Data within the packet

Classify packets based on fields in protocols:

Low-level protocols:

arp

dhcp

icmp

mpls

spanning-tree

► IP layer:

▶ IPv4 packets of varying lengths

▶ IPv6 fragment

IPv6 fragment_last

IPv6 flow range

► TCP / UDP layer:

Any TCP packet

▶ TCP port numbers

Any UDP packet

UDP port numbers

http

DNS

► SIP

Applications layer:

VoIP

VoIP with QoS bits in various configs

Apply different impairments on each emulated link

Manipulate contents of headers and payloads:

- Randomly corrupt a packet
- Intelligently corrupt a packet
- Create a packet and selectively insert into the flow
- Dynamically create and change distinct flows of packets
- ► Inspect packet headers to select packets for modification
- Rewrite packet headers
- ► Rewrite packet data

Select and modify packets based on:

- The content of that packet
- ▶ The content of predecessor packets
- ▶ The content of packets in other flows
- ► The mathematical model of packet flows
- The position in the protocol handshake



All Maxwell Pro options are available as a rackmount unit.



All Maxwell Pro options are available as a rackmount unit.



Lunchbox-sized enclosure is standard for Maxwell Pro units.

Maxwell Patent No 7310316

Testing device US 7310316 B2

ABSTRACT

A test device (21) sits between two or more nodes (20, 22). The nodes (20, 22) communicate in conversations, according to some predetermined protocol. The test device (21), under user control, may introduce jitter, drop packets, create new packets, reroute packets, and reorder packets in the conversations. Particular conversations are detected and tracked by respective virtual state machines (38, 39, 40) within the test device.

