

SWISSLOG SPECIFICATIONS



STATION ACCESS DOOR FOR RECESSED PEVCO™ PNEUMATIC TUBE STATIONS

Swisslog's Station Access Door is designed to provide controlled access to recessed stations manufactured by Pevco™. The Station Access Door provides added safety and security through the use of an electromagnetic lock and is ideal for stations located in public areas.

Designed for Stations Using Any PTS Control Panel

Swisslog's Station Access Door operates independently from the station control panel and can be easily installed on both 4-inch and 6-inch Pevco™ manufactured recessed stations using Pevco™ or Swisslog control panels.

The Station Access Door securely locks access to the station bin using electromagnetic technology. The electronic keypad is constructed with a smooth, stainless steel surface providing durability and long-life. Once a valid PIN is entered into the keypad, the Station Access Door releases the lock. After opening, the spring-loaded door automatically closes and the lock is reactivated after a programmable timer expires. The Station Access Door stores up to 5 user PIN combinations (up to 8-digits each). The PIN combinations can be changed using a master code.

Features & Benefits

- > Stations located in public areas benefit from added security, preventing children and unauthorized accessing station contents or from initiating system sends
- > Limits access to sensitive items to authorized personnel
- > Addresses HIPAA concerns by increasing security and patient privacy

swisslog



Specifications

The Station Access Door is constructed of powder-coated steel with a clear polycarbonate window. The door is available for both 4-inch and 6-inch recessed stations.

6-inch Station Access Door

Part Number:

Dimensions:

Door

Length: 18.9"
Width: 26.9"

Window

Length: 13.9"
Width: 20.25"

Power Requirements:

115 VAC, 60 Hz
(available at station)

4-inch Station Access Door

Part Number:

Dimensions:

Door


Length: 18.9"
Width: 26.9"

Window

Length: 13.9"
Width: 20.25"

Power Requirements:

115 VAC, 60 Hz
(available at station)

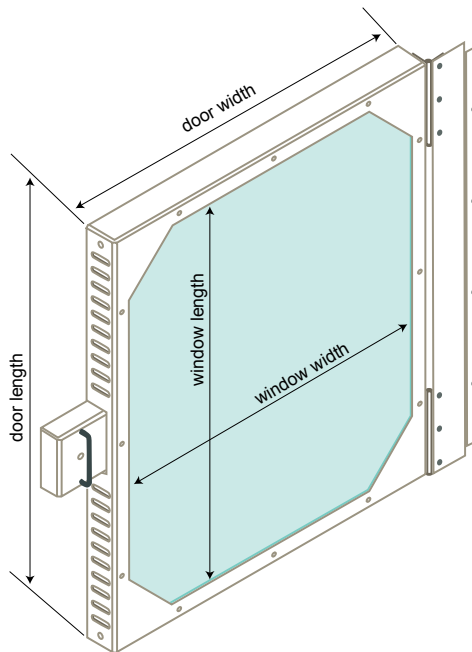

For More Information in North America:

Swisslog Healthcare Solutions
Email: healthcare@swisslog.com
USA: (800) 764-0300 | (303) 373-7993
Canada: (877) 294-2831 | (905) 629-2400

CM# 1230

WWW.SWISSLOG.COM