

ON CAMPUS



Lifeloc Breath Alcohol Testers

- Effectively deter alcohol consumption and student intoxication
- Enforce a “zero tolerance” alcohol program
- Make your students and neighborhoods safer
- Quickly test students and open containers

The Lifeloc 3-in-1 Alcohol Tester

The FC10 3-in-1 professional breathalyzer is ideal for rapid screening of one student or many.

In passive mode, the FC10 ensures effortless high volume testing of students and open beverage containers. In direct test mode, the FC10 records an accurate individual BAC measure.

The presence of alcohol is indicated on the large backlit screen with an immediate POS or NEG reading.

No mouthpieces required, you're ready for the next test in seconds.

“I am convinced that because of our Lifeloc breathalyzer, the number of students who chose to use alcohol while in attendance at our winter formal and our prom was next to none.”

High School Principal, California



Lifeloc
TECHNOLOGIES
Unlock the Power of Alcohol Testing

www.lifeloc.com



Product Innovation

- Menu Driven Software
 - Easily guides users through the direct testing process
- Last Test Recall
- Visual & Audible Cues
 - Displays breath flow (direct mode) and alcohol curve
 - Audible prompts help ensure proper test taking
- Easy Passive Testing Option
 - Test multiple students in rapid succession
 - No mouthpiece needed
 - “Sniffs” the air around your subjects (“wanding”)

Precision Instrument

- Double Pump Sampling System
 - Unsurpassed passive testing
 - Perfect for open containers
 - Increases measurement accuracy
- 3-Digit Result Display In Direct Mode
- Best In Class Operating Temperature Range
 - 0-55° C or 32-130° F


Ease of Use

- User Selectable Test Modes
 - Auto, manual and passive options
 - Passive can be turned on or off
- Large Backlit LCD Display
 - Excellent day or night visibility
 - Full 64 character display
 - Easy to understand prompts with full text alerts
- Sturdy & Rugged Design
 - Included rubber grip protects the unit from damage
 - Fits securely in your hand, small enough to fit in a shirt pocket
 - Heavy duty components and rugged storage case
- Long Battery Life - 160 hours of “on” time

Here's How Passive Testing Works:

Simply ask the student to blow toward the back of the FC10. While they are blowing, activate the unit by pressing the “Execute” button located on the front of the unit. The device will then provide a “POS” (Positive-alcohol detected) readout or “NEG” (Negative-no alcohol) readout.

View a video demonstration of the FC's testing capabilities at: www.lifloc.com/fc_videos.aspx

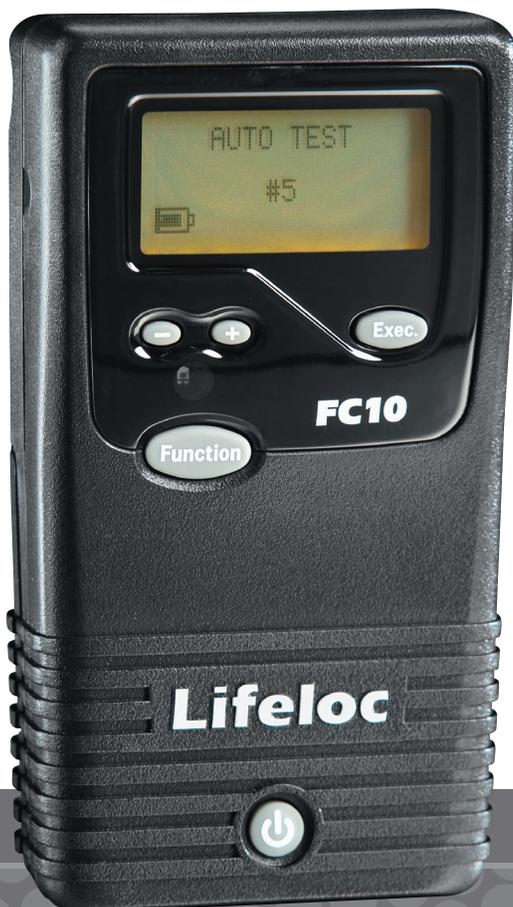

Lifeloc FC10

Professional Breath Alcohol Tester