


A SECURE ADDITION TO INVENTORY MANAGEMENT

- Software controlled electronic locks
- Users must be enrolled to access an At-Risk-Medication (ARM) location
- User authentication to access ARM locations by biometric fingerprint, scanning a user token that is printed when they log in, or typing user name and password
- ARM is determined by each pharmacy – can be CII's, or all controlled medications, and expensive non-controlled medications
- Utilizes Beacon® High-Density (HD) drawers – configurable for a few drawers to the entire cabinet
- Integrated into existing Beacon workflow
- Identifies ARM location with Beacon's pick-and-put-to-light technology
- Red light and horn alerts the pharmacy when a user leaves a drawer open
- Tracks all activities including who and when ARM drawers were accessed
- Provides detailed documentation and auditing of all ARM usage
- Count verification settings are configurable – verify count, blind count, always, random, or no count for each ARM

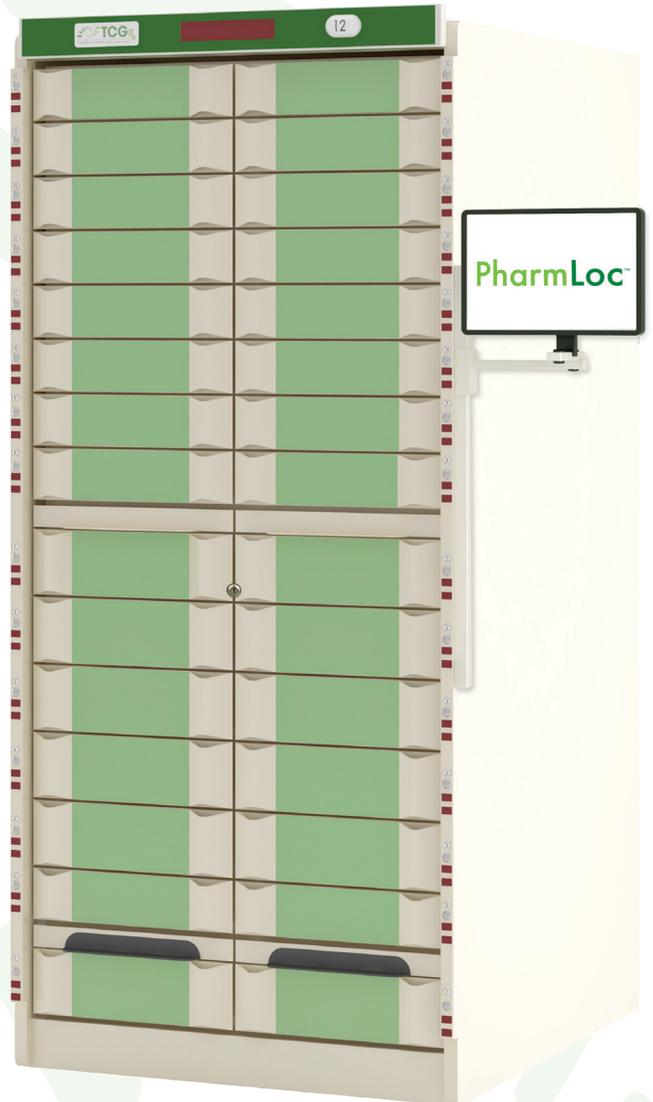


FUNCTION

SPECIFICATIONS

Size	34½"W × 42¼"D × 77"H (3½' depth), 34½"W × 50"D × 77"H (4½' depth)
Cabinet Capacity	up to 1,000 (3½' depth), or up to 1,400 (4½' depth)
Footprint	Less than 11 square feet
Cabinet Configurations	4 Double sized drawers, 20 single sized or 30 Single sized drawers or 14 Double drawers, 2 single sized
Drawer Capacity	Steel mesh drawers up to 44lbs., MDF drawers up to 22lbs.
Security	Biometric fingerprint, token scan, or keyboard login/password



Credentials for Put Pick

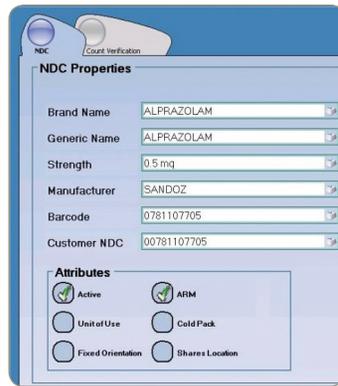

Setting Med as ARM



Setting Count Verify



Lock Drawer Alarm

ADDITIONAL PRODUCTS TO MAXIMIZE EFFICIENCY



3-Bay Workstation



Beacon® Carousel



AVF™ Series