



PC 8719

Industrial Panel PC

User Manual

*PC8719: 19" Industrial Touch Panel PC with
Core i3-2330E 2.2GHz Processor*



14628 Central Ave,
Chino, CA 91710
tel:909.597.7588, fax:909.597.1939

© Copyright 2013 Acnodes, Inc.
All rights reserved. Product description and product specifications
are subject to change without notice. For latest product information,
please visit Acnodes' web site at www.acnodes.com.

Warning!

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications.

It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

Packing List

Accessories (as ticked) included in this package are:

- AC power cable
- Driver & manual CD disc
- Other. _____ (please specify)

Safety Precautions

Follow the messages below to avoid your systems from damage:

- ◆ Avoid your system from static electricity on all occasions.
- ◆ Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
- ◆ Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

Table of Contents

| | |
|-------------------------|---|
| Warning!..... | 2 |
| Packing List..... | 3 |
| Safety Precautions..... | 3 |

Chapter 1 **Getting Started**

| | |
|--------------------------------------|----|
| 1.1 Specifications..... | 7 |
| 1.2 Dimensions..... | 8 |
| 1.3 Brief Description of PC8719..... | 10 |

Chapter 2 **Hardware Installation**

| | |
|---|----|
| 2.1 Mainboard Specifications..... | 11 |
| 2.2 Jumpers Setting and Connectors..... | 14 |

Chapter 3 **BIOS Setup**

| | |
|---------------------------------------|----|
| 3.1 Operations after POST Screen..... | 30 |
| 3.2 BIOS SETUP UTILITY..... | 30 |
| 3.3 System Overview..... | 31 |
| 3.4 Advanced Settings..... | 32 |
| 3.5 Chipset Settings..... | 39 |
| 3.6 Boot Settings..... | 48 |
| 3.7 Security Settings..... | 49 |
| 3.8 Save & Exit Settings..... | 50 |

Chapter 4 **Installation of Drivers**

| | |
|---------------------------------------|----|
| 4.1 Intel Chipset Driver..... | 54 |
| 4.2 Intel (R) VGA Chipset Driver..... | 57 |

| | |
|---|----|
| 4.3 Intel(R) Network adapter Driver..... | 62 |
| 4.4 Realtek HD Audio Driver Installation..... | 66 |
| 4.5 Microsoft .NET Framework 3.5 Service..... | 68 |

Chapter 5 **Touch Screen Installation**

| | |
|--|----|
| 5.1 Introduction to Touch Screen Controller Board..... | 70 |
| 5.2 Windows 2000/XP USB Driver Installation..... | 70 |

Chapter 1 Getting Started

1.1 Specifications

| | |
|----------------------------------|--|
| Model No. Specs | PC 8719 |
| System | |
| Processor | Support Core i3-2330E 2.2GHz processor |
| System Chipset | Intel QM67 PCH |
| System Memory | 2 x SO-DIMM(204pins) up to 16GB DDRIII 1066/1333MHz FSB |
| Storage | 2 x 2.5" SATA HDD space |
| External I/O Port | Onboard 2 x DB9 RS-232 (COM1.2) 1 x DVI-I 1 x HDMI 2 x RJ45 GbE LAN 4 x USB 2.0 1 x Mic-in, Line-Out 1 x DC Power 3 Pin terminal block connector 1 x 2 Pin remote power switch connector 2 x LED indication ----- By cable 1 x RS-232 COM4 1 x RS-422/485 default RS-485 COM3 1 x CF slot 1 x Rocker switch for power on/off 1 x 8 Pin terminal block 3 in/out/VCC/Ground for option |
| Expansion Slots | 1 x PCIe x16 or 1 x PCI slot, default 1 x PCIe x16 |
| OS support | Windows XP embedded, Windows embedded standard 7, Windows 7 Pro for embedded |
| LCD | |
| Display Type | 19" |
| Max. Resolution | 1280X1024 |
| Max. Color | 16.7M |
| Luminance (cd/m2) | 350 |
| View Angle | 170:160 |
| Backlight Lifetime | 50,000 hrs |

| Touch Screen | |
|-----------------------|-------------------------------|
| Type | Resistive Touch |
| Light Transmission | 80% |
| Power Supply | |
| Power Input | DC 9~32V |
| Mechanical | |
| Construction | Steel black |
| IP Rating | Front Panel IP65 |
| Mounting | Panel mount |
| Dimensions (WxHxD) | 19.06" x 15.75" x 4.69" |
| Environmental | |
| Operating Temperature | 0~50 ° C |
| Storage Temperature | -20~60 ° C |
| Storage Humidity | 10~90% @40 ° C non-condensing |
| Certificate | CE/FCC Class A |

1.2 Dimensions

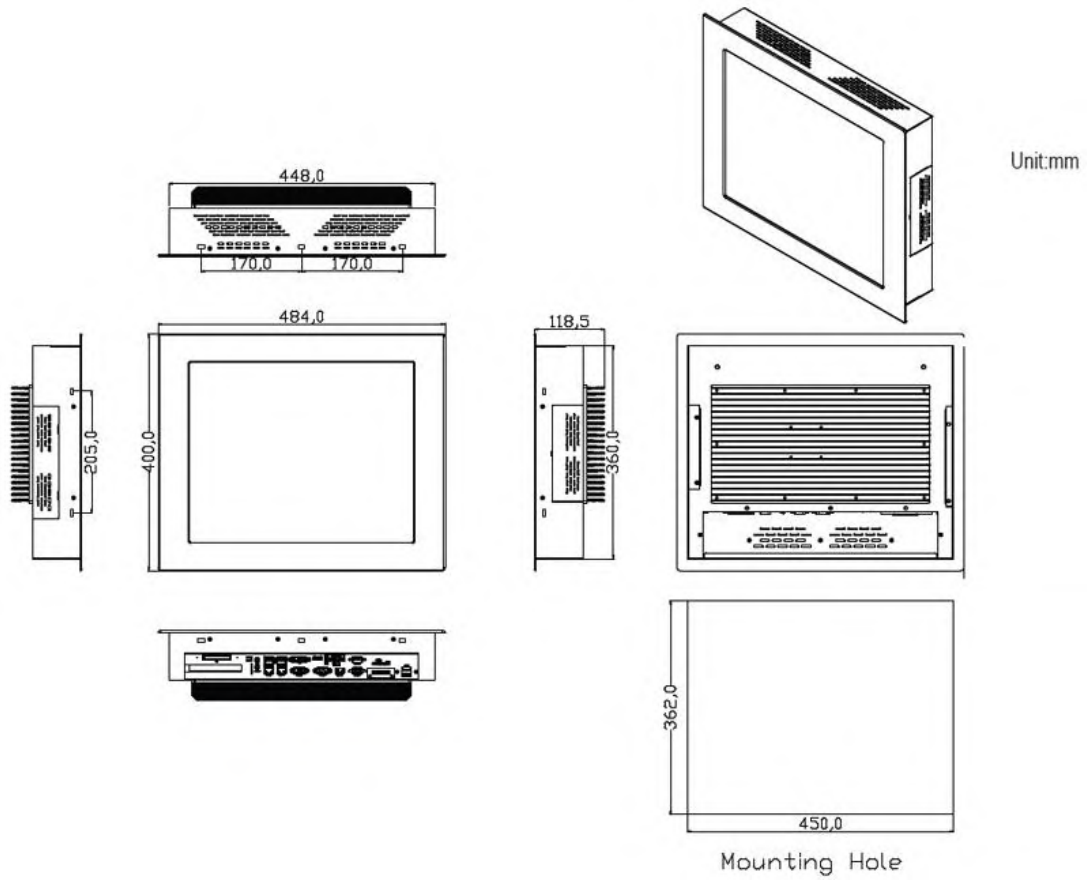


Figure 1.1 : Dimensions of PC 8719

1.3 Brief Description of PC 8719

The PC8719 is the fanless and high performance panel-mount industrial panel PC with 19" TFT LCD. It powered by QM67 chipset and support Core i3-2310M 2.1GHz Processor. The panel PC has a rich variety of functions and peripherals. It comes with 2 x 2.5-inch hard disk drive and 1 x CF space for data storage , support DDR3 memory up to 16G, support rich i/O, wide range 9~32V DC input, and also provide 1 x PCIe x 16 slot, it can ensure simplified connectivity to a variety of external peripheral devices. The OS supports windows XP embedded, Windows embedded standard 7. The unit deal for a wide range of applications including digital surveillance, data/image acquisition, factory automation and industrial applications.



Figure 1.2: Overview of PC 8719

Chapter 2 Hardware Installation

2.1 Mainboard Specifications

Introduction



Figure 2.1: Mainboard Overview

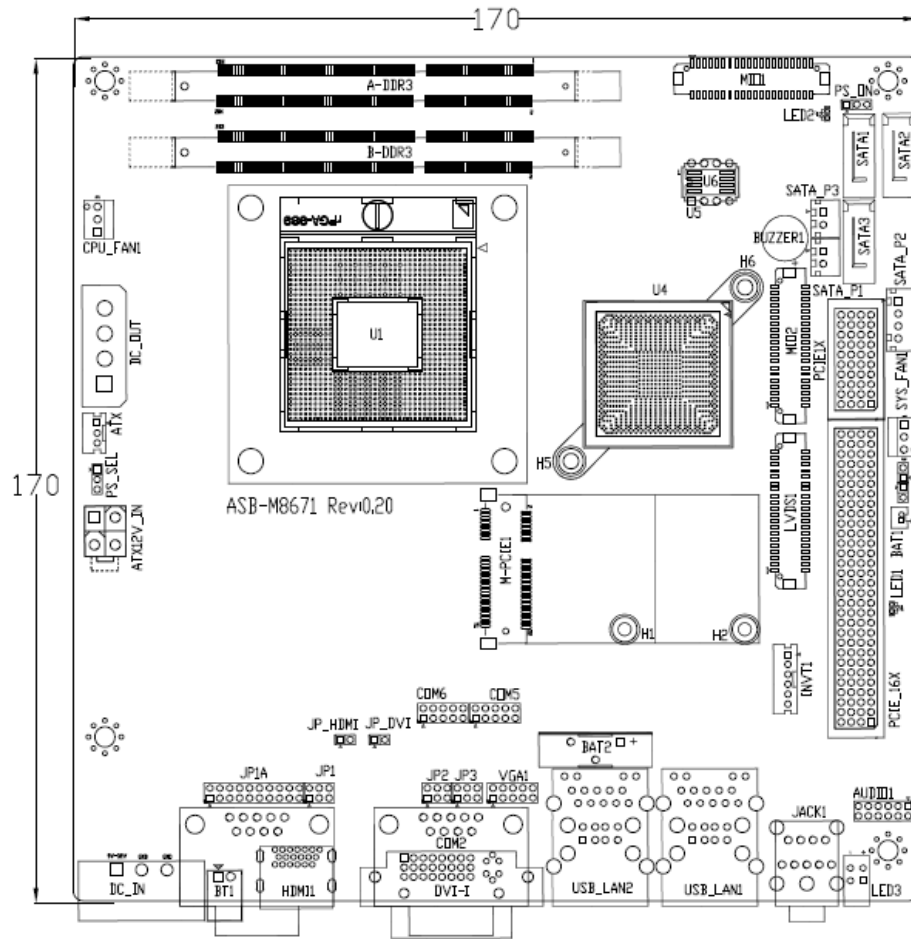


Figure 2.2: Mainboard Dimensions

IPC -M8671 is a Mini-ITX industrial motherboard developed on the basis of Intel QM67, which provides abundant peripheral interfaces to meet the needs of different customers. Also, it features dual GbE ports, 6-COM ports and one Mini PCIE configuration. To satisfy the special needs of high-end customers, ADotec designed 120Pin PCIe x16 and 40Pin PCIe x1 expansion interface. The product is widely used in various sectors of industrial control.

2.1 Specifications

| Specifications | |
|-----------------------|---|
| Board Size | 170mm x 170mm |
| CPU Support | Support Socket G2,2nd Gen Intel Core i3/i5/i7 Processor |
| Chipset | Intel QM67 |
| Memory Support | 2 x SO-DIMM (204pins), up to 8GB DDRIII 800/1066MHz FSB |
| Graphics | Intel HD Grapics 2000/3000 |
| Super I/O | Winbond W83627UHG |
| BIOS | AMIBIOS |

| | |
|------------------------------------|--|
| Storage | 4 x SATA Connector 1 x CFAST Slot (option) |
| Ethernet | 2 x PCIe Gbe LAN by Intel 82574L |
| USB | 4 x USB 2.0 stack ports for external 3 x USB 2.0 box Pin header for MIO1 4 x USB 2.0 box Pin header for MIO2 1 x USB 2.0 internal for mini PCIe |
| Serial | 1 x RS232/422/485 port, DB9 connector for external (COM1) pin 9 w/5V/12V/Ring select 1 x RS232 port, DB9 connector for external (COM2) pin 9 w/5V/12V/Ring select 1 x RS232 header for internal (COM5) 1 x RS232 header for internal (COM6), pin 9 w/5V/12V select I/O Card TB-522: 1 x 422/485 select header for internal MIO1 (COM3) 1 x RS232 header for internal MIO1 (COM4) |
| Digital I/O | 8-bit digital I/O by Pin header by MIO2 4-bit digital Input 4-bit digital Output |
| Battery | Support CR2477 Li battery by 2-pin header Support CR2032 Li battery (option) |
| Audio | Support Audio via Realtek ALC662 HD audio codec Support Line-out, MIC by JACK1 Support Line-in, Line-out, MIC by 2x6-pin header |
| Keyboard /Mouse | PS2 K/B and Mouse by MIO2 1 x PS/2 keyboard 1 x PS/2 mouse |
| Expansion Bus | 1 x PCI-express x16 extend by 4x30 pin socket 2 x PCI-express x1 extend by 4x10 pin socket 1 x mini-PCI-express slot 1 x CRT 2x5 Pin Header |
| Power Management | 1 x 3-pin power input connector (Wide range DC+9V~32V) 1 x ATX Power Input (2x2Pin and 3Pin, option) DC5V/12V output by 1x4 pin Connectors |
| Switches and LED Indicators | Power on/off switch by TB-522 or TB-523 Reset switch by MIO2 Power LED status by MIO2 |

| | |
|--------------------------|--|
| | HDD LED status by MIO2 |
| External I/O port | 2 x COM Ports (COM1/COM2) 4 x USB 2.0 Ports (stack) 2 x RJ45 GbE LAN Ports 1 x DVI-I Port 1 x HDMI Port 1 x Audio Ports (Mic, Line out) |
| Watchdog Timer | Software programmable 1 – 255 second by Super I/O |
| Temperature | Operating: -20°C to 70°C Storage: -40°C to 85°C |
| Humidity | 10% - 90%, non-condensing, operating |
| Power Consumption | 12V/3.80A (Intel i5-2430M 2.4GHz Processor with 4GB DDR3) |
| EMI/EMS | Meet CE/FCC class A |

2.2 Jumpers Setting and Connectors

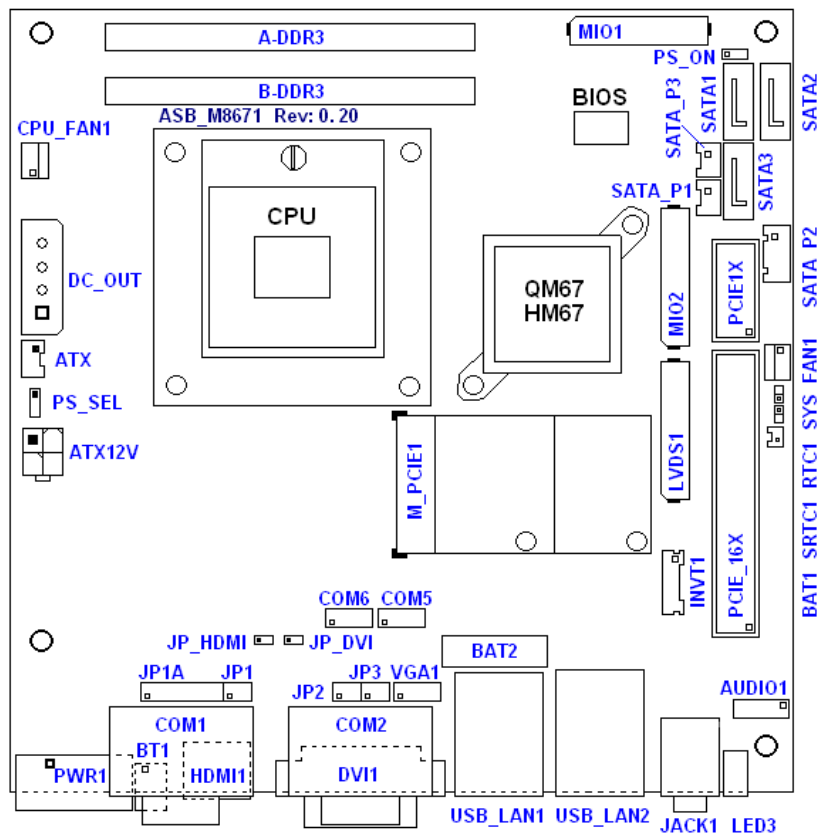


Figure 2.3: Jumpers and Connectors Location-TOP

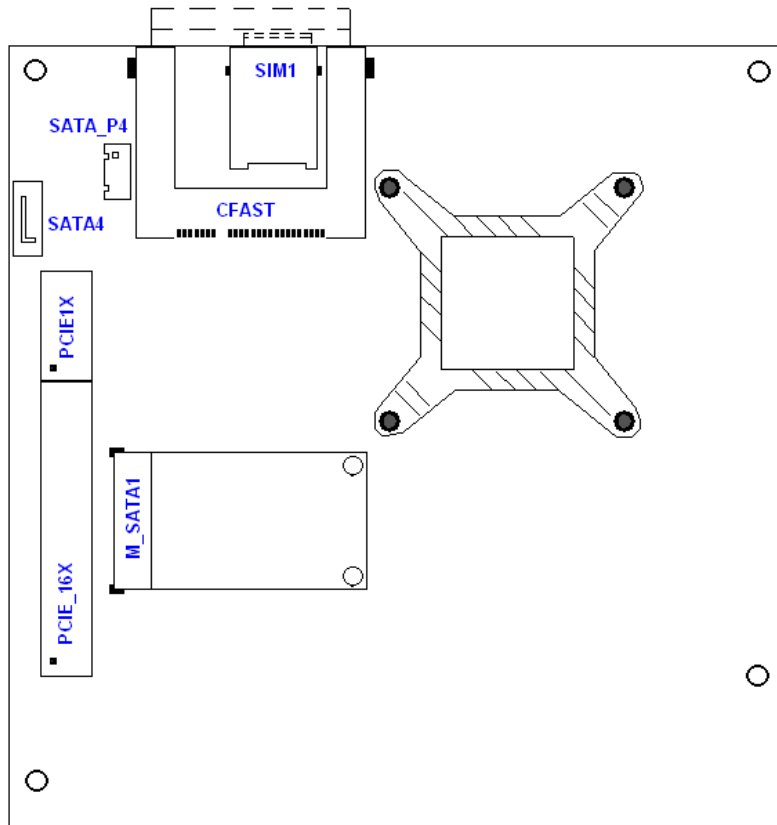


Figure 2.4: Jumpers and Connectors Location-Bottom

1. RTC1/SRTC1:

(2.0mm Pitch 1X2 Pin Header) CMOS clear jumper, CMOS clear operation will permanently reset old BIOS settings to factory defaults.

| RTC1/SRTC1 | CMOS |
|---|------------------|
| Open or (RTC1Pin1-SRTC1 Pin close) | NORMAL (Default) |
| Close 1-2 | Clear CMOS |



Procedures of CMOS clear:

- a) Turn off the system and unplug the power cord from the power outlet.
- b) To clear the CMOS settings, use the jumper cap to close pins1 and 2 for about 3 seconds then reinstall the jumper clip back to pins open.
- c) Power on the system again.
- d) When entering the POST screen, press the key to enter CMOS Setup Utility to load optimal defaults.
- e) After the above operations, save changes and exit BIOS Setup.

2. BAT1 :

(1.25mm Pitch 1X2 box Pin Header) 3.0V Li battery is embedded to provide power for CMOS.

| Pin# | Signal Name |
|------|-------------|
| Pin1 | VBAT |
| Pin2 | Ground |

3. PS_SEL:

(2.0mm Pitch 1X3 Pin Header),ATX Power and AT Power jumper setting.

| PS_SEL | Mode |
|------------------|----------------------------|
| Close 1-2 | ATX Power (Default) |
| Close 2-3 | AT Power |

4. PS_ON:

(2.0mm Pitch 1X3 Pin Header),ATX Power and Auto Power on jumper setting.

| PS_ON | Mode |
|------------------|--------------------------------|
| Close 1-2 | Auto Power on (Default) |
| Close 2-3 | ATX Power |

5. DCIN:


(5.08mm Pitch 1x3 Pin Connector),DC9V ~ DC32V System power input connector.



| Pin# | Power Input |
|------|-------------|
| Pin1 | DC+9V~32V |
| Pin2 | Ground |
| Pin3 | FG |

6. ATX12V_IN (ATX Power option):

(2x2 Pin Connector),DC12V System power **input** connector.

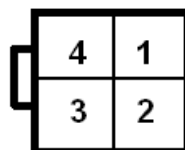

| Pin# | Power input |
|------|-------------|
| Pin1 | Ground |
| Pin2 | Ground |
| Pin3 | DC+12V |
| Pin4 | DC+12V |


7. ATX (ATX Power option):

(2.0mm Pitch 1X3 box Pin Header), connect PSON and 5VSB and Ground signal, support ATX Power model. **Reserved.**

| Pin# | Signal Name |
|------|-------------|
| Pin1 | ATX PSON |
| Pin2 | ATX Ground |
| Pin3 | ATX 5VSB |

8. DC_OUT:

(2x2 Pin Connector), DC12V and DC5V System power **output** connector.

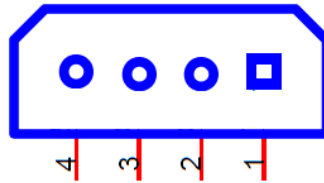


| Pin# | Power output |
|------|--------------|
| Pin1 | DC+12V |
| Pin2 | Ground |
| Pin3 | Ground |
| Pin4 | DC+5V |

9. U1:

(Socket G2), installing the 2nd GEN intel Core i3/i5/i7 CPU Socket.

10. CPU_FAN1/SYS_FAN1:

(2.54mm Pitch 1x3 Pin Header), Fan connector, cooling fans can be connected directly for use. You may set the rotation condition of cooling fan in menu of BIOS CMOS Setup.



| Pin# | Signal Name |
|------|-------------|
|------|-------------|

| | |
|---|--------------------|
| 1 | Ground |
| 2 | VCC |
| 3 | Rotation detection |



Note:

Output power of cooling fan must be limited under 5W.

11. A-DDR3/B-DDR3:

(SO-DIMM 204Pin socket), DDRIII memory socket, the socket is located at the Top of the board and supports 204Pin 1.5V DDRIII 1066/1333MHz FSB SO-DIMM memory module up to 16GB.


12. VGA1:

(CRT 2.0mm Pitch 2X5 Pin Header), Video Graphic Array Port, Provide 2x5Pin cable to VGA Port.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| CRT_RED | 1 | 2 | Ground |
| CRT_GREEN | 3 | 4 | Ground |
| CRT_BLUE | 5 | 6 | Ground |
| CRT_H_SYNC | 7 | 8 | CRT_DDCDATA |
| CRT_V_SYNC | 9 | 10 | CRT_DDCCLK |

13. INVT1:

(2.0mm Pitch 1x6 box Pin Header), Backlight control connector for LVDS1.

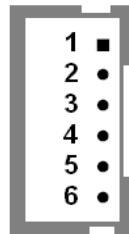

| Pin# | Signal Name |
|------|-------------|
| 1 | +DC12V |
| 2 | +DC12V |
| 3 | Ground |
| 4 | Ground |
| 5 | BKLT_EN |
| 6 | BKLT_CTRL |



Note:

Pin6 is backlight control signal, support DC or PWM mode, mode select at BIOS CMOS menu.

14. LVDS1:

(1.25mm Pitch 2x20 Connector), For 18/24-bit LVDS output connector, Fully supported by Intel QM67 chipset, the interface features dual channel 18/24-bit output.


| Signal Name | Pin# | Pin# | Signal Name |
|---------------|------|------|--------------|
| VDD5 | 2 | 1 | VDD5 |
| Ground | 4 | 3 | Ground |
| VDD33 | 6 | 5 | VDD33 |
| LB_D0_N | 8 | 7 | LA_D0_N |
| LB_D0_P | 10 | 9 | LA_D0_P |
| Ground | 12 | 11 | Ground |
| LB_D1_N | 14 | 13 | LA_D1_N |
| LA_D1_P | 16 | 15 | LA_D1_P |
| Ground | 18 | 17 | Ground |
| LB_D2_N | 20 | 19 | LA_D2_N |
| LB_D2_P | 22 | 21 | LA_D2_P |
| Ground | 24 | 23 | Ground |
| LB_CLK_N | 26 | 25 | LA_CLK_N |
| LB_CLK_P | 28 | 27 | LA_CLK_P |
| Ground | 30 | 29 | Ground |
| LVDS_DDC_DATA | 32 | 31 | LVDS_DOC_CLK |
| Ground | 34 | 33 | Ground |
| LB_D3_N | 36 | 35 | LA_D3_N |
| LB_D3_P | 38 | 37 | LA_D3_P |
| NC | 40 | 39 | NC |

15. JP_HDMI:

(2.0mm Pitch 1x2 Pin Header), Reserved.

16. HDMI1:


(HDMI 19P Connector), High Definition Multimedia Interface connector.

**17. JP_DVI:**

(2.0mm Pitch 1x2 Pin Header), Reserved.

18. DVI-I:

(DVI-I Connector), Digital Visual Interface-Integrated connector.

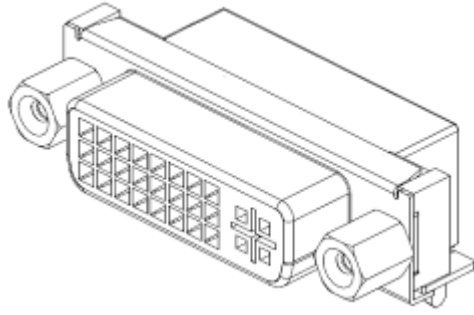

19. BT1:

POWER on/off Button, They are used to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

20. JP1:

(2.0mm Pitch 2x3 Pin Header), COM1 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM1 port.

| JP1 Pin# | Function |
|------------------|---|
| Close 1-2 | COM1 RI (Ring Indicator) (default) |
| Close 3-4 | COM1 Pin9=+5V (option) |
| Close 5-6 | COM1 Pin9=+12V (option) |


21. JP1A:

(2.0mm Pitch 2x10 Pin Header), COM1 jumper setting, it provides selectable RS232 or RS422 or RS485 serial signal output.

| Function | JP1A Pin# |
|------------------------|--|
| RS232 (Default) | Close: Pin1-3, Pin2-4, Pin7-9, Pin8-10, Pin13-14 |
| RS422 (option) | Close: Pin3-5, Pin6-8, Pin9-11, Pin10-12, Pin17-18 |
| RS485 (option) | Close: Pin3-5, Pin6-8, Pin9-11, Pin10-12, Pin15-16, Pin19-20 |

22. COM1:

(Type **DB9**), Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.

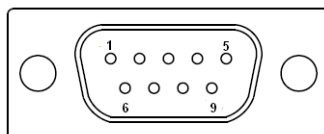

| RS232 (Default): | |
|-------------------------|---------------------------------------|
| Pin# | Signal Name |
| 1 | DCD# (Data Carrier Detect) |
| 2 | RXD (Received Data) |
| 3 | TXD (Transmit Data) |
| 4 | DTR (Data Terminal Ready) |
| 5 | Ground |
| 6 | DSR (Data Set Ready) |
| 7 | RTS (Request To Send) |
| 8 | CTS (Clear To Send) |
| 9 | JP1 select Setting (RI/5V/12V) |

| RS422 (option): | |
|------------------------|-------------|
| Pin# | Signal Name |
| 1 | 422_R- |
| 2 | 422_R+ |
| 3 | 422_T- |
| 4 | 422_T+ |
| 5 | Ground |
| 6 | NC |
| 7 | NC |
| 8 | NC |
| 9 | NC |

| RS485 (option): | |
|------------------------|-------------|
| Pin# | Signal Name |
| 1 | NC |
| 2 | NC |
| 3 | 485- |
| 4 | 485+ |
| 5 | Ground |
| 6 | NC |
| 7 | NC |
| 8 | NC |
| 9 | NC |


23. JP2:

(2.0mm Pitch 2x3 Pin Header), COM2 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM2 port.

| JP1 Pin# | Function |
|------------------|---|
| Close 1-2 | COM2 RI (Ring Indicator) (default) |
| Close 3-4 | COM2 Pin9=+5V (option) |
| Close 5-6 | COM2 Pin9=+12V (option) |

24. COM2:

(Type **DB9**),Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.

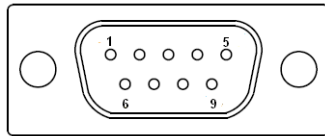

| Pin# | Signal Name |
|------|---------------------------------------|
| 1 | DCD# (Data Carrier Detect) |
| 2 | RXD (Received Data) |
| 3 | TXD (Transmit Data) |
| 4 | DTR (Data Terminal Ready) |
| 5 | Ground |
| 6 | DSR (Data Set Ready) |
| 7 | RTS (Request To Send) |
| 8 | CTS (Clear To Send) |
| 9 | JP2 select Setting (RI/5V/12V) |

25. COM5:

(2.0mm Pitch 2X5 Pin Header),COM5 Port, standard RS232 ports are provided. They can be used directly via COM cable connection.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| DCD | 1 | 2 | RXD |
| TXD | 3 | 4 | DTR |
| Ground | 5 | 6 | DSR |
| RTS | 7 | 8 | CTS |
| RI | 9 | 10 | NC |

26. JP3:

(2.0mm Pitch 1x3 Pin Header) COM6 setting jumper, pin 1~3 are used to select signal out of pin 9 of COM6 port.

| JP3 Pin# | Function |
|----------|----------|
|----------|----------|

| | | |
|-----------|---|----------|
| Close 1-2 | COM6 RI (Ring Indicator) (default) | |
| Close 3-4 | COM6 Pin9=+5V | (option) |
| Close 5-6 | COM6 Pin9=+12V | (option) |


27. COM6:

(2.0mm Pitch 2x5 Pin Header), COM6 Port, standard RS232 ports are provided. They can be used directly via COM cable connection. COM6 port is controlled by pins No.1~3 of JP3,select output Signal 5V or 12v, For details, please refer to description of **JP3**.

| Signal Name | Pin# | Pin# | Signal Name |
|--|------|------|-------------|
| DCD | 1 | 2 | RXD |
| TXD | 3 | 4 | DTR |
| Ground | 5 | 6 | DSR |
| RTS | 7 | 8 | CTS |
| JP3select Setting (RI/5V/12V) | 9 | 10 | NC |

28. USB_LAN1/USB_LAN2:


USB4/USB5/USB6/USB7 : (Double stack USB type A), Rear USB connector, it provides up to 4 USB2.0 ports, speed up to 480Mb/s.

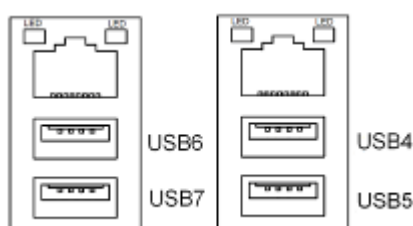

Each USB Type A Receptacle (2 Ports) Current limited value is 1.5A.


If the external USB device current exceeds 1.5A, please separate connectors into different Receptacle.

LAN1/LAN2: (RJ45 Connector), Rear LAN port, Two standard 10/100/1000M RJ-45 Ethernet ports are provided. Used Realtek RTL8111D chipset, LINK LED (green) and ACTIVE LED (yellow) respectively located at the left-hand and right-hand side of the Ethernet port indicate the activity and transmission state of LAN.

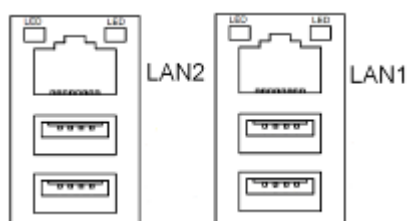

29. JACK1:

(Diameter 3.5mm Double stack Jack), HD Audio port, An onboard Realtek ALC662 codec is used to provide high quality audio I/O ports. Line Out can be connected to a headphone or amplifier, MIC is the port for microphone input audio.

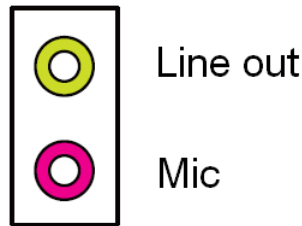

30. AUDIO1:

(2.0mm Pitch 2X6 Pin Header), Front Audio, An onboard Realtek ALC662 codec is used to provide high-quality audio I/O ports. Line Out can be connected to a headphone or amplifier. Line In is used for the connection of external audio source via a Line in cable. MIC is the port for microphone input audio.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| SPK_OUTL_P | 1 | 2 | SPK_OUTR_P |
| SPK_OUTL_N | 3 | 4 | SPK_OUTR_N |
| FRONT_JD | 5 | 6 | LINE1_JD |
| LINE_IN_L | 7 | 8 | LINE-IN-R |
| MIC2_IN_L | 9 | 10 | MIC2-IN-R |
| Ground_AUD | 11 | 12 | MIC2_JD |

31. LED3:

LED STATUS. Green LED for Motherboard Standby Power Good status, Yellow LED for HDD status.

32. LED2:

LED STATUS. Green LED for Motherboard Standby Power Good status.

33. LED1:

LED STATUS. Green LED for Motherboard Power status,

34. PCIE_16X (option):

(4x30 Pin), Riser Card expansion connector. Can expand support one PCIeX16 or two PCIeX8 Signal.

ASB-M8671T : PCIE_16X connector in the top.

ASB-M8671B : PCIE_16X connector in the Bottom.

35. PCIE1X (option):

(4x10 Pin),Riser Card expansion connector.Can expand support two PCIe Signal.

ASB-M8671T : PCIE1X connector in the top.

ASB-M8671B : PCIE1X connector in the Bottom.

| MODEL | PC1E16X / PCIE1X |
|------------|------------------|
| ASB-M8671T | Top |
| ASB-M8671B | Bottom |

36. M-PCIE1:

(Socket 52Pin),mini PCIe socket, it is located at the top, it supports mini PCIe devices with USB2.0, SMBUS and PCIe signal. MPCle card size is 30x30mm or 30x50.95mm.

37. H1/H2:

MPCIE1 SCREW HOLES, H1 for mini PCIE card (30mmx30mm) assemble. H2 for mini PCIE card (30mmx50.95mm) assemble.

38. BUZZER1:

Onboard buzzer.

39. MIO1:

(DF13-40P Connector),For expand output connector, It provides two RS232 ports or one RS485 port, three USB ports, one power led, one power button, via a dedicated cable connected to **TB-522 MIO1or TB-523 MIO1.**

| Function | Signal Name | Pin# | Pin# | Signal Name | Function |
|------------------------------|---------------|------|------|-------------|----------|
| COM3 RS422 or RS485 | 485+ / 422TX+ | 2 | 1 | 422RX+ | COM3 |
| | 485- / 422TX- | 4 | 3 | 422RX- | |
| | 3P3V_S0 | 6 | 5 | Ground | |
| | WAN_LED | 8 | 7 | NC | |
| | 5V_S5 | 10 | 9 | 5V_S5 | |
| COM4 | RXD4 | 12 | 11 | DCD4- | COM4 |
| | DTR4- | 14 | 13 | TXD4 | |
| | DSR4- | 16 | 15 | Ground | |
| | CTS4- | 18 | 17 | RTS4- | |
| | 5V_S5 | 20 | 19 | RI4- | |
| USB10 | 5V_USB_1011 | 22 | 21 | 5V_S5 | USB9 |
| | USB10_N | 24 | 23 | USB9_N | |
| | USB10_P | 26 | 25 | USB9_P | |

| | | | | | |
|--------|----------|----|----|-------------|-------|
| | Ground | 28 | 27 | Ground | USB11 |
| | Ground | 30 | 29 | Ground | |
| Power | 3P3V_S0 | 32 | 31 | 5V_USB_1011 | |
| LED | PWR_LED- | 34 | 33 | USB11_N | |
| Power | MIO_PSON | 36 | 35 | USB11_P | |
| Button | Ground | 38 | 37 | Ground | |
| | NC | 40 | 39 | NC | |

40. MIO2:

(DF13-40P Connector),Front panel connector.

| Function | Signal Name | Pin# | Pin# | Signal Name | Function |
|-----------|-------------|------|------|-------------|----------|
| P_LED+ | PWR-LED | 2 | 1 | HDD_LED | H_LED+ |
| P_LED- | Ground | 4 | 3 | USB01_OC- | |
| PSON+ | MIO_PSON- | 6 | 5 | USB23_OC- | |
| PSON- | Ground | 8 | 7 | RESET | RESET+ |
| BUZZER- | BUZZER- | 10 | 9 | BUZZER+ | BUZZER+ |
| GPIO_OUT1 | PCH_GPIO68 | 12 | 11 | PCH_GPIO12 | GPIO_IN1 |
| GPIO_OUT2 | PCH_GPIO69 | 14 | 13 | PCH_GPIO15 | GPIO_IN2 |
| GPIO_OUT3 | PCH_GPIO70 | 16 | 15 | PCH_GPIO58 | GPIO_IN3 |
| GPIO_OUT4 | PCH_GPIO71 | 18 | 17 | PCH_GPIO75 | GPIO_IN4 |
| PS2_Mouse | 5V_S5_USB | 20 | 19 | Ground | PS2_K/B |
| | PS2_MSDATA | 22 | 21 | PS2_KBDATA | |
| | PS2_MSCLK | 24 | 23 | PS2_KBCLK | |
| USB3 | 5V_S5_USB | 26 | 25 | 5V_S5_USB | USB2 |
| | USB3_N | 28 | 27 | USB2_N | |
| | USB3_P | 30 | 29 | USB2_P | |
| | Ground | 32 | 31 | Ground | |
| USB1 | 5V_S5_USB | 34 | 33 | 5V_S5_USB | USB0 |
| | USB1_N | 36 | 35 | USB0_N | |
| | USB1_P | 38 | 37 | USB0_P | |
| | Ground | 40 | 39 | Ground | |

Pin1- Ground: **HDD LED**, They are used to connect hard disk activity LED. The LED blinks when the hard disk is reading or writing data.

Pin2- Pin4: **POWER LED**, They are used to connect power LED. When the system is powered on or under S0/S1 state, the LED is normally on, when the system is under S4/S5 state, the LED is off.

Pin3: **USB01 OC-**, "USB01_OC-" Signal.

Pin5: **USB23 OC-**, "USB23_OC-" Signal.

Pin7- Ground: **RESET Button**, They are used to connect reset button. The two pins are disconnected under normal condition. You may short them temporarily to realize system reset.

Pin6- Pin8: **POWER on/off Button**, They are used to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

Pin9- Pin10: **BUZZER**, They are used to connect an external buzzer.

Pin11~Pin18: **GPIO IN/GPIO OUT**, General-purpose input/output port, it provides a group of self-programming interfaces to customers for flexible use.

Pin19~Pin24: **PS2 KB/MS**, PS/2 keyboard and mouse port, the port can be connected to PS/2 keyboard and mouse via a dedicated cable for direct used.

Pin25~40: **USB0/USB1/USB2/USB3**, Front USB connector, it provides 4 USB ports via a dedicated USB cable, speed up to 480Mb/s.



Note:

When connecting LEDs and buzzer and GPIO and USB, pay special attention to the signal polarity. Make sure that the connector pins have a one-to-one correspondence with chassis wiring, or it may cause boot up failure.

41. **SATA_P1/SATA_P3:**

(2.5mm Pitch 1x2 box Pin Header), Two onboard 5V output connectors are reserved to provide power for SATA devices.

| Pin# | Signal Name |
|------|-------------|
| 1 | +DC5V |
| 2 | Ground |



Note:

Output current of the connector must not be above 1A.

42. **SATA_P2/SATA_P4:**

(2.5mm Pitch 1x4 box Pin Header), Two onboard 5V and 12V output connectors are reserved to provide power for SATA devices.

| Pin# | Signal Name |
|------|-------------|
| 1 | +DC5V |
| 2 | Ground |
| 3 | Ground |
| 4 | +DC12V |



Note:


Output current of the connector must not be above 1A.

43. SATA1/SATA2/SATA3/SATA4:

(SATA 7P), SATA Connectors, Four SATA connectors are provided, SATA1 and SATA2 transfer speed up to 6.0Gb/s, SATA3 and SATA4 transfer speed up to 3.0Gb/s, RAID controller supporting RAID 0/1/5/10.

44. CFAST (option):

(CFAST Card socket), it is located at the bottom of the board and serves as an insert interface for CFAST card.

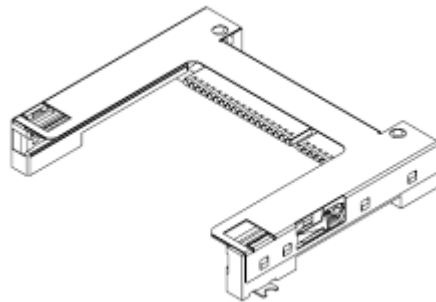

45. SIM (option):

(SIM Socket 7Pin), Support SIM Card devices.

46. M_SATA1:

(50.95mmx30mm Socket 52Pin), mSATA socket, it is located at the top, it supports mini PCI-e devices with LPC bus, **B2 mSATA bus** for flash disk signal.

47. H3/H4:

M_SATA1 SCREW HOLES,


H3 and H4 for mini MSATA card (50.95mmx30mm Socket 52 Pin) assemble.

48. CPU SCREW HOLES:

CPU FAN SCREW HOLES, Four screw holes for fixed CPU Cooler assemble.

49. TB-525E161:

TB-525E161 connect to ASB-M8671T PCIE_16X connector, PCIE_16X is located at the top, it provides one PCIE X16 slot.

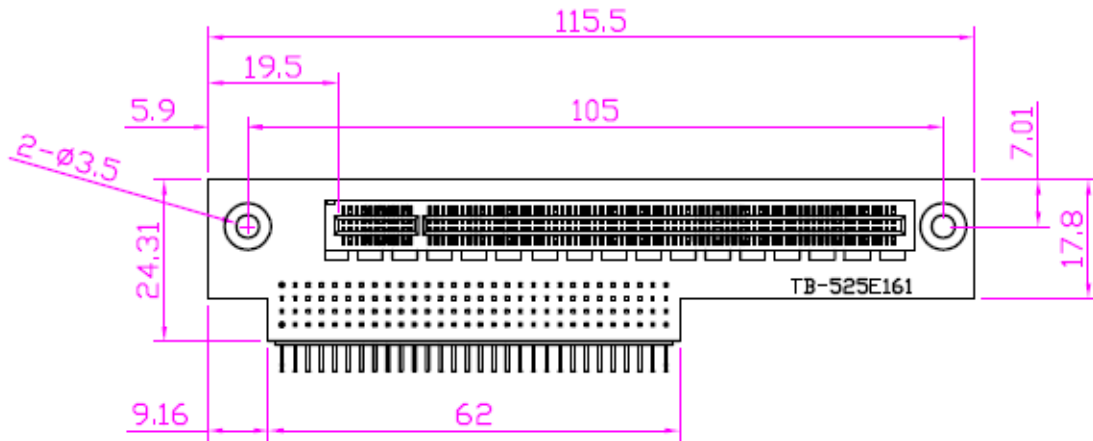

3.1 Operations after POST Screen

After CMOS discharge or BIOS flashing operation, press [Delete] key to enter CMOS Setup.



After optimizing and exiting CMOS Setup, the POST screen displayed for the first time is as follows and includes basic information on BIOS, CPU, memory, and storage devices.

3.2 BIOS SETUP UTILITY

Press [Delete] key to enter BIOS Setup utility during POST, and then a main menu containing system summary information will appear.



| | | |
|--|---------------------|-----------------------|
| BIOS Information | | Choose the system |
| BIOS Vendor | American Megatrends | Default language |
| Core Version | 4.6.4.0 | |
| Compliance | UEFI 2.1 | |
| Project Version | M8671V01 X64 | |
| Build Date and Time | 05/21/2012 16:15:28 | |
| System Language | [English] | |
| System Date | [Sun 07/10/2012] | →←: Select Screen |
| System Time | [00:00:08] | ↑↓ : Select Item |
| Access Level | Administrator | Enter: Select |
| | | +/- : Change Opt. F1 |
| | | : General Help F2: |
| | | Previous Values |
| | | F3:Optimized Defaults |
| | | F4:Save and Exit |
| | | ESC Exit |
| Version 2.10.1208. Copyright (C) 2010 American Megatrends , Inc. | | |

3.3 System Overview

Main Settings

| Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc. | | | | | |
|--|---------------------|---------|------|----------|-------------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| BIOS Information | | | | | Choose the system |
| BIOS Vendor | American Megatrends | | | | Default language |
| Core Version | 4.6.4.0 | | | | |
| Compliance | UEFI 2.1 | | | | |
| Project Version | M8671V01 X64 | | | | |
| Build Date and Time | 05/21/2012 16:15:28 | | | | |
| System Language | [English] | | | | |

| | | |
|--|------------------|-----------------------|
| System Date | [Sun 07/10/2012] | →←: Select Screen |
| System Time | [00:00:08] | ↑↓ : Select Item |
| Access Level | Administrator | Enter: Select |
| | | +/- : Charge Opt. F1 |
| | | : General Help F2: |
| | | Previous Values |
| | | F3:Optimized Defaults |
| | | F4:Save and Exit |
| | | ESC Exit |
| Version 2.10.1208. Copyright (C) 2010 American Megatrends , Inc. | | |

System Time:

Set the system time, the time format is:

Hour : 0 to 23

Minute : 0 to 59

Second : 0 to 59

System Date:

Set the system date, the date format is:

Day: Note that the „Day“ automatically changes when you set the date.


Month: 01 to 12

Date: 01 to 31

Year: 1998 to 2099

3.4 Advanced Settings

| Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc. | | | | | |
|--|--------------------------|------------|------|----------|------------------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| | Legacy OpROM Support | | | | Enable or Disable Boot |
| | Launch Storage OpROM | [Disabled] | | | Option for Legacy |
| | Launch Storage OpROM | [Enabled] | | | Network Devices. |
| | ▶ PCI Subsystem Settings | | | | |
| | ▶ ACPI Settings | | | | |
| | ▶ CPU Configuration | | | | |
| | ▶ SATA Configuration | | | | |
| | ▶ Thermal Configuration | | | | |
| | ▶ PCH-FW Configuration | | | | |

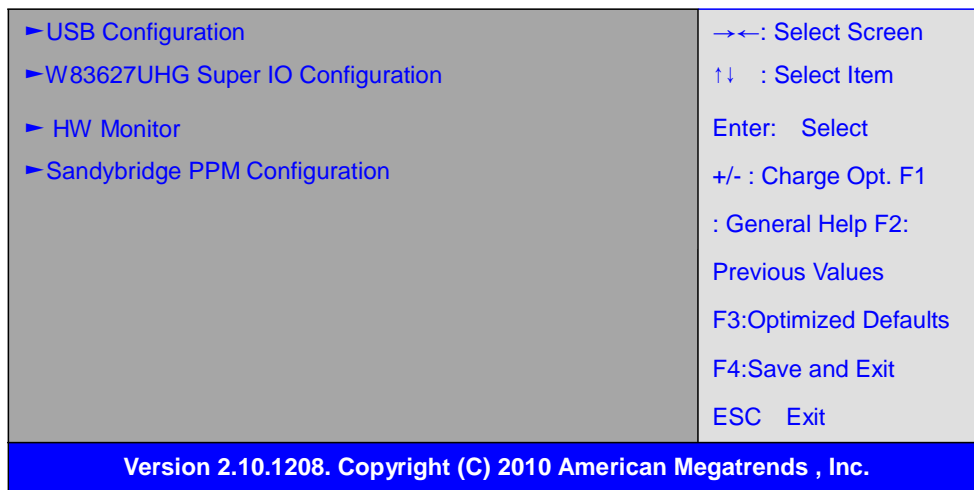

3.4.1 PCI Subsystem Settings

PCI Bus Driver Versio V2.03.00

PCI ROM Priority:

[EFI Compatible ROM]

[Legacy ROM]

PCI Common Settings:

PCI Latency Timer:

[32 PCI Bus Clocks]

[64 PCI Bus Clocks]

[96 PCI Bus Clocks]

[128 PCI Bus Clocks]

[160 PCI Bus Clocks]

[192 PCI Bus Clocks]

[224 PCI Bus Clocks]

[248 PCI Bus Clocks]

VGA Palette Snoop:

[Disabled]

[Enabled]

PERR# Generation:

[Disabled]

[Enabled]

SERR# Generation:

[Disabled]

[Enabled]

PCI Express Device Settings:

Relaxed Ordering:

[Disabled]

[Enabled]

Extended Tag:

[Disabled]

[Enabled]

No Snoop:

[Enabled]

[Disabled]

Maximum Payload:

[Auto]

[128 Bytes]

[256 Bytes]

[512 Bytes]

[1024 Bytes]

[2048 Bytes]

[4096 Bytes]

Maximum Read Request:

[Auto]

[128 Bytes]

[256 Bytes]

[512 Bytes]

[1024 Bytes]

[2048 Bytes]

[4096 Bytes]

PCI Express Link Settings:

ASPM Support:

[Disabled]

[Enabled]

WARNING:Enabling ASPM may cause some
PCI-E devices to fail

Extended Synch:

[Disabled]

[Enabled]

3.4.2 ACPI Settings

Enable ACPI Auto Configuration:

[Disabled]

[Enabled]

Enable Hibernation:

[Enabled]

[Disabled]

ACPI Sleep State:

[S3 (Suspend to RAM)]

[Suspend Disabled]

[S3 (Suspend to RAM)]

Lock Legacy Resources:

[Disabled]

[Enabled]

3.4.3 CPU Configuration

Socket 0 CPU Information:

Intel(R) Core(TM) i5-2430M CPU @2.40GHz

CPU Signature 206a7

Microcode Patch 25

Max CPU Speed 2400 MHz

Min CPU Speed 800 Mhz

Processor Cores 2

Intel HT Technology Supported

Intel VT-x Technology Supported

L1 Data Cache 32 KB x 2

L1 Code Cache 32 KB x 2

L2 Cache 256 KB x 2

L3 Cache 3072 KB

CPU Speed 2400 MHz

64-bit Supported

Hyper-Threading:

[Enabled]

[Disabled]

Active Processor Cores

[All]

[1]

Limit CPUID Maximum:

[Disabled]

[Enabled]

Execute Disable Bit:

[Enabled]

[Disabled]
Hardware Prefetcher
[Enabled]
[Disabled]

Adjacent Cache Line Prefetch
[Enabled]
[Disabled]

Intel Virtualization Technology
[Enabled]
[Disabled]

3.4.4 SATA Configuration

SATA Controller(S):
[Enabled]
[Disabled]

SATA Mode Selection:
[IDE]
[AHCI]
[RAID]

SATA Test Mode:
[Disabled]
[Enabled]

Serial ATA Port 0 Empty
 Software Preserve Unknown

Serial ATA Port 1 Empty
 Software Preserve Unknown

Serial ATA Port 2 Empty
 Software Preserve Unknown

Serial ATA Port 3 Empty
 Software Preserve Unknown

Serial ATA Port 4 Empty
 Software Preserve Unknown

| | |
|-------------------|---------|
| Serial ATA Port 5 | Empty |
| Software Preserve | Unknown |

3.4.5 Thermal Configuration

Platform Thermal Configuration

3.4.6 PCH-FW Configuration

| | |
|----------------------------------|-------------------|
| ME FW Version | 0.0.0.0 |
| ME Firmware Mode | |
| ME Firmware Type | Full Sku Firmware |
| ME Firmware SKU | Unidentified |
| ME Firmware Update Configuration | |
| ME FW Image Re-Flash | [Disabled] |
| | [Enabled] |

3.4.7 USB Configuration

USB Configuration

USB Devices:

1 keyboard, 2 Hubs

Legacy USB Support:

[Enabled]

[Disabled]

EHCI Hand-off:

[Disabled]

[Enabled]

Port 60/64 Emulation

[Enabled]

[Disabled]

USB hardware delays and time-outs:

USB transfer time-out:

[20 sec]

[10 sec]

[5 sec]

[1 sec]

Device reset time-out:

[20 sec]

[10 sec]

[30 sec]
[40 sec]
Device power-up delay
[Auto]
[Manual]

3.4.8 W83627UHG Super IO Configuration

W83627UHG Super IO Configuration
Super IO Chip Winbond W83627UHG
COM1 Configuration
COM2 Configuration
COM3 Configuration
COM4 Configuration
COM5 Configuration
COM6 Configuration

3.4.9 HW Monitor

PC Health Status

System temperature : +48 C
CPU temperature : +52
CPU Fan Speed : 6000 RPM
VCORE : +1.145V
+12V : +11.685 V
+3.3V : +3.280 V
+1.5V : +1.520 V
5VSB : +5.010 V
VBAT : +3.136 V


3.4.10 Sandybridge PPM Configuration

Sandybridge PPM Configuration

EIST
[Enabled]
[Disabled]
Turbo Mode
[Enabled]
[Disabled]
CPU C3 Report
[Enabled]
[Disabled]

| | |
|----------------------------|-------------------------|
| CPU C6 report | [Enabled] [Disabled] |
| CPU C7 report | [Enabled] [Disabled] |
| Long duration power limit | 0 |
| Long duration maintained | 28 |
| Short duration power limit | 0 |
| TCC active offset | 0 |

3.5 Chipset Settings

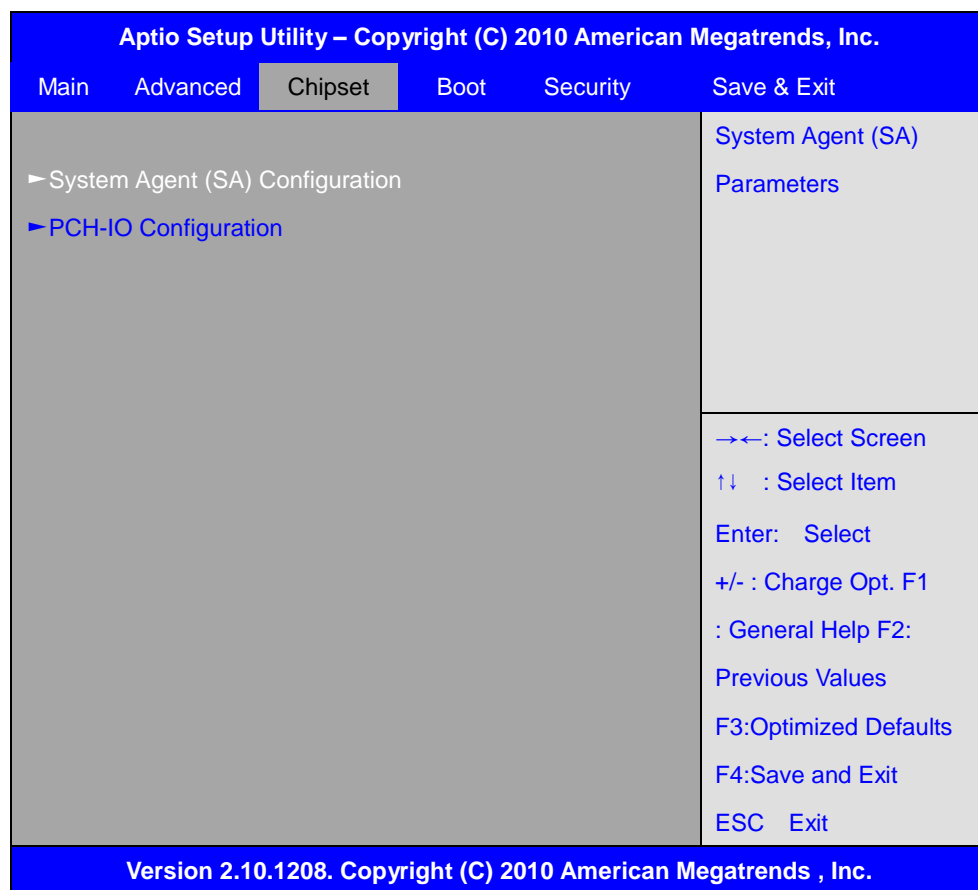

- 3.5.1 ► **System Agent (SA) Configuration**
 ► **PCH-IO Configuration**

System Agent (SA) Configuration

System Agent RC Version 1.2.1.0

| | |
|-----------------------------|--|
| VT-d Capability | Unsupported |
| CHAP Device (B0:D7:F0) | [Enabled] [Disabled] |
| Thermal Device (B0:D4:F0) | [Disabled] [Enabled] |
| Enable NB CRID | [Disabled] [Enabled] |
| ▶ Graphics Configuration | |
| IGFX VBIOS Version | 2120 |
| IGFX Frequency | 650 MHz |
| Graphics Turbo IMON Current | 31 |
| Primary Display | [Auto] [IGFX] [PEG] [PCI] |
| Internal Graphics | [Auto] [Disabled] [Enabled] |
| GTT Size | [2MB] [1MB] |
| Aperture Size | [256MB] [128MB] [512MB] |
| DVMT Pre-allocated | [64MB] [0MB] [32MB] [96MB] [128MB] [160MB] [192MB] [224MB] [256MB] |

| | |
|--------------------|------------|
| | [288MB] |
| | [320MB] |
| | [352MB] |
| | [384MB] |
| | [416MB] |
| | [448MB] |
| | [480MB] |
| | [512MB] |
| Dvmt Total Gfx Mem | |
| | [256MB] |
| | [128MB] |
| | [MAX] |
| GFX Low Power Mode | |
| | [Enabled] |
| | [Disabled] |

LCD Control:

Primary IGFX Boot Display

[VBIOS Default]
[CRT]
[DVI]
[LVDS]
HDMI]

LCD Panel Type

| | |
|----------------|--------|
| [1024 X 768 | LVDS1] |
| [640 X 480 | LVDS] |
| [800 X 600 | LVDS] |
| [1280 X 1024 | LVDS] |
| [1400X1050(RB) | LVDS1] |
| [1400X1050 | LVDS2] |
| [1600 X 1200 | LVDS] |
| [1366 X 768 | LVDS] |
| [1680 X 1050 | LVDS] |
| [1920 X 1200 | LVDS] |
| [1440 X 900 | LVDS] |
| [1600 X 900 | LVDS] |
| [1024 X 768 | LVDS2] |
| [1280 X 800 | LVDS] |
| [1920 X 1080 | LVDS] |
| [2048 X 1536 | LVDS] |

SDVD-LFP Panel Type

[VBIOS Default]
[1024 x 768 SDVO-LFP]
[1080 x1024 SDVO-LFP]
[1400 x 1050 SDVO-LFP]
[1600 x 1200 SDVO-LFP]

Panel Scaling

[Auto]
[Off]
[Force Scaling]

Backlight Control

[PWM Inverted]
[PWM Normal]
[GMBus Inverted]
[GMBus Normal]

BIA

[Auto]
[Disabled]
[Level 1]
[Level 2]
[Level 3]
[Level 4]
[Level 5]

Spread Spectrum clock chip

[Off]
[Hardware]
[Software]

TV1 Standard

[VBIOS Default]
[NTSC_M]
[NTSC_M_J]
[NTSC_433]
[PAL_B]
[PAL_G]
[PAL_D]
[PAL_H]
[PAL_I]
[PAL_M]
[PAL_N]
[SECAM_L]

]

TV2 Standard

[SECAM_B]
[SECAM_D]
[SECAM_G]
[SECAM_H]
[SECAM_K]
[HDTV_STD_SMPTE_240M_1080i59]
[HDTV_STD_SMPTE_240M_1080i60]
[HDTV_STD_SMPTE_295M_1080i50]
[HDTV_STD_SMPTE_295M_1080p50]
[HDTV_STD_SMPTE_296M_720p50]
[HDTV_STD_SMPTE_296M_720p60]
[HDTV_STD_CEAEIA_7702A_480p60]

[HDTV_STD_CEAEIA_7702A_480i60]

[VBIOS Default]

[NTSC_M]
[NTSC_M_J]
[NTSC_433]
[PAL_B]
[PAL_G]
[PAL_D]
[PAL_H]
[PAL_I]
[PAL_M]
[PAL_N]
[SECAM_L]
[SECAM_B]
[SECAM_D]
[SECAM_G]
[SECAM_H]
[SECAM_K]
[HDTV_STD_SMPTE_240M_1080i59]
[HDTV_STD_SMPTE_240M_1080i60]
[HDTV_STD_SMPTE_295M_1080i50]
[HDTV_STD_SMPTE_295M_1080p50]
[HDTV_STD_SMPTE_296M_720p50]
[HDTV_STD_SMPTE_296M_720p60]
[HDTV_STD_CEAEIA_7702A_480p60]

]

[HDTV_STD_CEAEIA_7702A_480i60]

| | |
|-------------------------|--|
| ALS Support | [Disabled] [Enabled] |
| Active LFP | [Int-LVDS] [No-LVDS] [SDVO LVDS] [eDP Port-A] [eDP Port-D] |
| Panel Color Depth | [18 Bit] [24 Bit] |
| ▶ DMI Configuration | |
| ▶ NB PCIe Configuration | |
| PEG0 | [Not Present] |
| PEG0 – Gen X | [Auto] [Gen1] [Gen2] |
| PEG1 | [Not Present] |
| PEG1 – Gen X | [Auto] [Gen1] [Gen2] |
| PEG2 | [Not Present] |
| PEG2 – Gen X | [Auto] [Gen1] [Gen2] |
| PEG3 | [Not Present] |
| PEG3 – Gen X | [Auto] [Gen1] [Gen2] |
| Always Enable PEG | [Disabled] [Enabled] |
| PEG ASPM | [Disabled] |

[Auto]
[ASPM LOs]
[ASPM L1]
[ASPM LOsL1]

ASPM LOs

[Root Port Only]
[Endpoint Port Only]
[Both Root and Endpoint Ports]

De-emphasis Control

[-3.5 dB]
[-6 dB]

► Memory Configuration

| | |
|------------------------------|----------------|
| Memory RC Version | 1.2.10 |
| Memory Frequency | 1333 Mhz |
| Total Memory | 2048 MB (DDR3) |
| DIMM#0 | 2048 MB (DDR3) |
| DIMM#1 | Not Present |
| DIMM#2 | Not Present |
| DIMM#3 | Not Present |
| CAS Latency (tCL) | 9 |
| Minimum delay time | |
| CAS to RAS (tRPmin) | 9 |
| Row Precharge (tRPmin) | 9 |
| Active to Precharge (tRPmin) | 24 |

DIMM profile

[Default DIMM profile]
[XMP profile 1]
[XMP profile 2]

Memory Profile

[Auto]
[1067]
[1333]
[1600]
[1867]
[2133]

ECC Support

[Enabled]

| | |
|---|--|
| | [Disabled] |
| Max TOLUD | [Dynamic] [1GB] [1.25GB] [1.5GB] [1.75GB] [2GB] [2.25GB] [2.5GB] [2.75GB] [3GB] [3.25GB] |
| NMode Support | [Auto] [1N Mode] [2N Mode] |
| Memory Scrambler | [Enabled] [Disabled] |
| RMT Crosser Support Memory Scrambler | [Disabled] [Enabled] |
| MRC Fast Boot | [Enabled] [Disabled] |
| Force Cold Reset | [Enabled] [Disabled] |
| Scrambler Seed Generation off | [Disabled] [Enabled] |
| Memory Remap | [Enabled] [Disabled] |
| Channel A DIMM Control | [Enabled Both DIMMS] [Disabled DIMM0] [Disabled DIMM1] [Disabled Both DIMMS] |

| | |
|----------------------------------|-------------------------|
| ▶ Memory Thermal Configuration | |
| Memory Thermal Management | [Enabled] [Disabled] |
| PECI Injected Temperature | [Disabled] [Enabled] |
| EXTTS# via TS-on-Board | [Disabled] [Enabled] |
| EXTTS# via TS-on-DIMM | [Disabled] [Enabled] |
| Virtual Temperature Sensor (VTS) | [Disabled] [Enabled] |
| ▶ GT-Power Management Control | |
| GT Info | GT2 (0X116) |
| RC6 (Render Standby) | [Enabled] [Disabled] |
| GT overClocking Support | [Disabled] [Enabled] |

3.6 Boot Settings

| Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc. | | | | | |
|--|----------|-----------------------|------|----------------------|-----------------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| Boot Configuration | | | | Number of seconds to | |
| Setup Prompt Timeout | | 1 | | | Wait for setup |
| Bootup Numlock State | | [On] | | | Activation key. |
| Quiet Boot | | [Disabled] | | | 65535(0xFFFF)means |
| Fast Boot | | [Enabled] | | | Indefinite waiting. |
| Skip VGA | | [Disabled] | | | |
| Skip USB | | [Disabled] | | | |
| Skip PS2 | | [Disabled] | | | |
| CSM16 Module Version | | 07.68 | | | |
| Gatea20 Active | | [Upon Request] | | | |
| Option ROM Messages | | [Force BIOS] | | | |
| Interrupt 19 Capture | | [Enabled] | | | →←: Select Screen |
| CSM Support | | [Enabled] | | | ↑↓ : Select Item |
| Boot Option Priorities | | | | | Enter: Select |
| Boot Option #1 | | [SATA PM: Hitachi...] | | | +/- : Change Opt. F1 |
| Hard Drive BBS Priorities | | | | | : General Help F2: |
| | | | | | Previous Values |
| | | | | | F3:Optimized Defaults |
| | | | | | F4:Save and Exit |
| | | | | | ESC Exit |

Setup Prompt Timeout [1]

Bootup Numlock State
[On]
[off]

Quiet Boot
[Enabled]
[Disabled]

CSM16 Module Verison 07.64
Gatea20 Active

Option ROM Messages [Upon Request]
 [Always]

Interrupt 19 Capture [Force BIOS]
 [Keep Current]

[Disabled]
 [Enabled]


Boot Override
 SATA PM: ST9320423AS

 Launch EFI Shell from filesystem device


3.7 Security Settings

| Aptio Setup Utility – Copyright (C) 2010 American Megatrends, Inc. | | | | | |
|---|----------|---------|------|--|-------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| Password Description If ONLY the Administrator's password is set, Then this only limits access to Setup and is Only asked for when entering Setup. If ONLY the User's password is set, then this Is a power on password and must be entered to Is a power on password and must be entered to Boot or enter Setup. In Setup the User will Have Administrator rights. The password length must be 3 to 20 Characters long. | | | | Set Administrator Password | |
| Administrator Password User Password | | | | →←: Select Screen ↑↓ : Select Item Enter: Select +/- : Change Opt. F1 : General Help F2: Previous Values F3:Optimized Defaults F4:Save and Exit ESC Exit | |
| Version 2.10.1208. Copyright (C) 2010 American Megatrends , Inc. | | | | | |

3.7.1 Administrator Password



3.7.2 User Password




Type the password with up to 20 characters and then press <Enter> key. This will clear all previously typed CMOS passwords. You will be requested to confirm the password. Type the password again and press <Enter> key. You may press <Esc> key to abandon password entry operation.

To clear the password, just press <Enter> key when password input window pops up. A confirmation message will be shown on the screen as to whether the password will be disabled. You will have direct access to BIOS setup without typing any password after system reboot once the password is disabled.

Once the password feature is used, you will be requested to type the password each time you enter BIOS setup. This will prevent unauthorized persons from changing your system configurations.

Also, the feature is capable of requesting users to enter the password prior to system boot to control unauthorized access to your computer. Users may enable the feature in Security Option of Advanced BIOS Features. If Security Option is set to System, you will be requested to enter the password before system boot and when entering BIOS setup; if Security Option is set to Setup, you will be requested for password for entering BIOS setup.

3.8 Save & Exit Settings

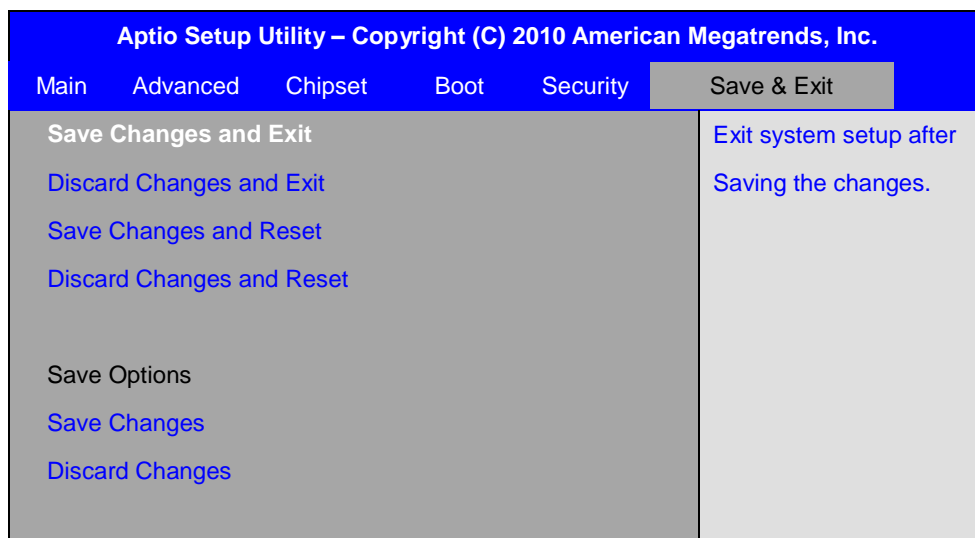

| | |
|--|-----------------------|
| Restore Defaults | →←: Select Screen |
| Save user Defaults | ↑↓ : Select Item |
| Restore user Defaults | Enter: Select |
| | +/- : Charge Opt. F1 |
| Boot Override | : General Help F2: |
| SATA PM:*** ... | Previous Values |
| Launch EFI Shell from filesystem device | F3:Optimized Defaults |
| | F4:Save and Exit |
| | ESC Exit |
| Version 2.10.1208. Copyright (C) 2010 American Megatrends , Inc. | |

Save Changes and Exit

Save & Exit Setup save Configuration and exit ?

[Yes]

[No]

Discard Changes and Ext

Exit Without Saving Quit without saving?

[Yes]

[No]

Save Changes and Reset

Save & reset Save Configuration and reset?

[Yes]

[No]

Discard Changes and Reset

Reset Without Saving Reset without saving?

[Yes]

[No]

Save Changes

Save Setup Values Save configuration?

[Yes]

[No]

Discard Changes

Load Previous Values Load Previous Values?

[Yes]

[No]

Restore Defaults

Load Optimized Defaults Load optimized Defaults?

[Yes]

[No]

Save user Defaults

Save Values as User Defaults Save configuration?

[Yes]

[No]

Restore user Defaults

Restore User Defaults Restore User Defaults?

[Yes]

[No]

Launch EFI Shell from filesystem device

WARNING Not Found

[ok]

Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows XP. The software and drivers are included with the motherboard. The contents include **Intel QM67 Chipset Driver, Intel (R) VGA Chipset Driver, Intel (R) Network Adapter, Realtek ALC662 Audio Codec Driver, Microsoft .NET Framework 3.5 Service, Touch Panel Driver.**

Installation instructions are given below.

Important Note:

After installing your Windows operating system (Windows XP), you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.



4.1 Intel Chipset Driver

To install the Intel chipset driver, please follow the steps below.

Step 1. Access Industrial Panel PC. Select **Intel QM67 Chipset Driver**.



Step 2. Click **Next** to setup program.



Step 3. Read the license agreement. Click **Yes** to accept the terms of the license agreement.



Step 4. Click **Next** to continue.



Step 5. Click Next.



Step 6. Select Yes, I want to restart this computer now. Click **Finish** then remove any installation media from the drives.




4.2 Intel (R) VGA Chipset Driver

To install the VGA drivers, follow the steps below to proceed with the installation.


Step 1. Select **Intel(R) VGA Chipset Driver**.



Step 2. Click **Yes** to continue.

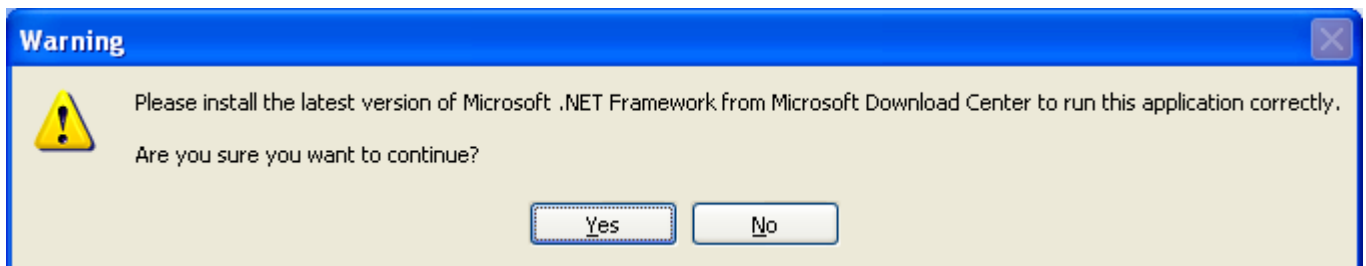


Step 3. Click **Next** to continue setup program.

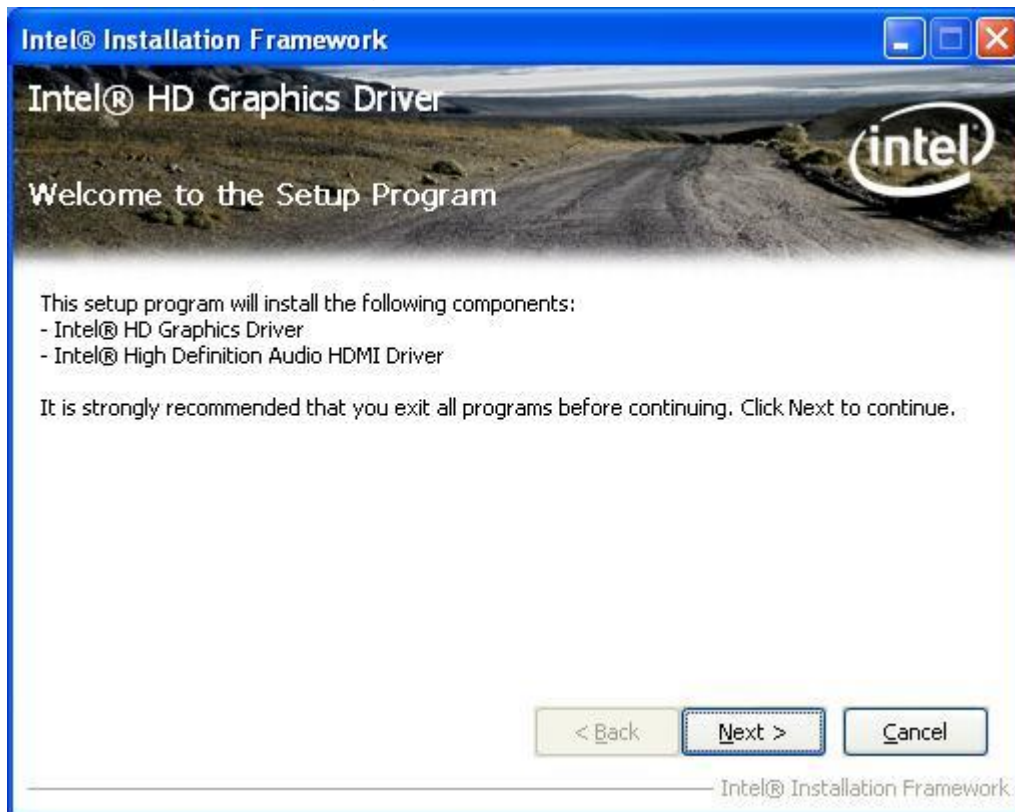

Step 4. Read the license agreement. Click **Yes** to accept the license agreement.



Step 5. Click Next.

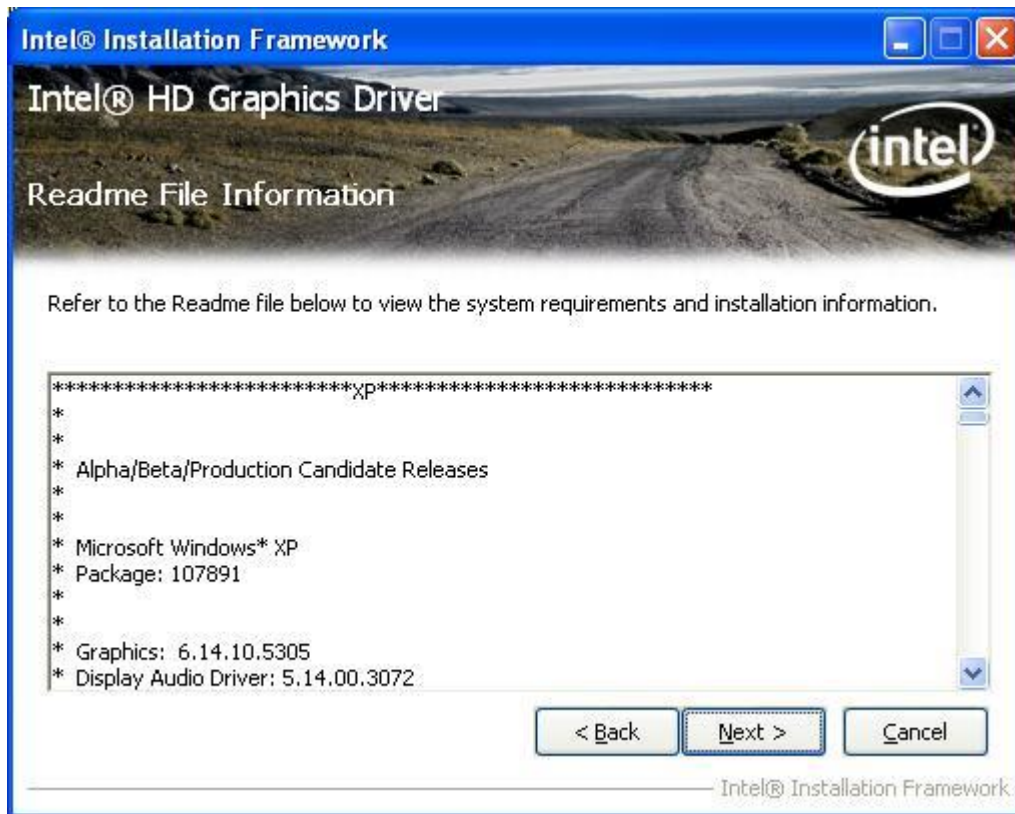


Step 6. Click Continue Anyway.




Step 7. Click Continue Anyway.



Step 8. Click Next.

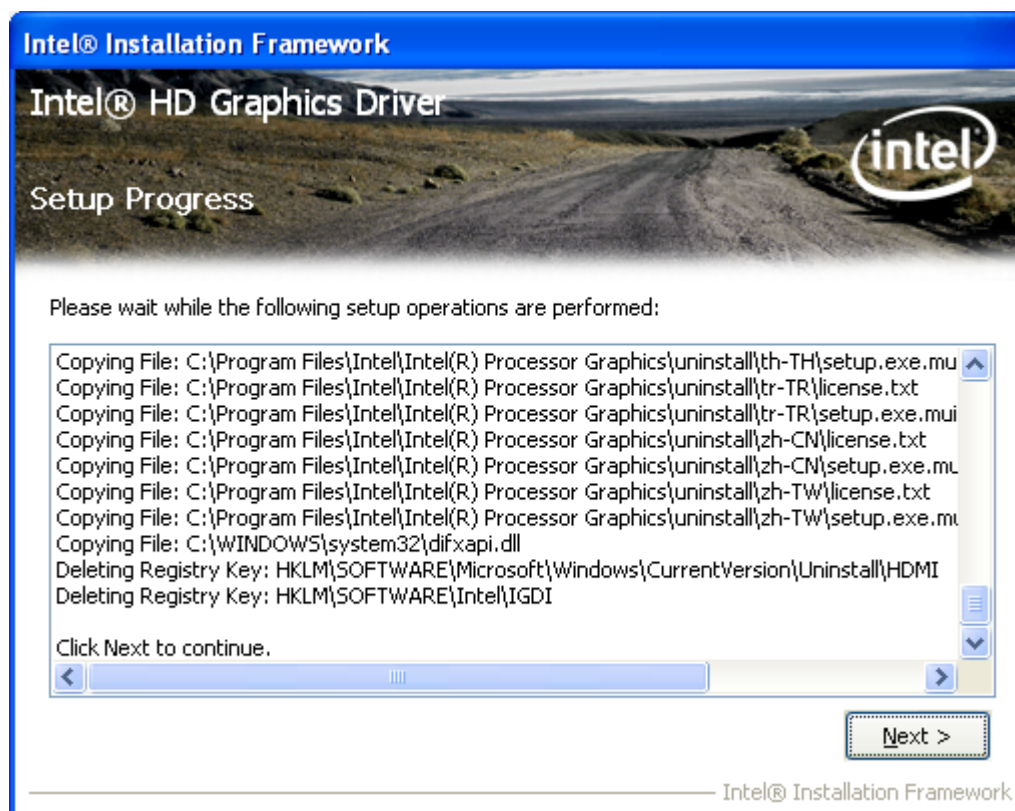

Step 9. Select **Yes, I want to restart this computer now.** Click **Finish.**

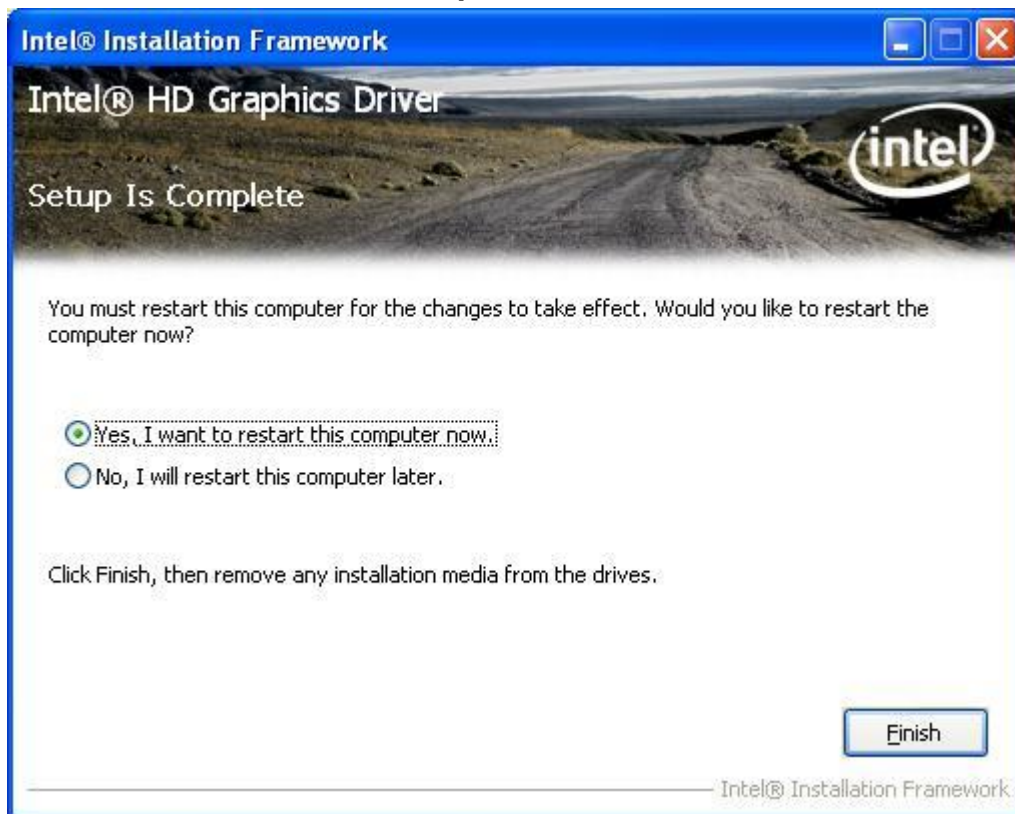


4.3 Intel(R) Network Adapter Driver

To install the Intel 82574L Network adapter Driver, please follow the steps below.


Step 1. Select **Intel(R) Network Adapter**.




Step 1. Wait for extracting the files then click **Next** to continue.

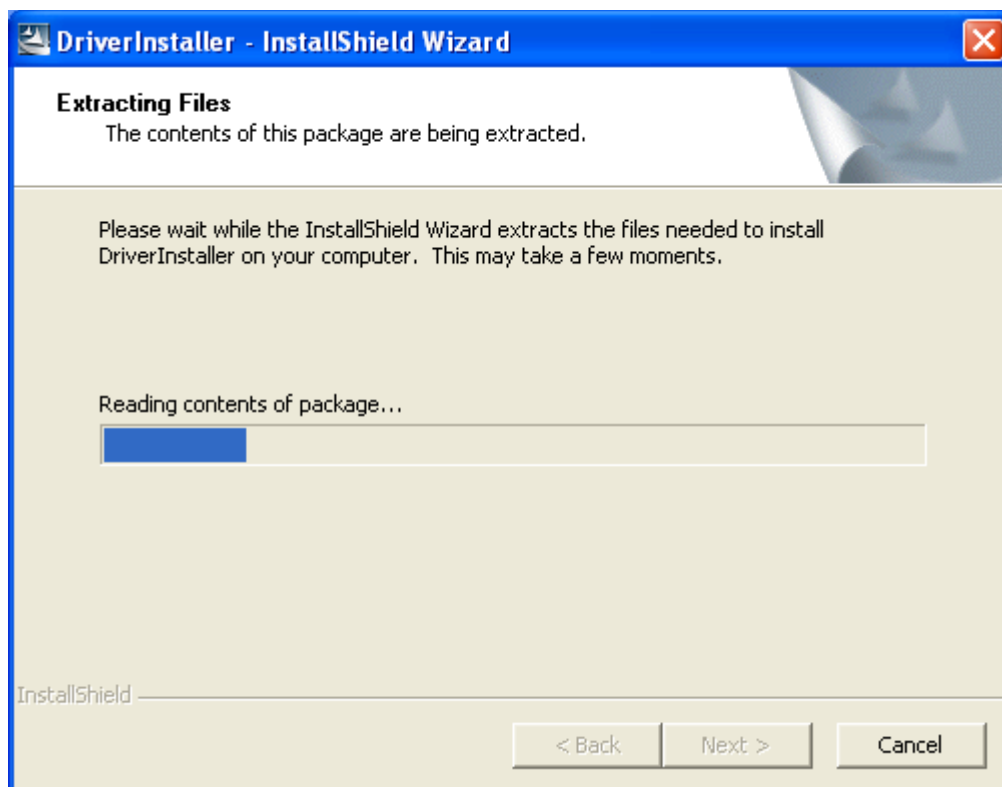

Step 2. Click **Next**.

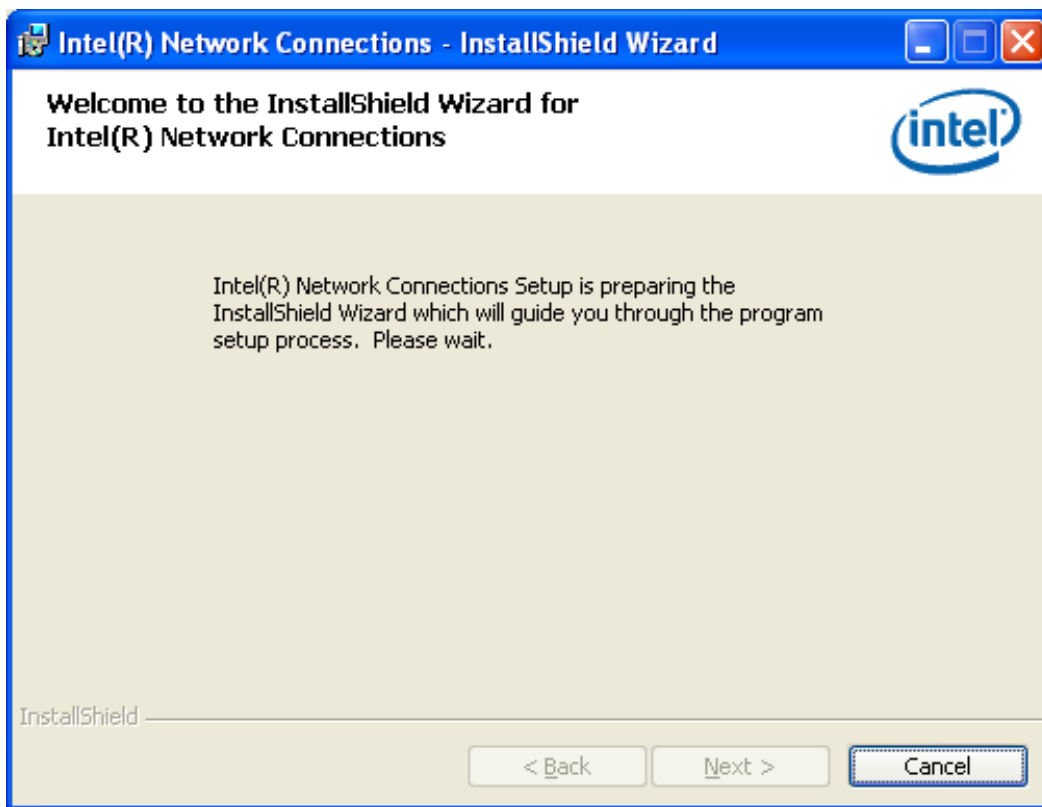


Step 3. Read the license agreement. Select **I accept the terms in the license agreement** then click **Next** to continue.

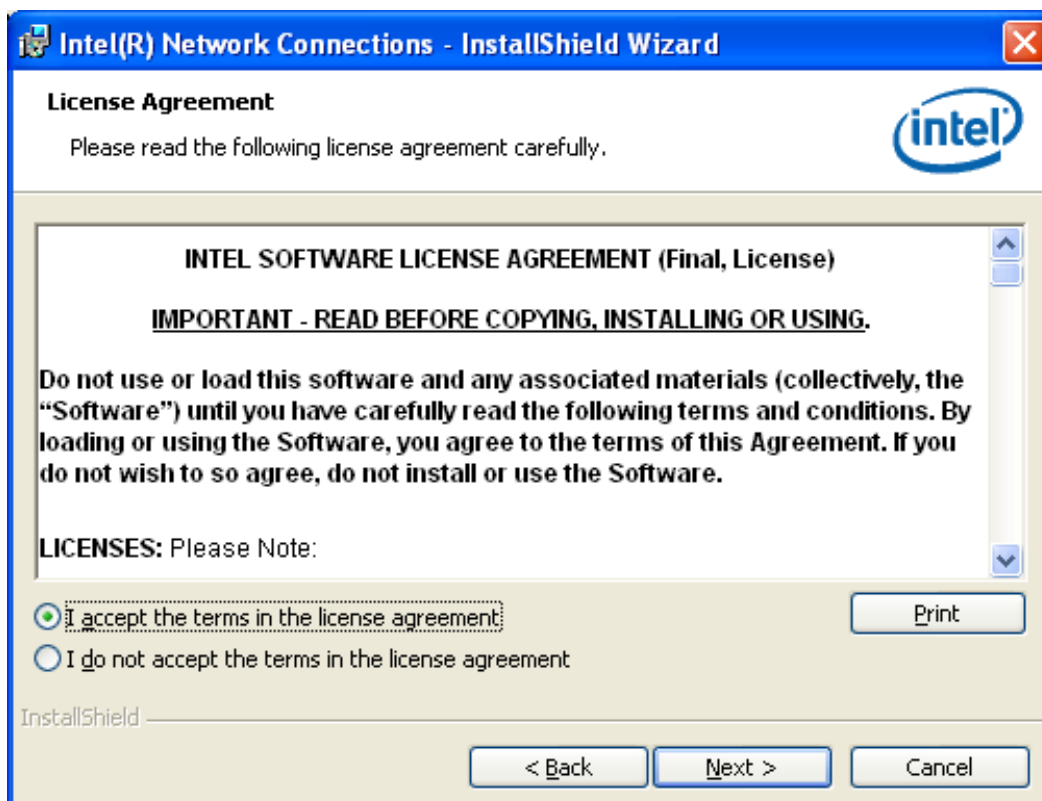


Step 4. Select **Drivers, Intel(R) PROSet for Windows* Device Manager, Advanced Network**


Services. Click **Next** to continue.

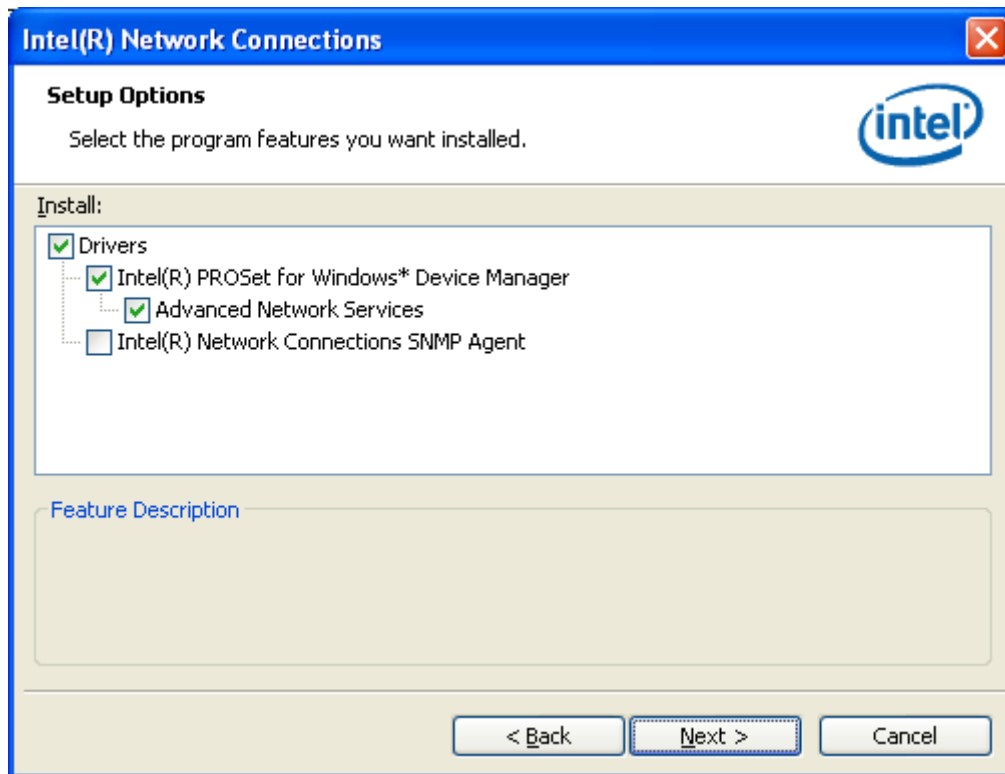

Step 5. Click **Install** to begin the installation.

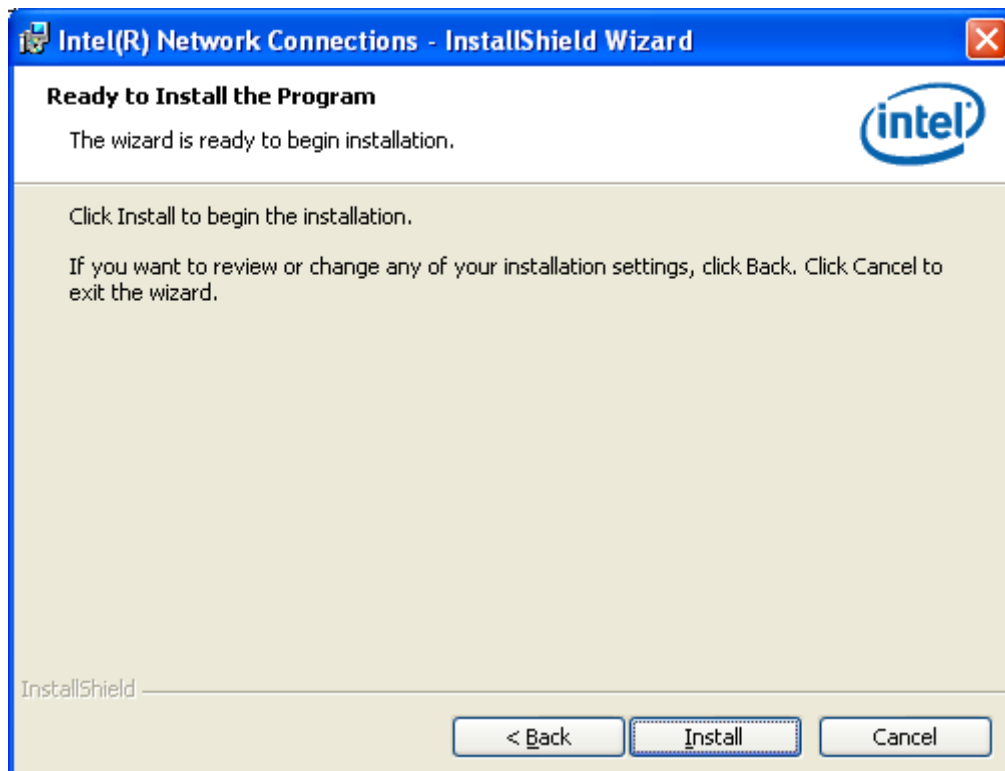

Step 6. Click **Finish** to complete the installation.

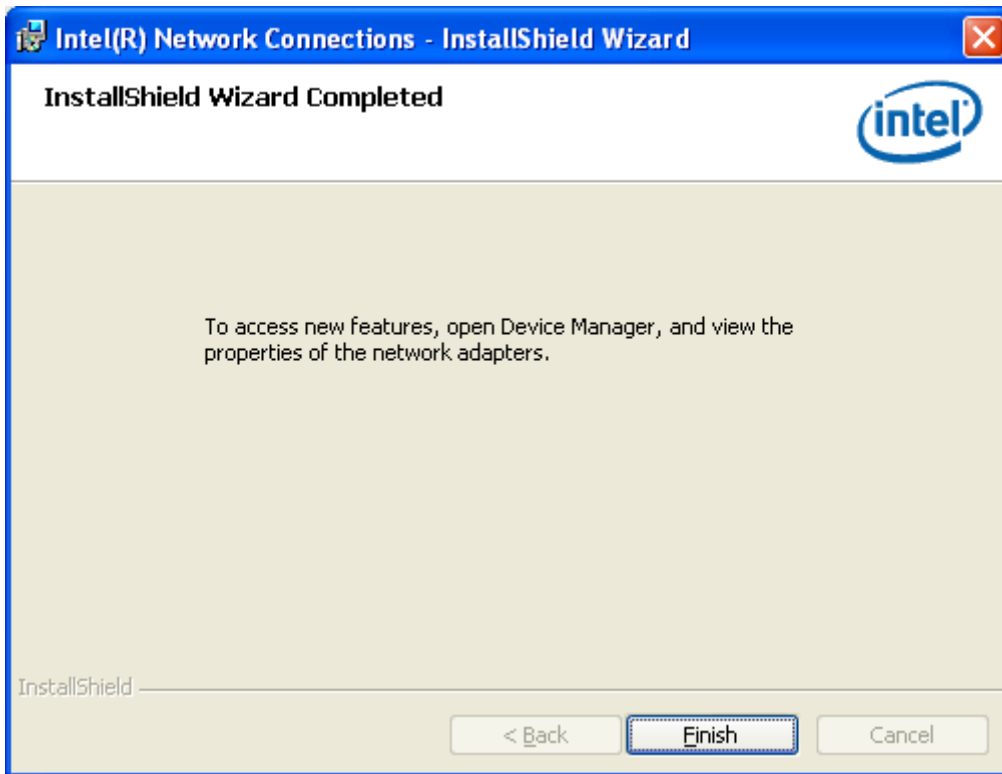


4.4 Realtek HD Audio Driver Installation

To install the Realtek High Definition (HD) Audio driver, please follow the steps below.


Step 1. Select **Realtek ALC662 HD Audio Codec Driver** from the list.




Step 2. Wait for extracting the files then click **Next** to continue.

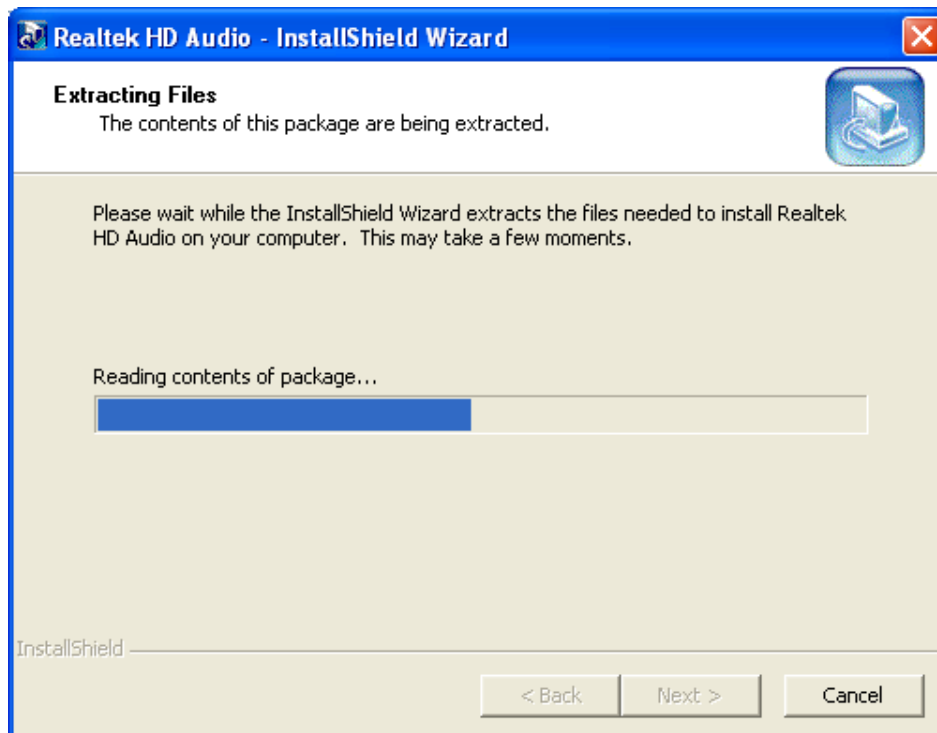

Step 3. Click **Next** to continue the installation.

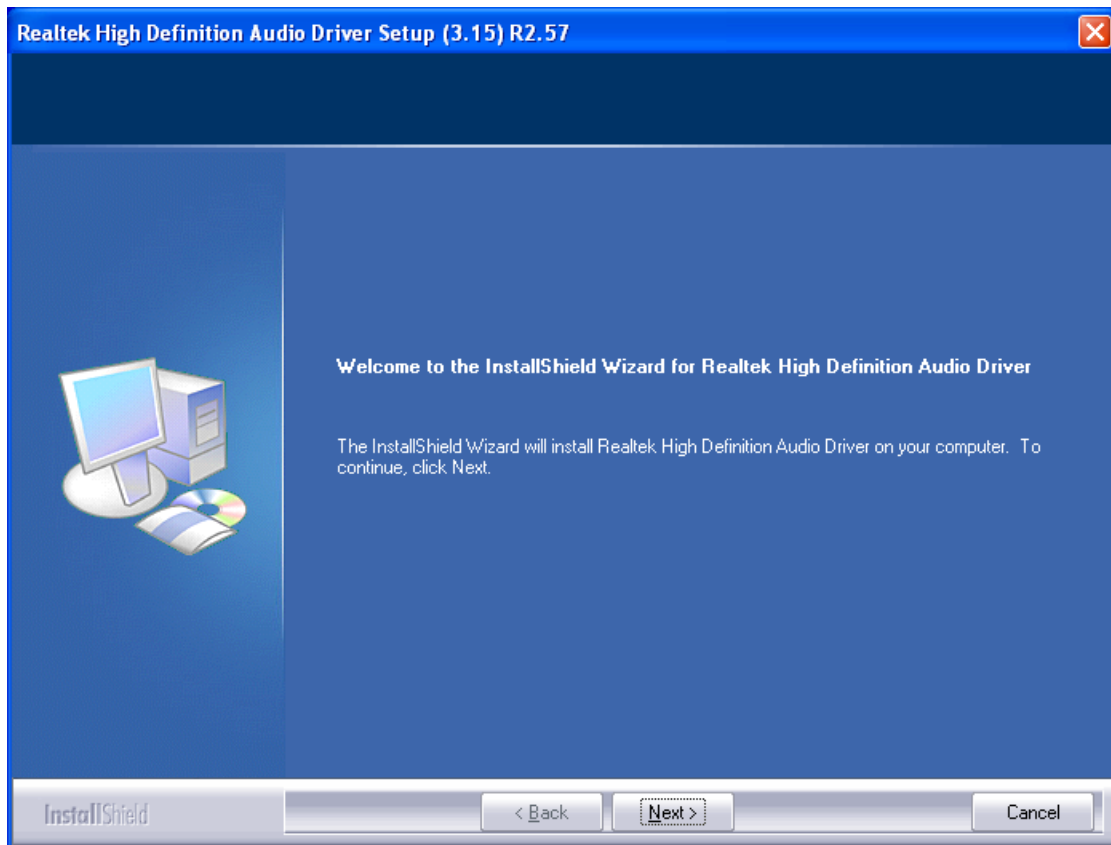

Step 4. Select **Yes, I want to restart my computer now.** then click **Finish.**

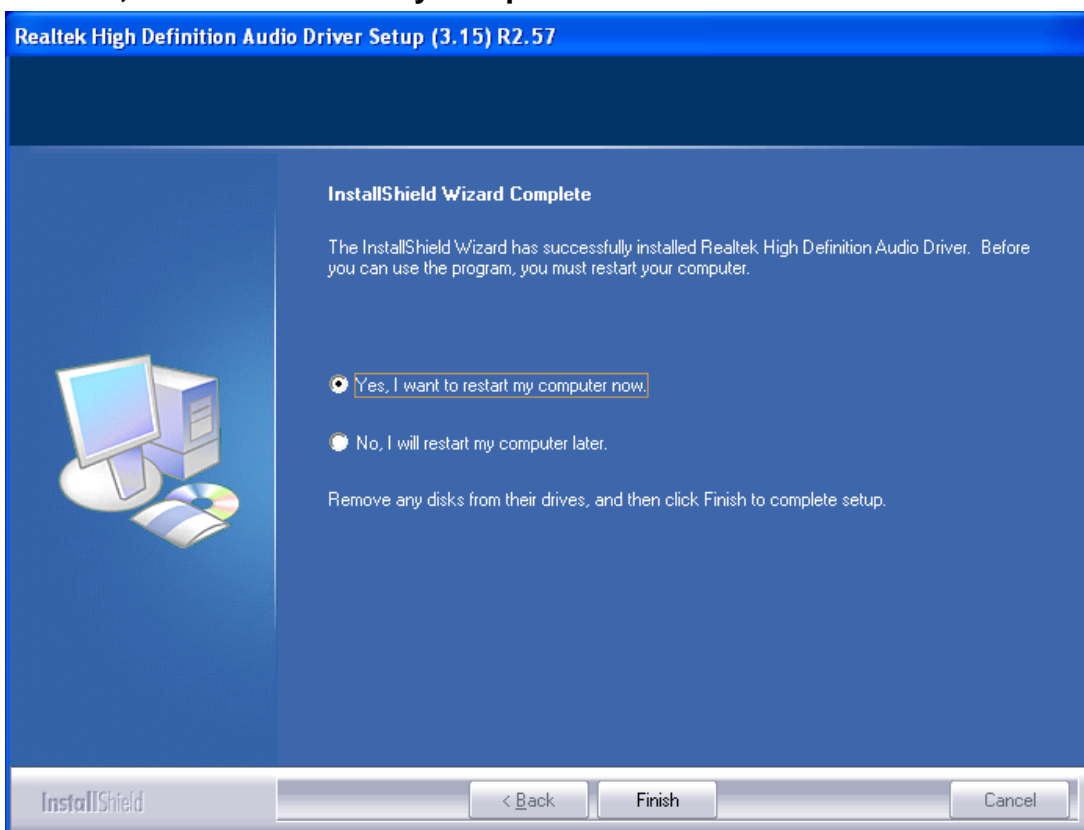


4.5 Microsoft .NET Framework 3.5 Service

To install the Realtek High Definition (HD) Audio driver, please follow the steps below.


Step 1. Select Microsoft .NET Framework 3.5 Service.




Step 2. Select I have read and ACCEPT the terms of the License Agreement. Click Install.

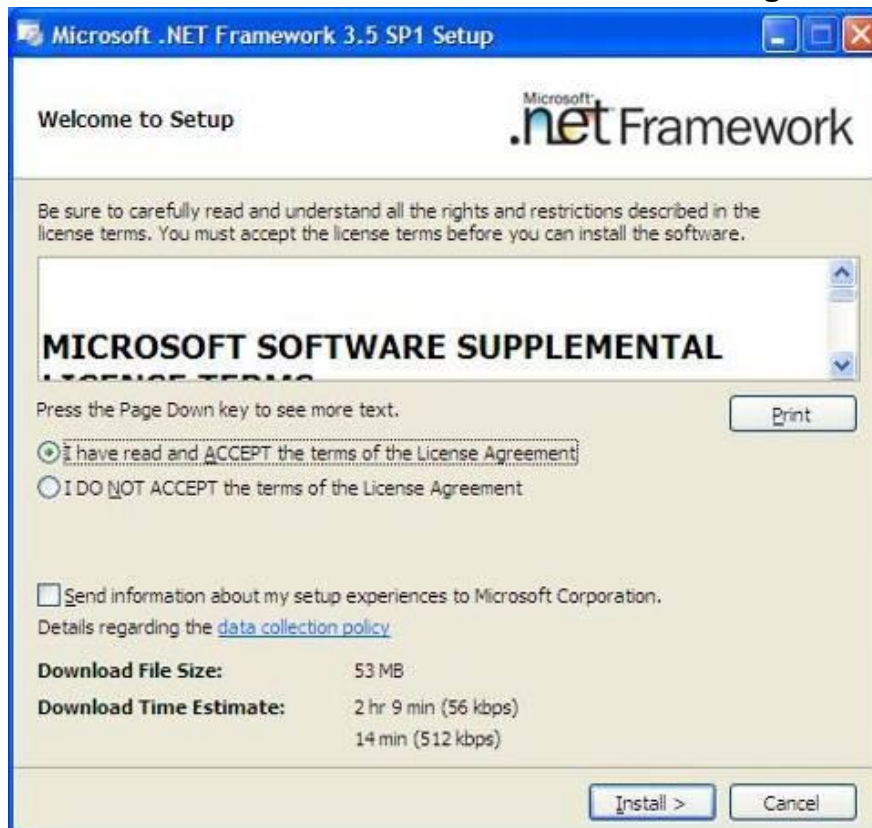

Step 2. Wait for installation.

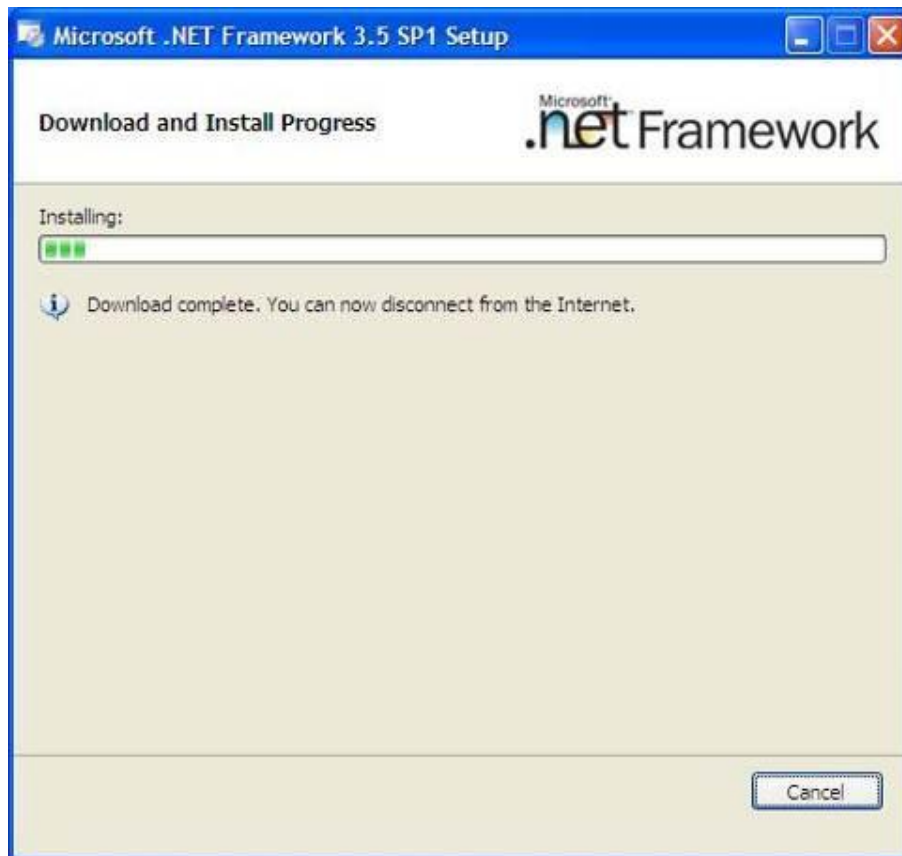

Step 3. Click **Exit** to complete the installation.

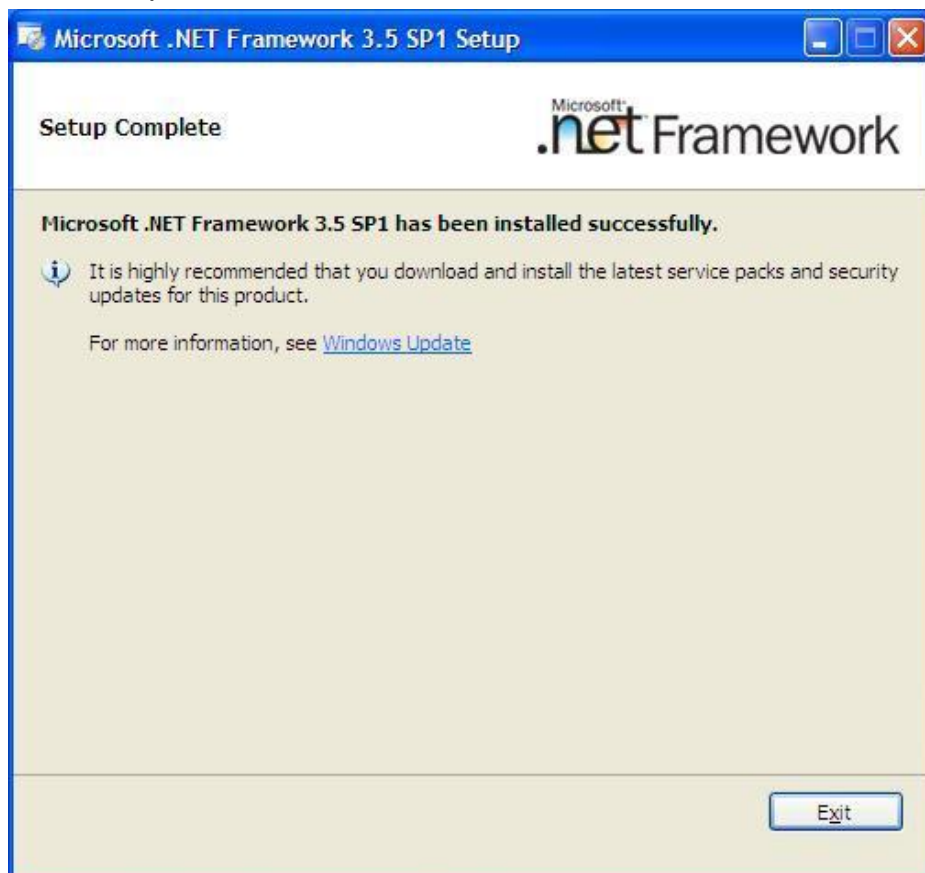

Chapter 5 Touch Screen Installation

This chapter describes how to install drivers and other software that will allow your PenMount 6000 Controller Board to work with different operating systems.

NOTE: PenMount USB drivers support up to 15 USB controllers.

5.1 Introduction to Touch Screen Controller Board

PenMount 6300 USB control board is a touch screen control board designed for USB interface and specific for 4, 5, 8-wire touch screens. It is designed with USB interface features with multiple devices supporting function. PenMount 6300 control board using PenMount 6000 controller that has been designed for those who may like an all-in-one solution with 10-bit A/D converter built-in to make the total printed circuit board denser, circuit diagram also designed for 12-bit ADC for optional. There are two connectors on this board, one connector is for 4, 5, 8-wire touch screen cable (optional), and another is for 4-pin USB A type cable (optional).



Figure 5.1: Bird's Eye View of Control Board

5.2 Windows 2000/XP/2003/Vista Universal Driver Installation for PenMount 6000 Series

Before installing the Windows 2000/XP driver software, you must have the Windows 2000/XP system installed and running on your computer. You must also have one of the following PenMount 6000 series controller or control boards installed: PM6500, PM6300.

5.2.1 Installing Software


If you have an older version of the PenMount Windows 2000/XP driver installed in your system, please remove it first. Follow the steps below to install the PenMount DMC6000 Windows 2000/XP driver.

Step 1. Please make sure your PenMount 6000 device had plugged in advance. If your device uses RS232 interface, please plugged in before the machine is turned on. When the system first detects the controller board, a screen appears that shows “Unknown Device”. Do not use this hardware wizard. Press Cancel.


Step 2. Insert the Aplex product CD install **setup.exe**. the screen below would appear. Se touch panel driver




Step 3. Click **Next** to continue.

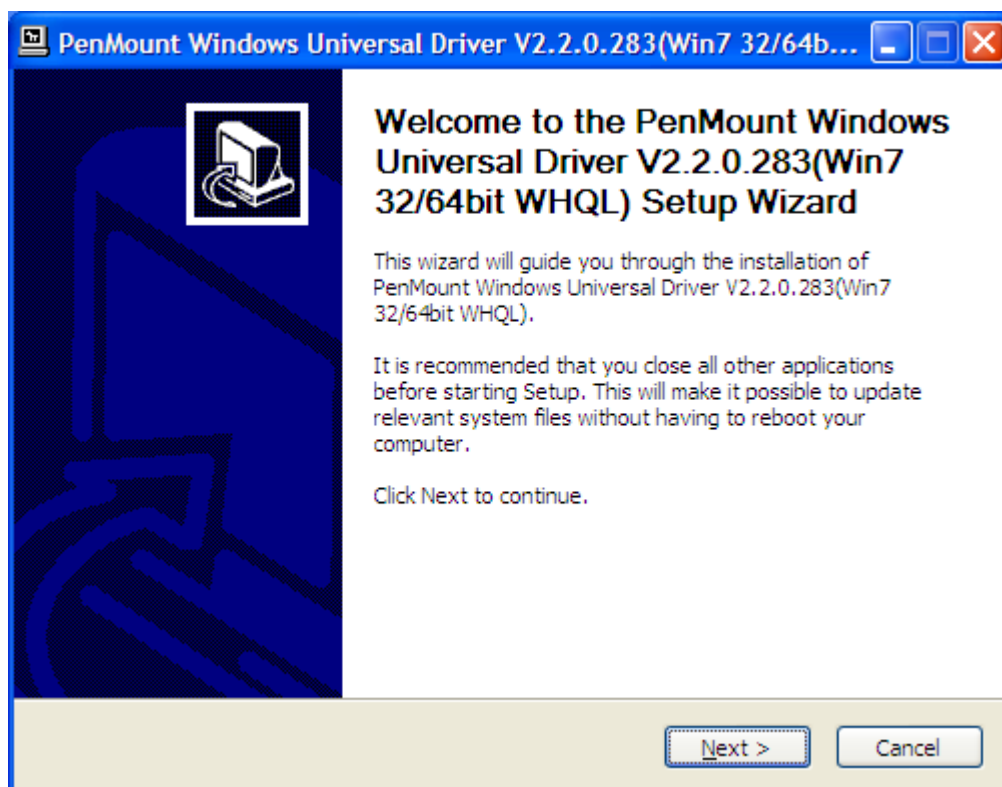


Step 4. Read the license Agreement. Click **I agree** to agree the license agreement.

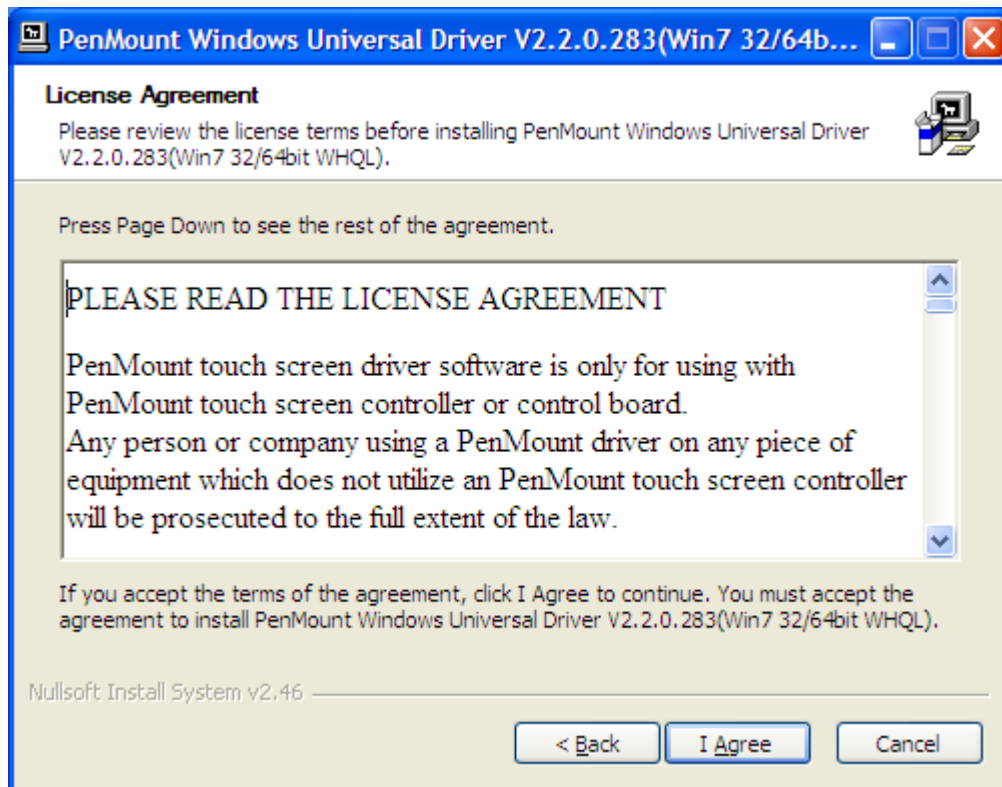


Step 5. Choose the folder in which to install PenMount Windows Universal Driver. Click **Install** to start the installation.

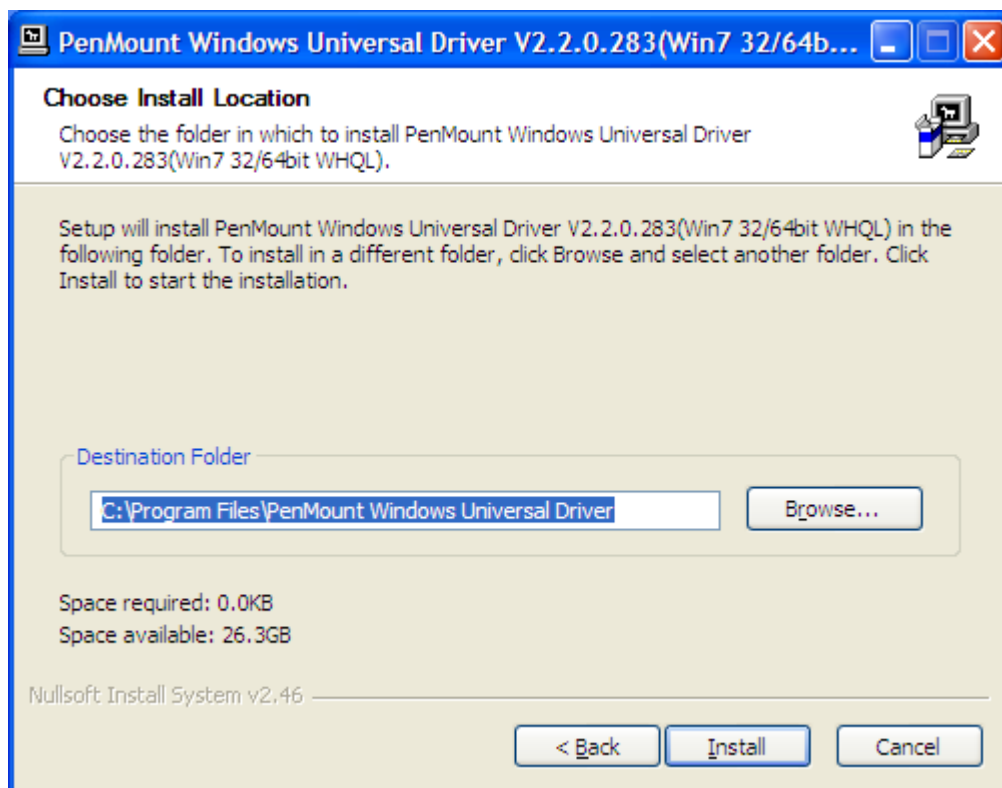


Step 6. Wait for installation. Then click **Next** to continue.

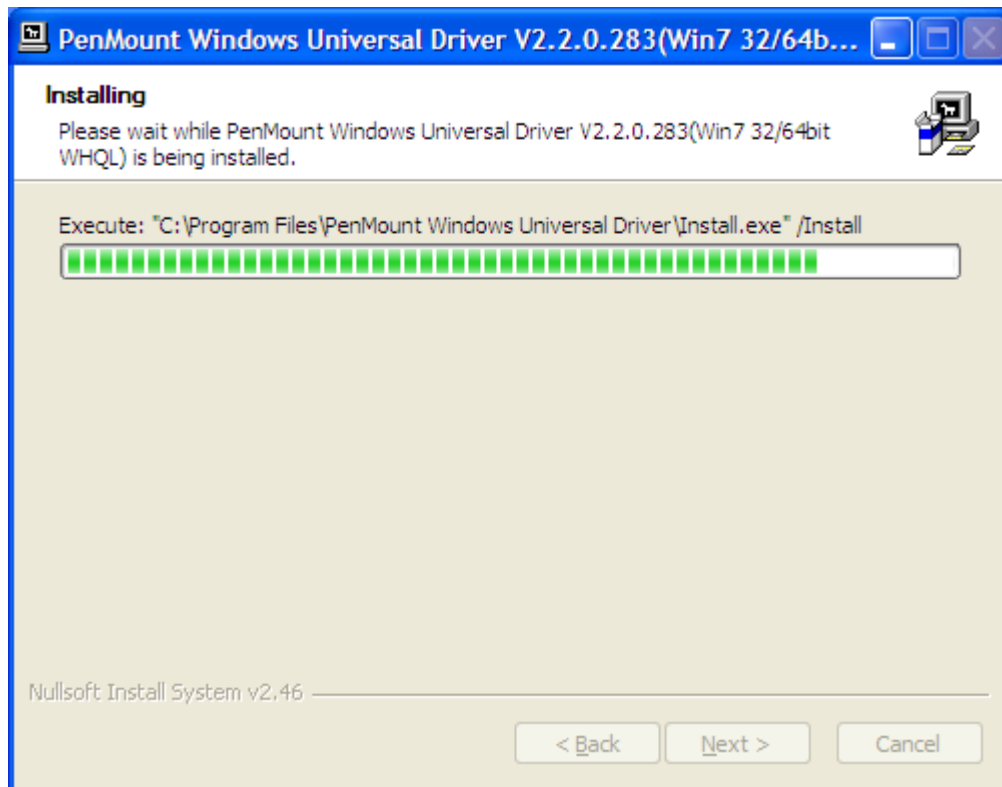

Step 7. Click **OK**.

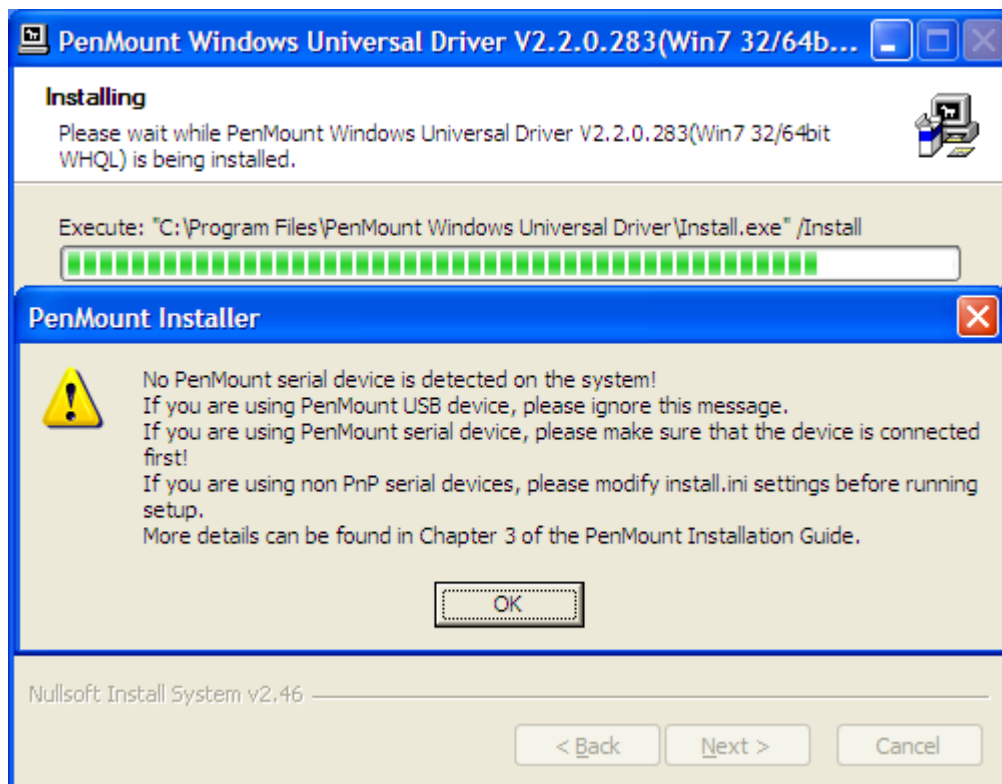

Step 8. Click **Finish** to complete installation.

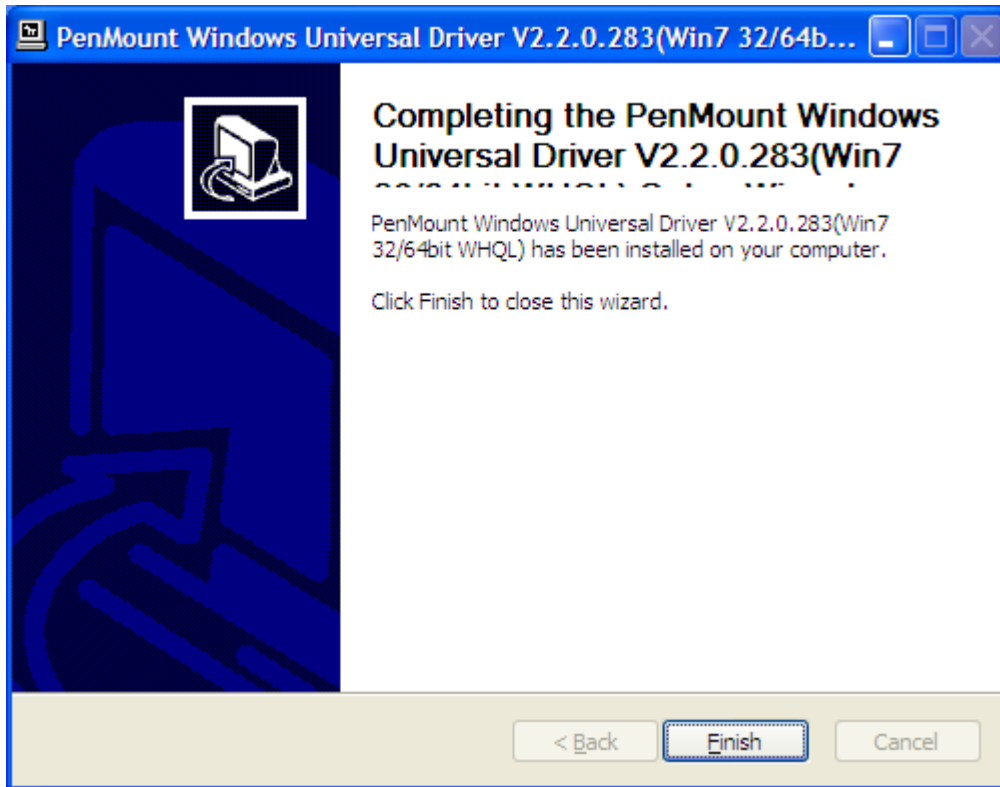

5.2.2 Software Functions

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.


1. After installation, click the PenMount Monitor icon “PM” in the menu bar.
2. When the PenMount Control Panel appears, select a device to “Calibrate.”

PenMount Control Panel

The functions of the PenMount Control Panel are **Device**, **Multiple Monitors**, **Tools** and **About**, which are explained in the following sections.

Device

In this window, you can find out that how many devices are detected on your system.

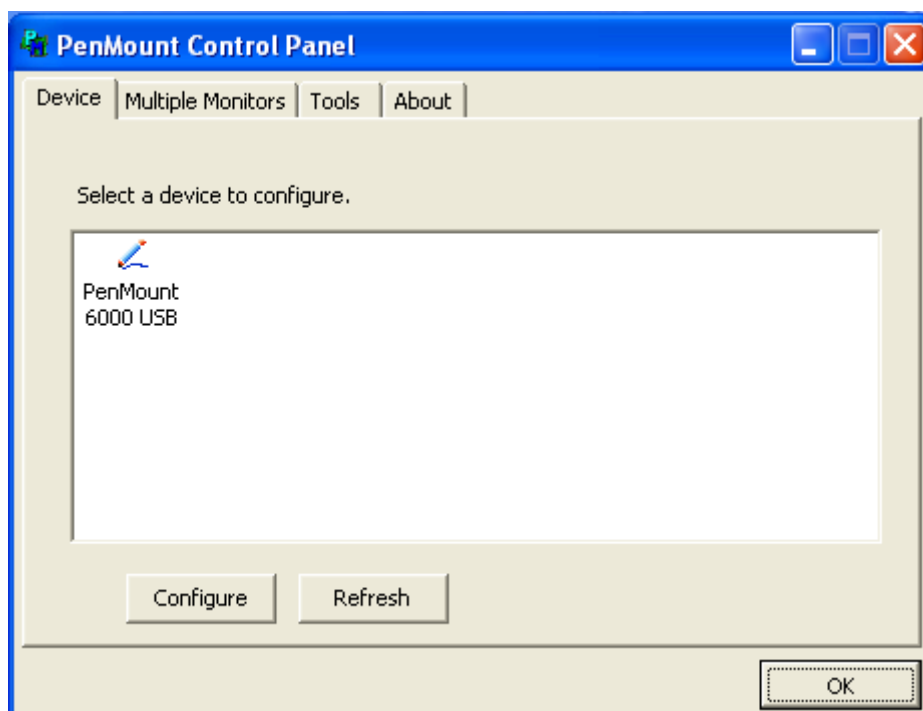


Calibrate

This function offers two ways to calibrate your touch screen. „Standard Calibration“ adjusts most touch screens. „Advanced Calibration“ adjusts aging touch screens.


| | |
|----------------------|--|
| Standard Calibration | Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press ‘ESC’. |
|----------------------|--|

| | |
|----------------------|--|
| Advanced Calibration | Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC'. |
| Command Calibration | Command call calibration function. Use command mode call calibration function, this can uses Standard, 4, 9, 16 or 25 points to calibrate E.g. Please run ms-dos prompt or command prompt c:\Program Files\PenMount Universa Driver\Dmcctrl.exe -calibration 0 (Standard Calibration) Dmcctrl.exe - calibration (\$) 0= Standard Calibration 4=Advanced Calibration 4 9=Advanced Calibration 9 16=Advanced Calibration 16 25=Advanced Calibration 25 |

Step 1. Please select a device then click **Configure**. You can also double click the device too.

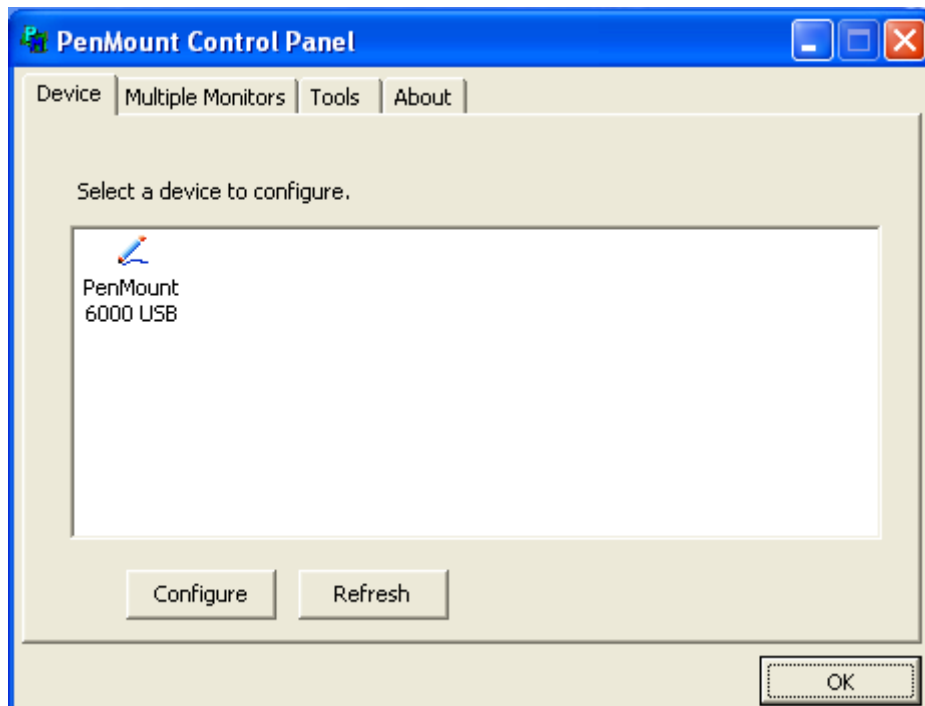


Step 2. Click **Standard Calibration** to start calibration procedure

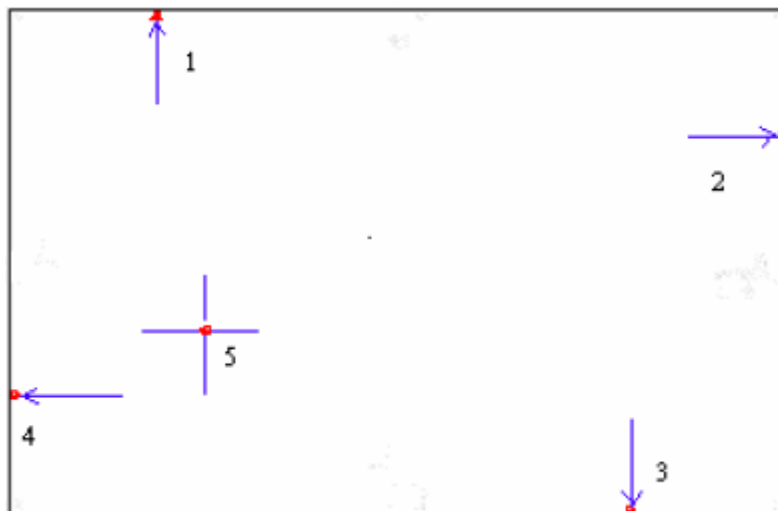

NOTE: The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:

Step 3. Come back to PenMount Control Panel and select **Tools** then Click **Advanced Calibration**.

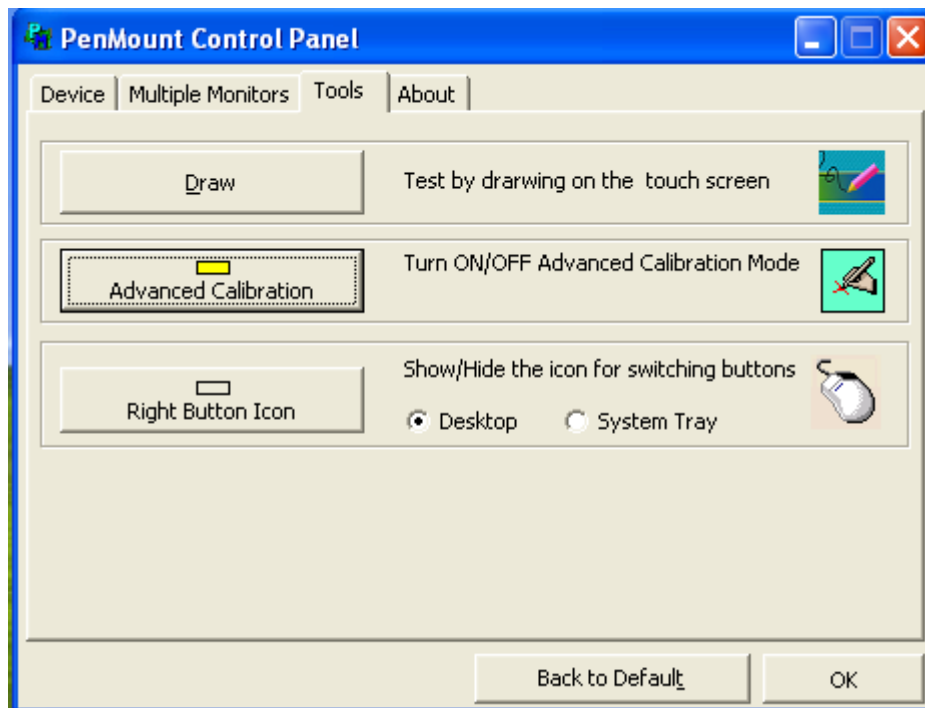

Step 4. Select **Device** to calibrate, then you can start to do “Advanced Calibration”.




NOTE: Recommend to use a stylus during Advanced Calibration for greater accuracy.



| | |
|-------------------------|--|
| Plot Calibration Data | Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration. |
| Turn off EEPROM storage | The function disable for calibration data to write in Controller. The default setting is Enable |


Setting

| | |
|-----------------------------------|---|
| Touch Mode | <p>This mode enables and disables the mouse's ability to drag on-screen icons—useful for configuring POS terminals.</p> <p>Mouse Emulation – Select this mode and the mouse functions as normal and allows dragging of icons.</p> <p>Click on Touch – Select this mode and the mouse only provides a click function, and dragging is disabled</p> |
| Beep Sound | <p>Enable Beep Sound – turns beep function on and off</p> <p>Beep on Pen Down – beep occurs when pen comes down</p> <p>Beep on Pen Up – beep occurs when pen is lifted up</p> <p>Beep on both – beep occurs when comes down and lifted up</p> <p>Beep Frequency – modifies sound frequency</p> <p>Beep Duration – modifies sound duration</p> |
| Cursor Stabilizer | Enable the function support to prevent cursor shake. |
| Use press and hold as right click | You can set the time out and area for you need |

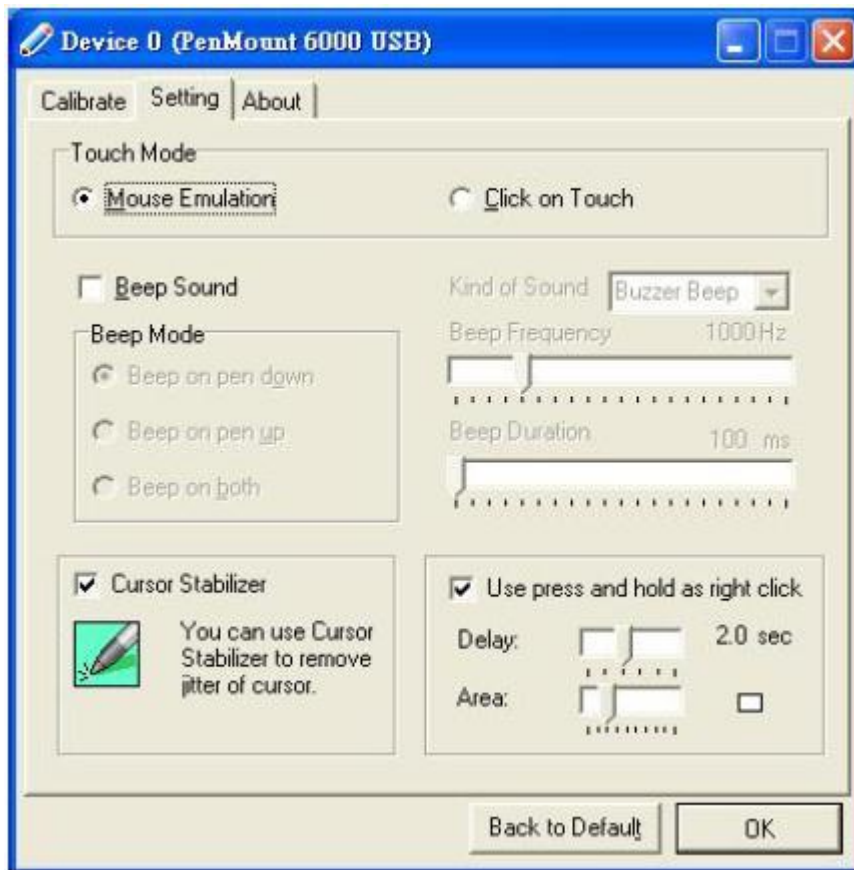

About

This panel displays information about the PenMount controller and driver version.

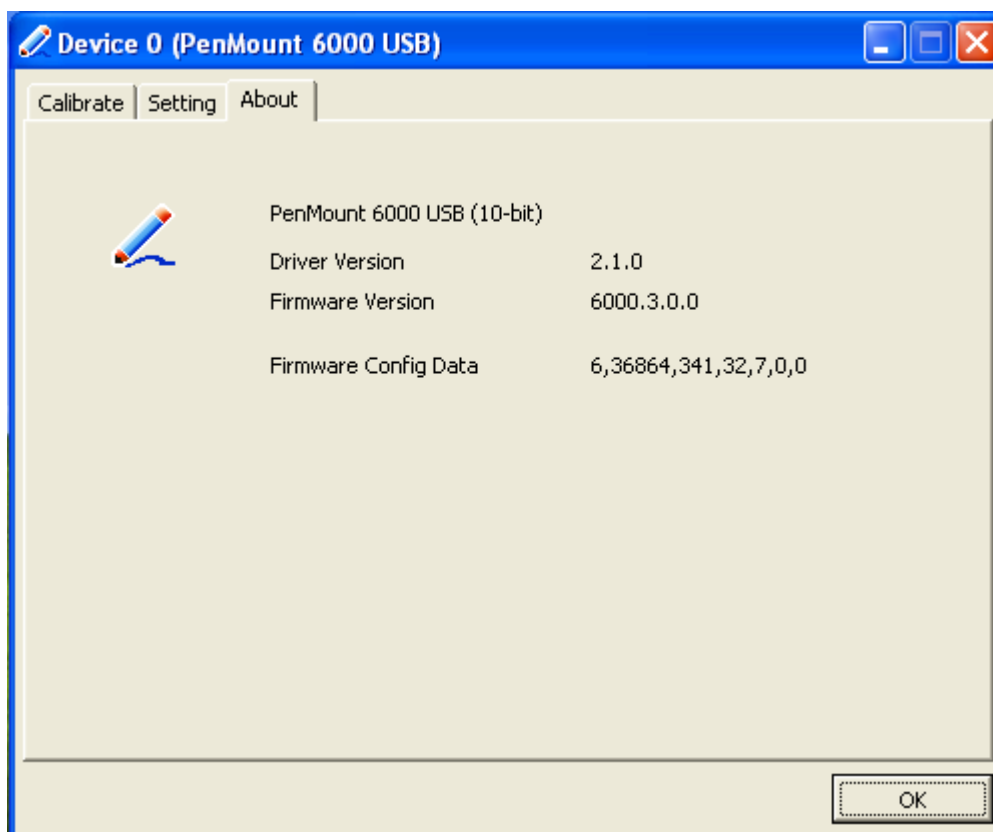

Multiple Monitors

Multiple Monitors supports two to six touchscreen displays for one system. PenMount drivers for Windows 2000, XP 32/64bit, and 2003 support **Multiple Monitors**. This function supports from two to six touchscreen displays for one system. Each monitor requires its own PenMount touchscreen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the RS-232 interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors supports the following modes:

Windows Extends Monitor Function
Matrox DualHead Multi-Screen Function
nVidia nView Function

NOTE: The Multiple Monitor function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the rotating function is disabled.

Requirements

Before using the **Multiple Monitors** function you need the following:


- * A display card that supports multiple monitors such as the Matrox, nVidia, ATI, etc.
- * (Two or more display cards supported by Windows are also ok.)
- * Two or more touchscreens
- * Two or more Serial Ports or USB ports.
- * Two or more PenMount 6000 control boards such as 6200x, 6202x, 6300 or 6500.
- * The PenMount Windows Universal Driver (for 2000/XP/2003/VISTA/7).

Before using **Multiple Monitors** you must have two or more monitors that are in **extension mode**. For display cards that support multiple monitors, we suggest you consider Matrox, nVidia, or ATI cards and inquire about operation and usability issues.


Note: Before you can use multiple monitors you need to map each monitor.

Enable the multiple display function as follows:

Step 1. In PenMount **Control Panel**, under **Multiple Monitors** tag, check the “**Multiple Monitor Support**” box. Then click “**Map Touchscreens**” to assign touch controllers to displays.

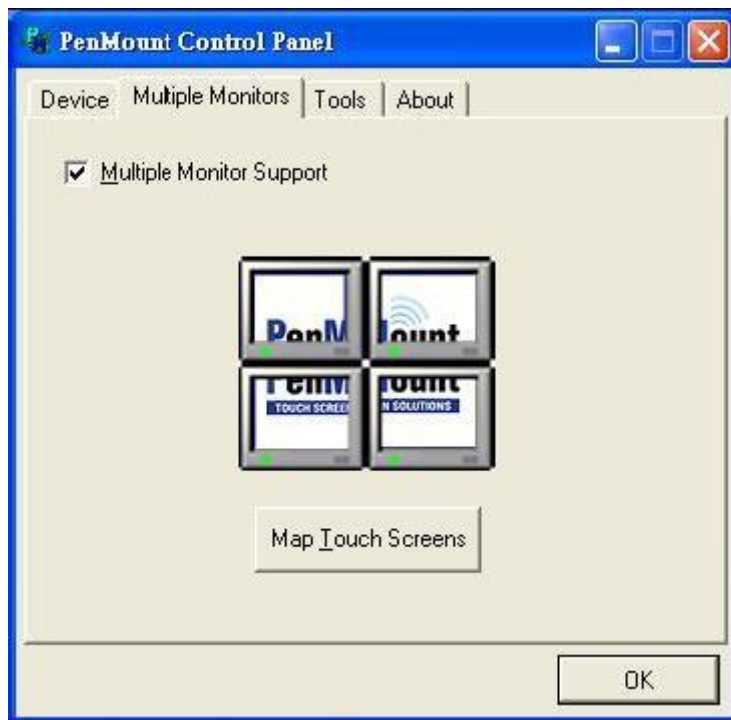

Step 2. When the mapping screen message appears, click **OK**.

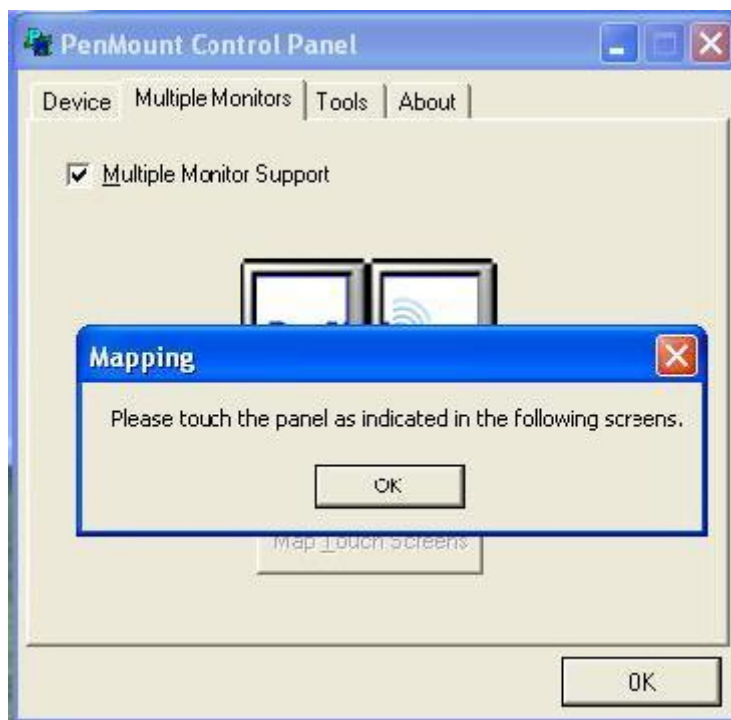

Step 3. Touch each screen as it displays **Please touch this monitor. Press 'S' to skip**
Following this sequence and touching each screen is called **mapping the touch screens**.




Step 4. After the setting procedure is finished, maybe you need to calibrate for each panel and controller.

NOTES:

1. If you used a single VGA output for multiple monitors, please do not use the **Multiple Monitors** function. Just follow the regular procedure for calibration on each of your desktop monitors.
2. The Rotating function is disabled if you use the Multiple Monitors function.
3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens** so the system understands where the displays are.
4. If you more monitor mapping one touch screen, **Please press 'S' to skip mapping step.**


Tools

| | |
|----------------------|--|
| Draw | Tests or demonstrates the PenMount touch screen operation. |
| Advanced Calibration | Enable Advanced Calibration function |
| Right Button Icon | Enable right button function. The icon can show on Desktop or System Tray (menu bar). |

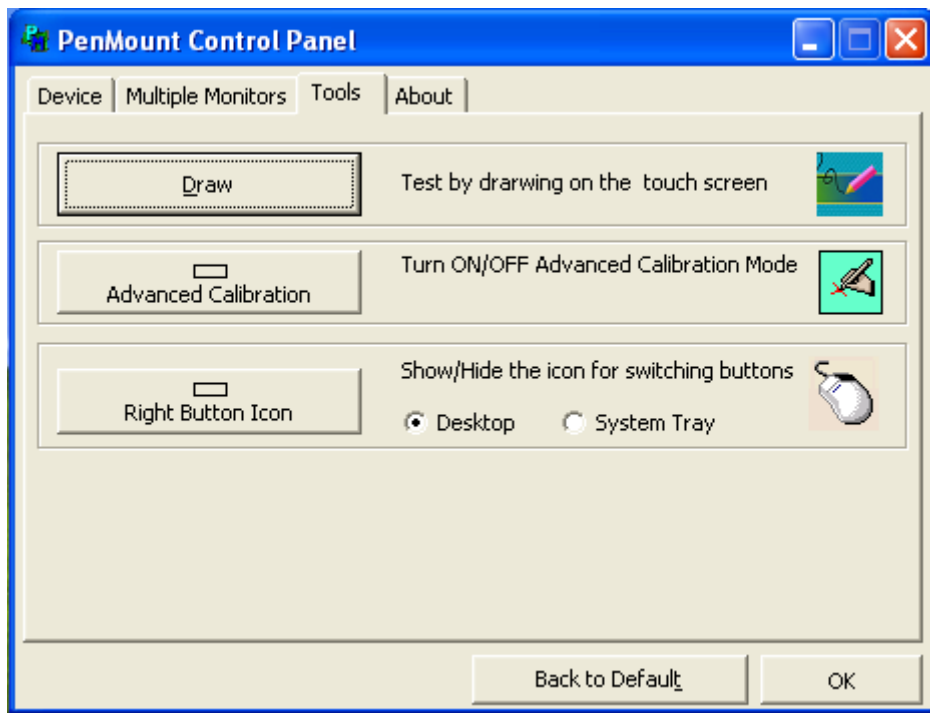

About

You can see how many devices of PenMount controller that are plugged to your system

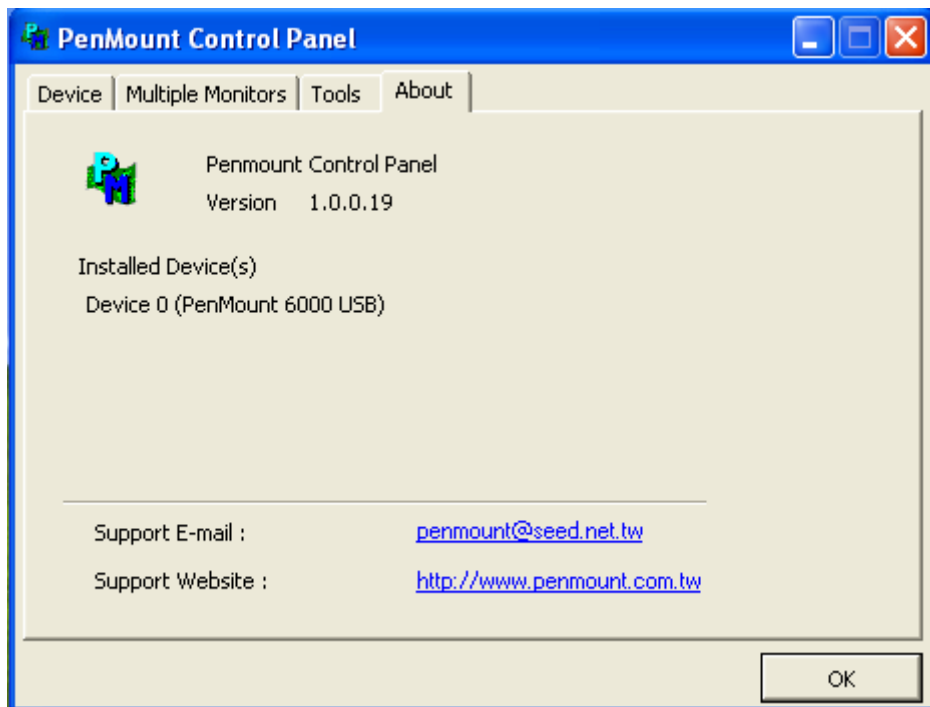


PenMount Monitor Menu Icon

The PenMount monitor icon (PM) appears in the menu bar of Windows 2000/XP system when you turn on PenMount Monitor in PenMount Utilities.



PenMount Monitor has the following function



| | |
|---------------|--|
| Control Panel | Open Control Panel Windows |
| Beep | Setting Beep function for each device |
| Right Button | When you select this function, a mouse icon appears in the right-bottom of the screen.  Click this icon to switch between Right and Left Button functions. |
| Exit | Exits the PenMount Monitor function. |


PenMount Rotating Functions

The PenMount driver for Windows 2000/XP supports several display rotating software packages. Windows Me/2000/XP support display rotating software packages such as:

- Portrait's Pivot Screen Rotation Software
- ATI Display Driver Rotate Function
- nVidia Display Driver Rotate Function
- SMI Display Driver Rotate Function
- Intel 845G/GE Display Driver Rotate Function

Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

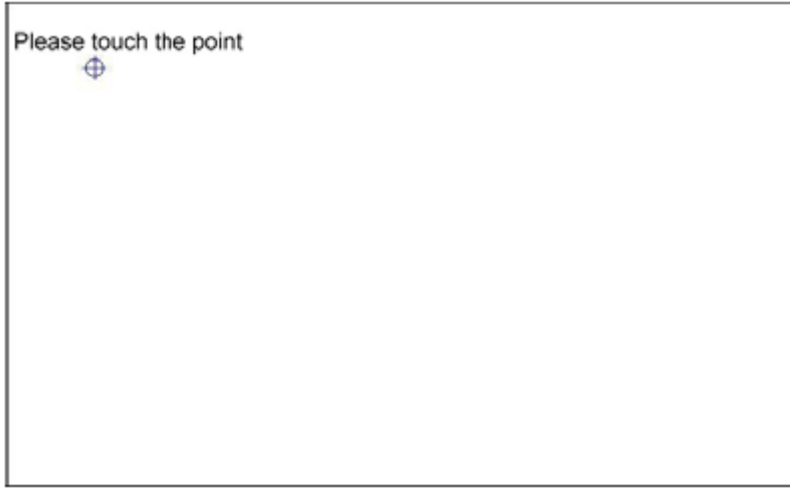

NOTE: The Rotate function is disabled if you use Monitor Mapping